 









ISONPARK ASSEMBLY INSTRUCTION

DINING CHAIR


PARTS LIST							
ITEM	DESCRIPTION		QTY	ITEM	DESCRIPTION		QTY
A		Bolt	8	E		back leg	2
B		washer	8	F		front leg	2
C		lock washer	8	G		chair back attached seat	1
D		Allen Wrench	1				

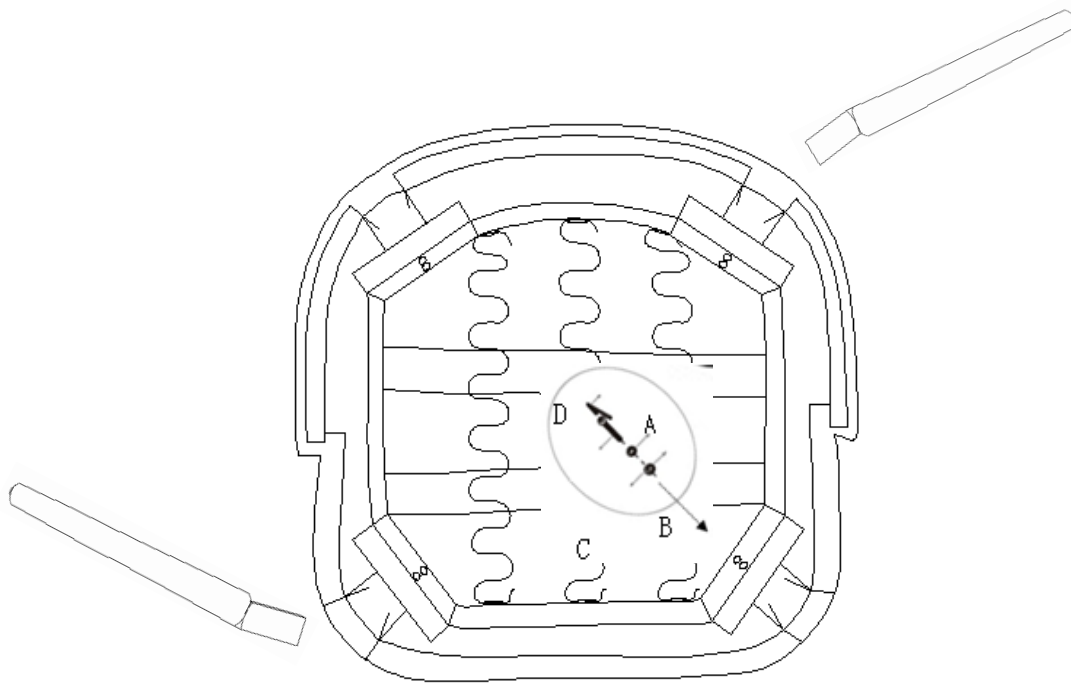

Step 1: Turn the chair upside down and lay on protective carpet, open the black fabric on the bottom and take out the legs and hardware package underneath the seat.

Step 2: Attach front leg (F) to seat frame using bolt (A), washer (B), lock washer (C), Use allen wrench (D) to secure the bolts.

Step 3: Attach back leg (E) to seat frame using bolt (A), washer (B), lock washer (C), Use allen wrench (D) to secure the bolts.

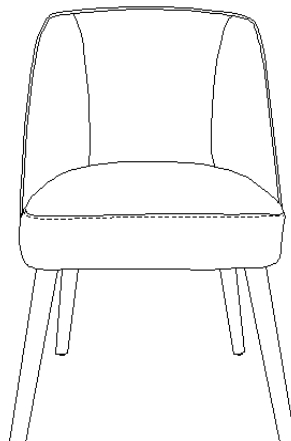

Step 4: Level the chair and place it on a level surface