

ASSEMBLY INSTRUCTIONS

Description: Ultra Dining Chair


 

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






Pre-assembly:


- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Chair Top 	1
P2	Front Legs  (P2)	2
P3	Back Legs  (P3)	2

Hardware List

Item	Description	QTY
H1	Short Bolts Ø5/16"×2" 	4
H2	Long Bolts Ø5/16"×2-1/2" 	4
H3	Lock Washers Ø5/16" 	8
H4	Flat Washers Ø5/16" 	8
H5	Allen Wrench 5/16" 	1

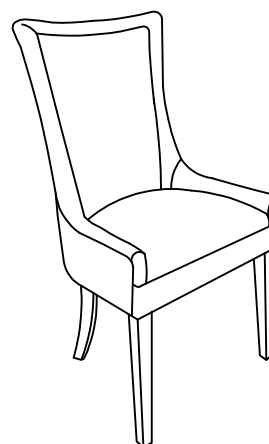

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Turn the chair upside down, take out legs & hardware beneath the fabric cover that is secured by a Velcro strap underneath the seat cushion, then attach the front legs (P2) and back legs (P3) to chair top (P1) as shown below.

- (H1)x4 Short Bolts Ø5/16"×2" 
- (H2)x4 Long Bolts Ø5/16"×2-1/2" 
- (H3)x8 Lock Washers Ø5/16" 
- (H4)x8 Flat Washers Ø5/16" 
- (H5)x1 Allen Wrench 5/16" 

Step 2. Securely tighten all bolts, turn the assembled chair to an upright position. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

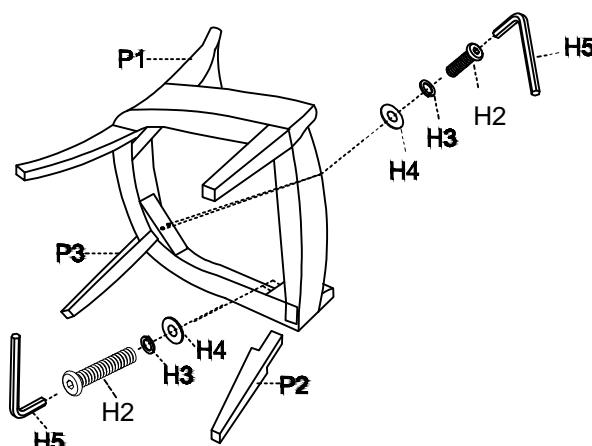

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase