


## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1702-66 DINING TABLE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

 
Key Parts					
No	Code	Qty	Description		
1	1702-66P24	1 pc	Table Top		
2	1702-66P02	4 pes	Table Leg		
3	1702P01F	4 pcs	Floor Glide		
4	1702-66P13	2 pes	Extension Mechanism		
5	1702P13L	4 pcs	Extension Lock		
6	1702-66P26	4 pes	Corner Block		
7	1702-66P01A	4 pes	Apron Spacer		

Hardware kit 1702-66P01				
No	Description		Q'Ty	
A	₩	Hexa Nut Ø8	8 pcs	
В	0	Lock Washer Ø8.5	8 pcs	
C	0	Flat Washer Ø8.5	8 pcs	
D	-3	Key Wrench	1 pc	

## DETAIL A

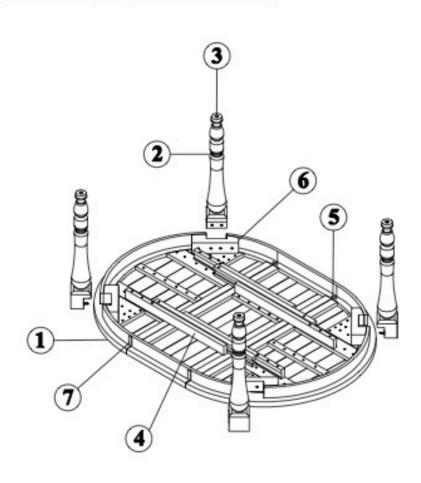

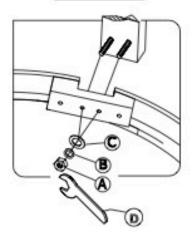



## STEP 1

- Carefully lay Table Top upside down on a smooth flat surface to prevent scratches.
- Attach each Leg to each corner of the Table Top as shown in illustration. Insert a Flat Washer, Lock Washer and Bolt on to the insert nut of each Leg
- Once all Legs are in place, fully tighten nuts by turning clockwise using provided Key Wrench until secure.
   (See Detail A)