


# LIVING SPACES

August, 2021

---

## **AME26-E17 / AME26-L32** **OFFICE CHAIR**



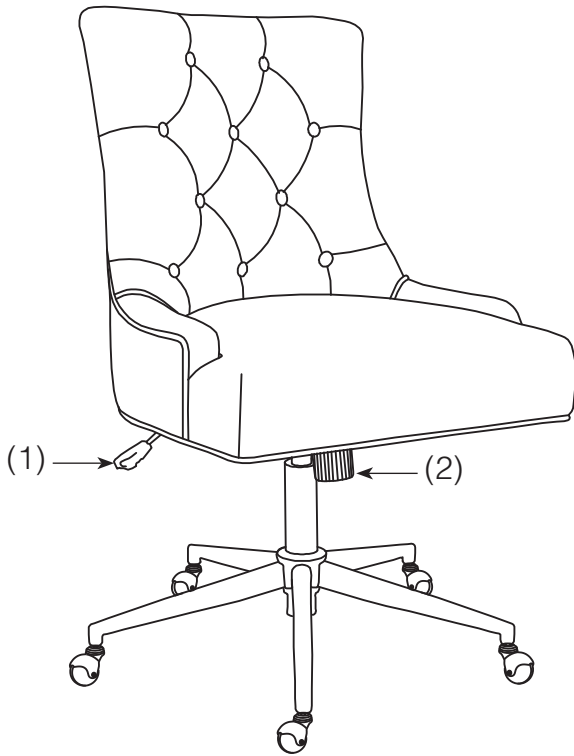

## FEATURES

- **PNEUMATIC SEAT HEIGHT ADJUSTMENT**

To raise seat remove pressure from seat and pull lever (1) up.

To lower seat height sit on chair and pull lever (1) up.

**NOTE:** It is normal for chair to slightly lower under body weight.

- **LOCKING TILT ADJUSTMENT**


For individual comfort, this chair has been equipped with an adjustment that will allow the user to change the tension of the tilting feature.

Turn knob (2) clockwise to increase tension and counter-clockwise to decrease or ease the tension. To lock, return chair to the upright position and push lever (1) in. To unlock, pull lever (1) out.


**NOTE:** Be careful not to loosen back tilt adjustment knob completely.

1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**

# PARTS

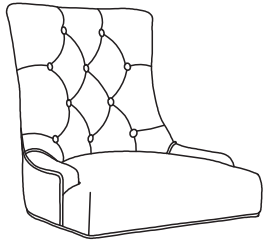


(A) Chair Body (1 PC)

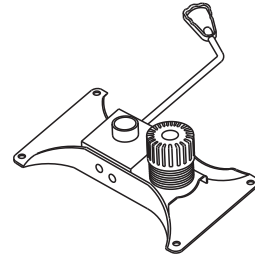


(B) Seat Plate (1 PC)



(C) Pneumatic Cylinder (1 PC)

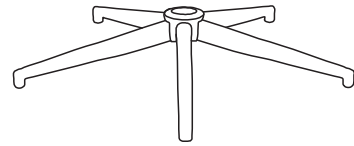


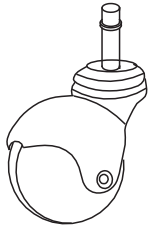


(D) Base (1 PC)




 (E) Casters (5 PCS)

## HARDWARE LIST


| NO | DRAWING   | DESCRIPTION  | QUANTITY |
|----|---|--------------|----------|
| 1  |  | Bolt         | 4 PCS    |
| 2  |  | Lock Washer  | 4 PCS    |
| 3  |  | Flat Washer  | 4 PCS    |
| 4  |  | Allen Wrench | 1 PC     |

## STEP 1

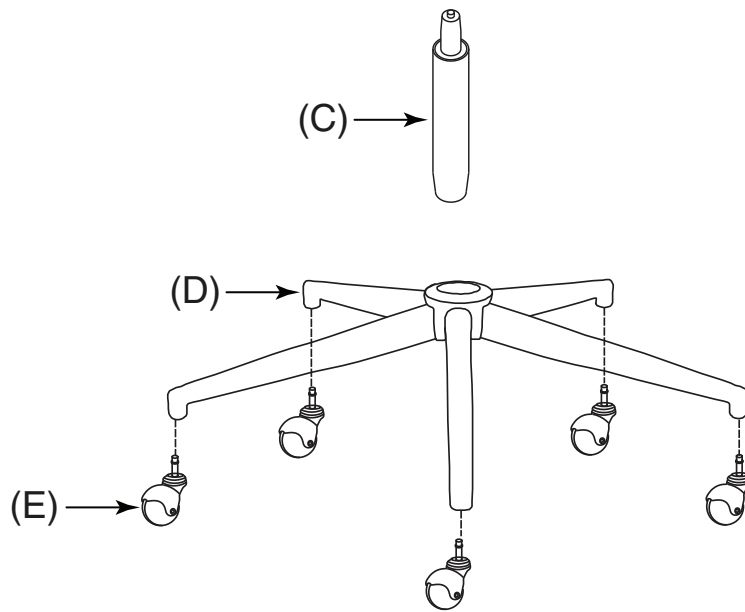

**PUSH HARD UNTIL YOU FEEL OR HEAR THE CASTERS (E) SNAP INTO PLACE.**

## STEP 2

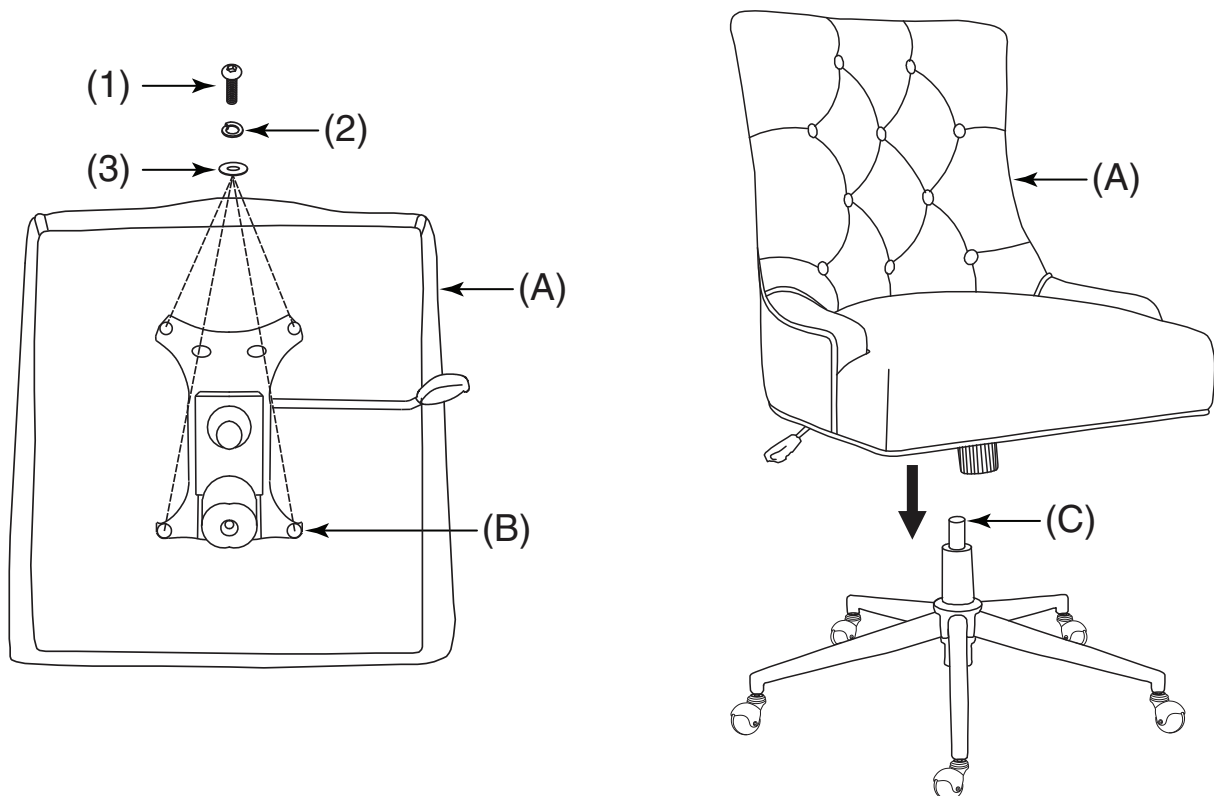

**FULLY TIGHTEN BOLTS (1).  
PLACE THE ASSEMBLED SEAT ON TOP OF PNEUMATIC CYLINDER (C) AND APPLY DOWNWARD PRESSURE.**