




 

 
 
 
 



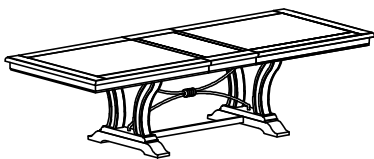 










A	PD5506-21TP		x1
B	PD5506-21TL		x1
C	PD5506-21LG		x2
D	PD5506-21SR1		x1
E	PD5506-21SR2		x1
F	PD5506-21MB		x1
1	PD5506-21HD	 BOLT (5/16" x 75 mm)	x2
2	PD5506-21HD	 BOLT (1/4" x 40 mm)	x18
3	PD5506-21HD	 BOLT (1/4" x 20 mm)	x4
4	PD5506-21HD	 SCREW (4 x 50 mm)	x2
5	PD5506-21HD	 LOCK WASHER (5/16" x 13 mm)	x24
6	PD5506-21HD	 FLAT WASHER (5/16" x 19 mm)	x24
7	PD5506-21HD	 ALLEN KEY (4 mm)	x1

TOOLS REQUIRED (NOT PROVIDED):
PHILLIPS SCREW DRIVER 

ELLIE



        286127 / D5506-21
 WOOD TRESTLE DINING TABLE

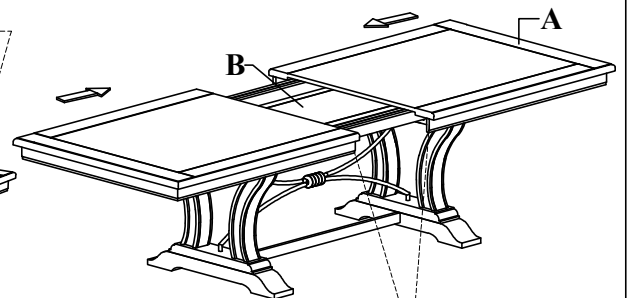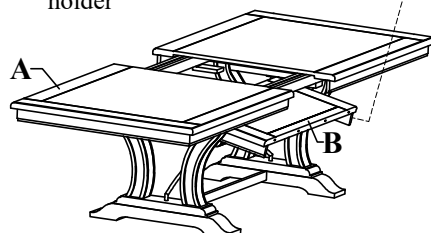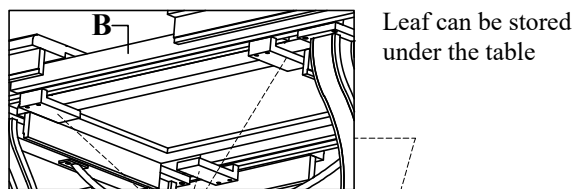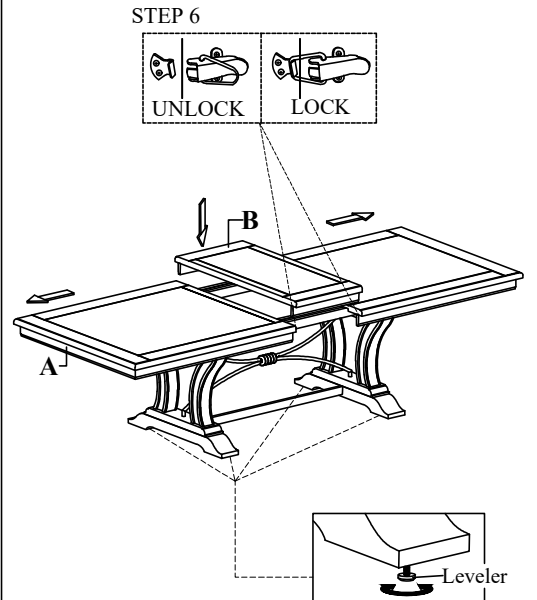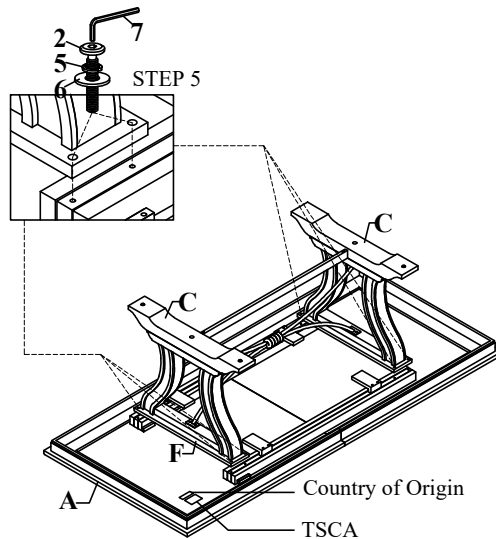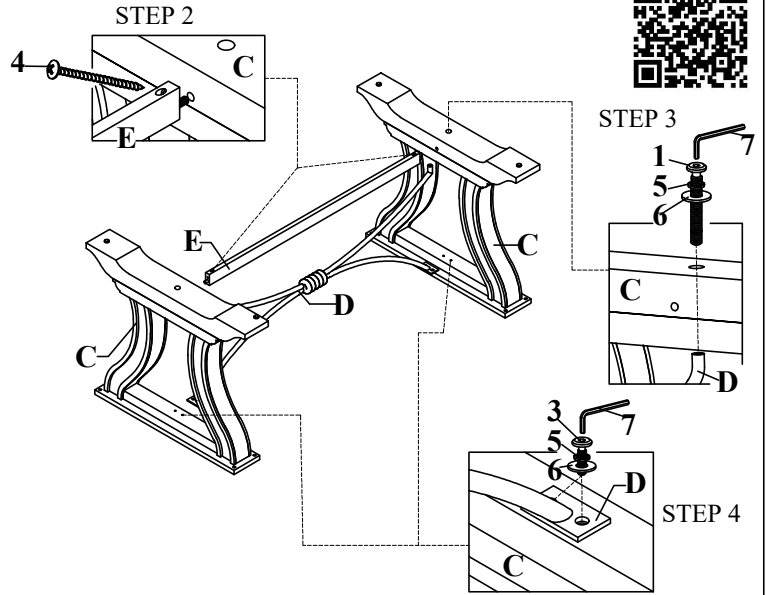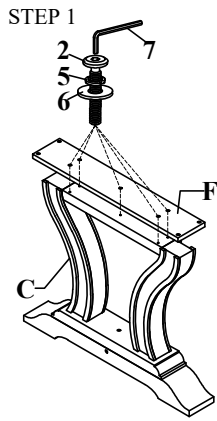

WARNING:
 ONLY USE THE HAND
 TOOLS PROVIDED