

705168

COFFEE TABLE

ASSEMBLY INSTRUCTION COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

ASSEMBLY TIME PER UNIT: 30 MINUTES

PARTS IDENTIFICATION:

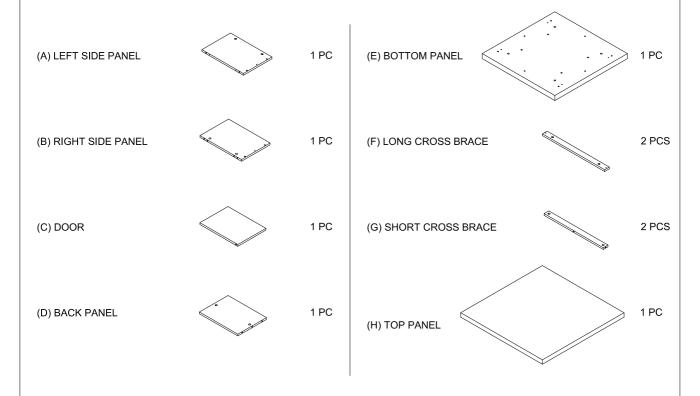

Z	HARDWARE PACKAGE											
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY					
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm		14 PCS					
2	WOODEN DOWEL Ø8x30mm		20 PCS	5	BOLT Ø9.5x55mm		4 PCS					
3	CAM BOLT Ø7x35.5mm		14 PCS	6	SINGLE MAGNETIC CATCH		1 PC					



Z	HARDWARE PACKAGE										
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY				
7	FLEXIBLE DOOR DAMPER	5	1 PC	10	CASTER		4 PCS				
8	FIXED DOOR DAMPER		1 PC	11	STICKER Ø20mm		3 PCS				
9	SCREW FOR DOOR	4	1 PC								

Z10 not included in blister packaging.

