



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



110262
DINING CHAIR

ITEM: 110262



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

5 MINUTES

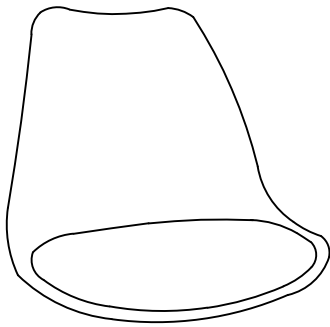

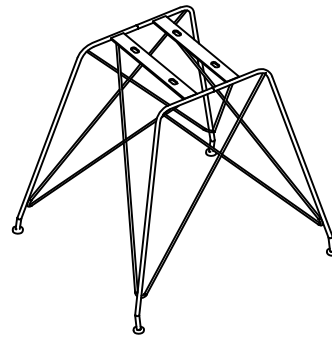


A SEAT AND BACK 1PC



B BASE 1PC

HARDWARE IDENTIFICATION



Z	HARDWARE NAME	FIGURE	QTY
1	BOLT	 M6*16	4PCS
2	FLAT WASHER	 $\phi 6 * \phi 18$	4PCS
3	ALLEN WRENCH	 M5	1PC

ITEM: 110262

ASSEMBLY INSTRUCTIONS




STEP 1

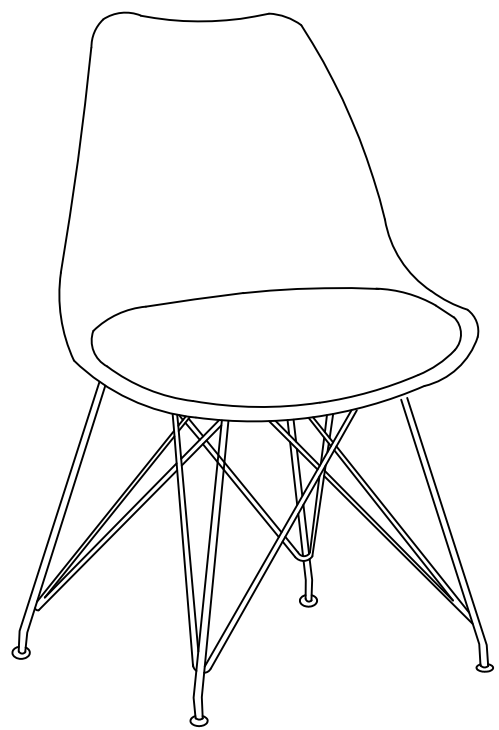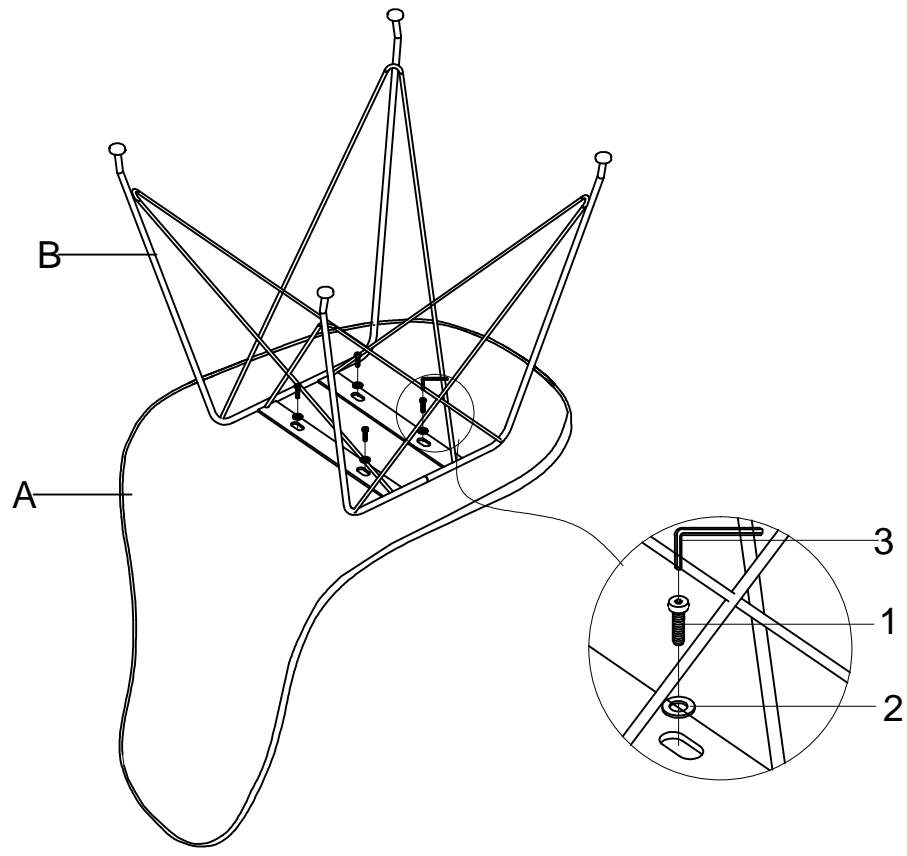

COASTERFURNITURE.COM

ITEM: 110262

ASSEMBLY INSTRUCTIONS

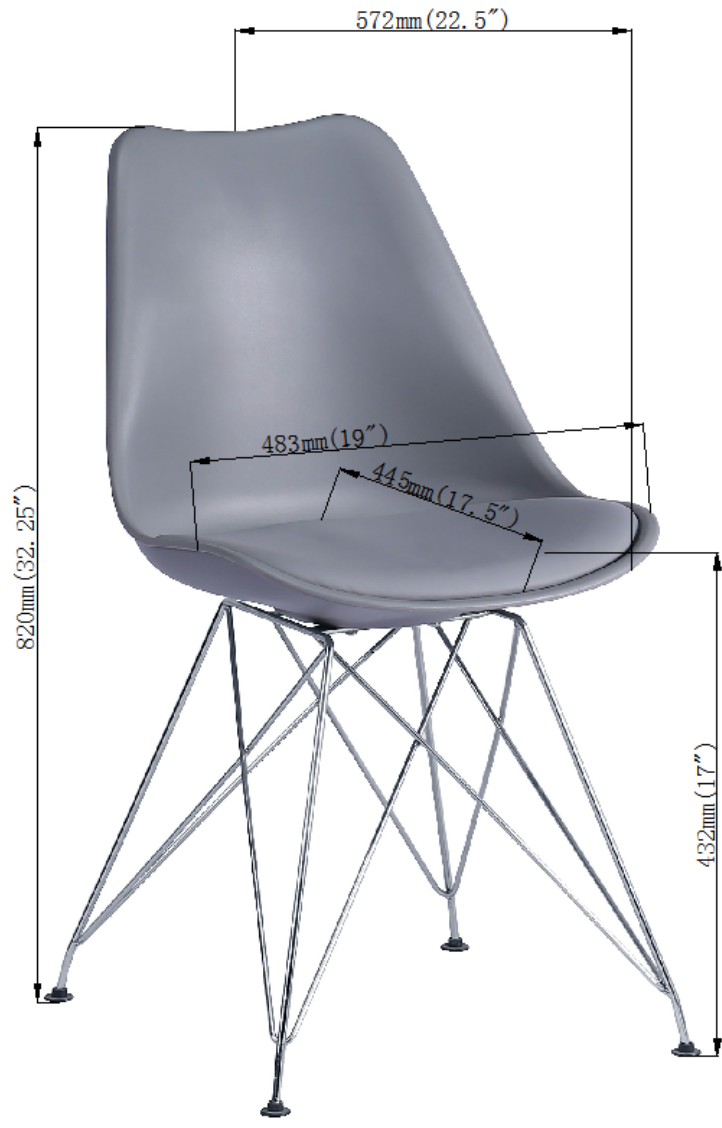

COASTERFURNITURE.COM