


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

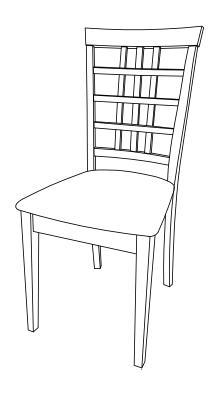

Fine Furniture for every stage of life

190822 *Dining Side Chair*

REVISION 0: 05/30/2018 REVISION 1: 12/23/2020

PAGE 1 OF 4

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME	1PC
В	FRONT LEG FRAME	1PC
С	SIDE RAIL	2PCS
D	SEAT CUSHION	1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110MM - BLK)		1PC
2	BOLT (M6 x 50MM - RBW)		6PCS
3	LOCK WASHER (1/4" - BLK)		6PCS
4	FLAT WASHER (M6 x 13MM - RBW)		6PCS
5	PAN HEAD SCREW	<i>←шшш</i> (()	4PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer not provide this item.


Quantities shown are for one chair.

COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS



STEP 1

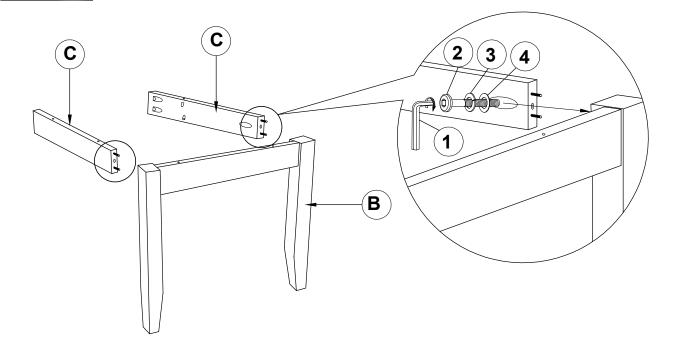


STEP 2

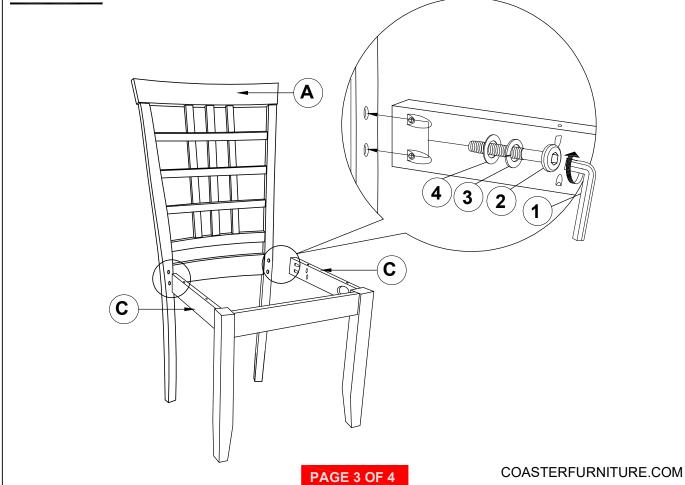


ASSEMBLY INSTRUCTIONS

STEP 3



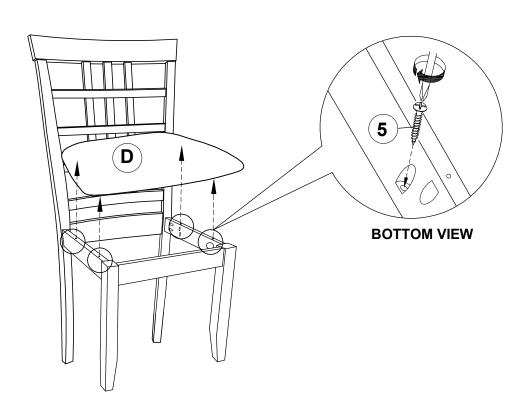


STEP 4 COMPLETE

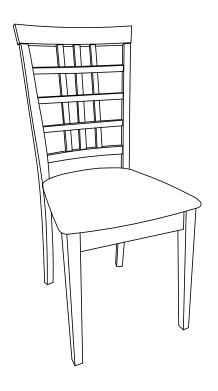



PAGE 4 OF 4



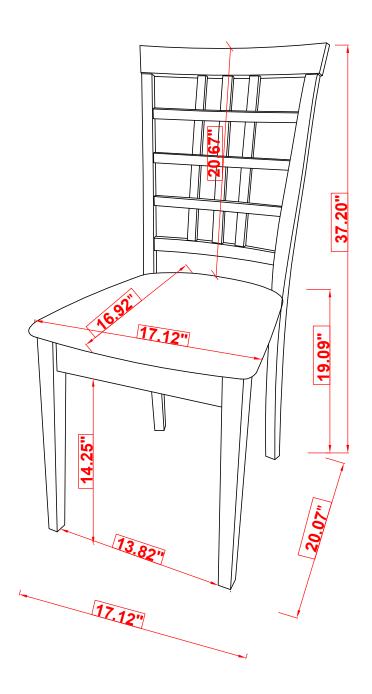

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM