

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

105352 Dining Side Chair

REVISION 0: 06/04/2014 REVISION 1: 03/10/2016 REVISION 2: 11/13/2020

ASSEMBLY INSTRUCTIONS

COASTER

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A RIGHT LEG FRAME

1PC D SHORT RAIL

1PC E SEAT CUSHION

1PC C LONG RAIL

1PC F BACKREST

1PC

1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110MM - BLK)	***	1PC	5	FLAT WASHER (M6 X 13MM - RBW)		6PCS
2	LONG BOLT (M6 x 50MM - RBW)		4PCS	6	PAN HEAD SCREW (#8 x 1 1/4" - BLK)	()	4PCS
3	SHORT BOLT (M6 x 35MM - RBW)		2PCS	7	WOOD DOWEL (M10 x 30MM)		2PCS
4	LOCK WASHER (1/4" - BLK)		6PCS	8	WOOD PLUG (Ø14.5 X 9MM)		2PCS


NOTE:

Phillips head screw driver is required in the assembly process; However, manufacturer not provide this item. Quantities shown are for one chair.


ITEM: 105352 ASSEMBLY INSTRUCTIONS



STEP 1

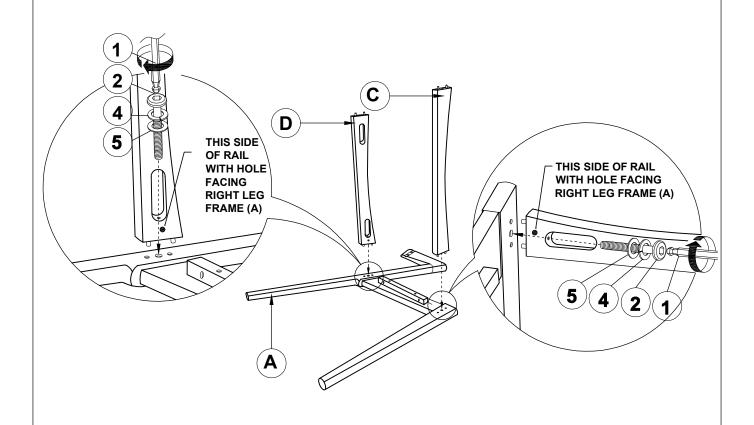


STEP 2

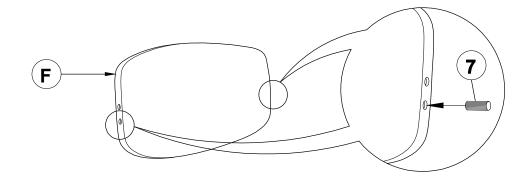


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

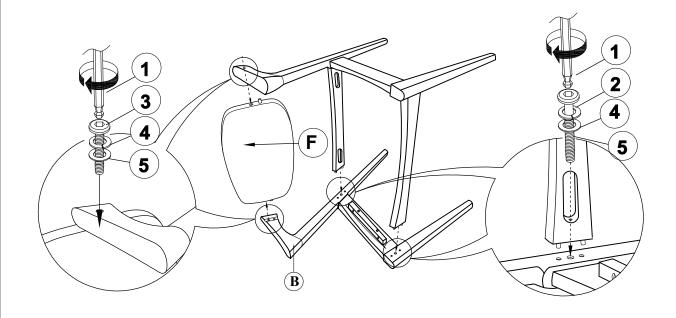

STEP 4

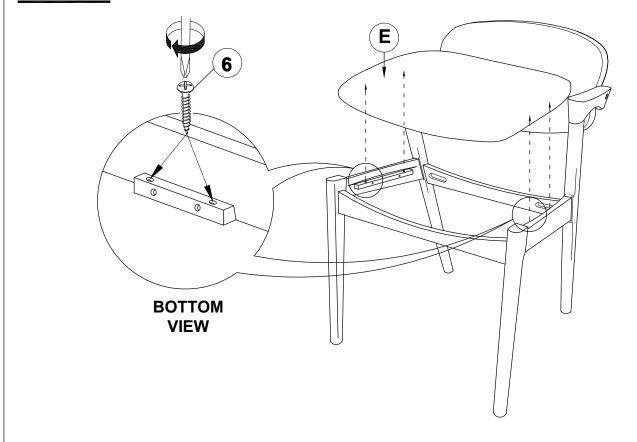


PAGE 4 OF 5

COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS



STEP 5

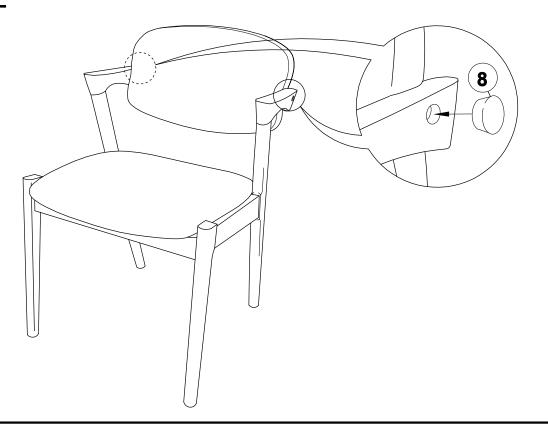


STEP 6 COMPLETE

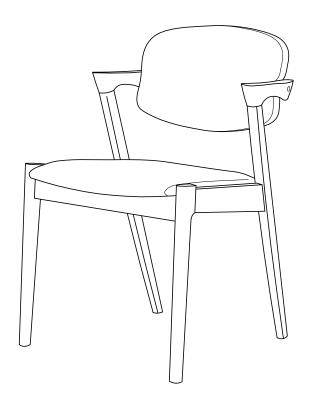





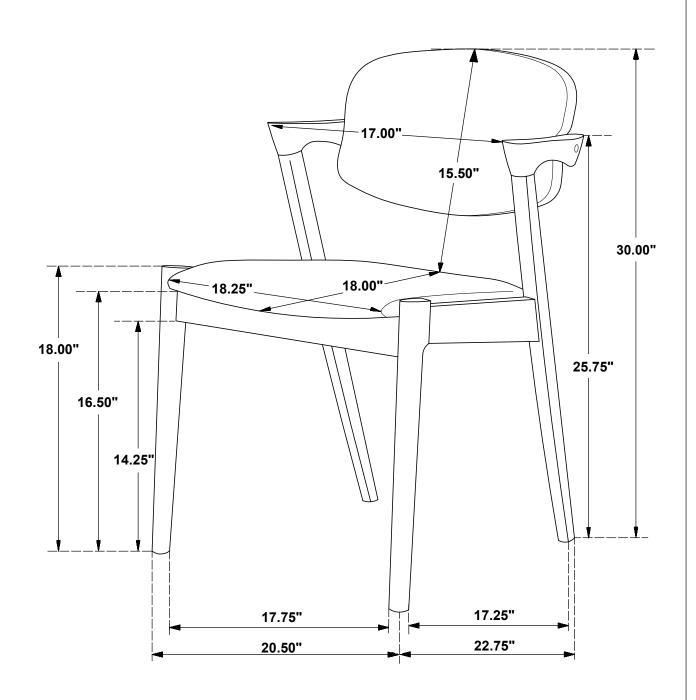

Note: Dimension tolerence ± 5%