


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

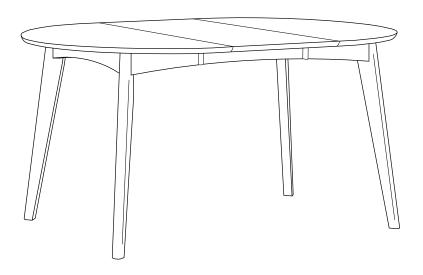

Fine Furniture for every stage of life

105361 <u>Dining Table</u>

REVISION 0: 05/26/2014 REVISION 1: 02/20/2020

PAGE 1 OF 5

ITEM: 105361

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	ТОР		1PC
В	LEG		4PCS
С	LEAF		1PC
D	APRON		2PCS
HARDWARE IDENTIFICATION			
1	WRENCH (12.8mm - RBW)	5	1PC
2	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
3	HEX BOLT (M8 x 60mm - SILVER)		8PCS
4	LOCK WASHER (5/16" - RBW)		8PCS
5	FLAT WASHER (5/16" - RBW)		8PCS
6	BOLT (M6 x 50mm - RBW)		4PCS


ITEM: 105361

ASSEMBLY INSTRUCTIONS




STEP 1

ATTENTION: REMOVE ALL SCREW AND SMALL LEG.

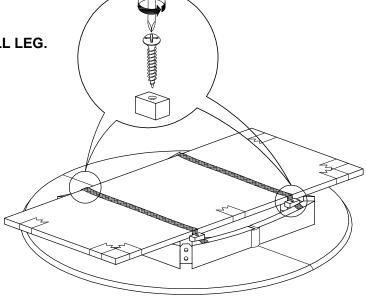

STEP 2

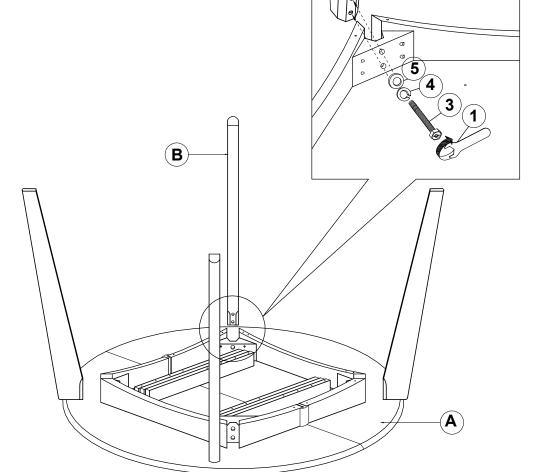


PAGE 3 OF 5

ITEM: 105361 ASSEMBLY INSTRUCTIONS



STEP 3

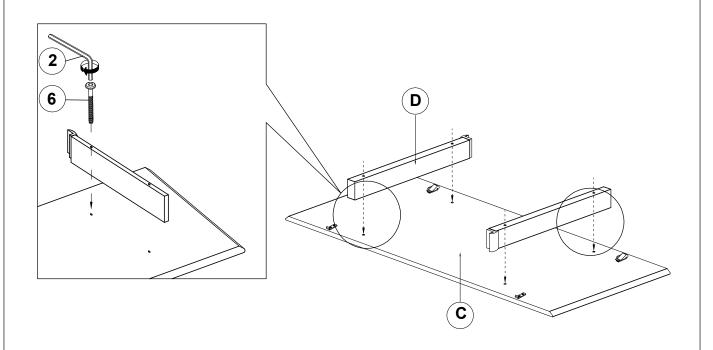


STEP 4



ITEM: 105361 **ASSEMBLY INSTRUCTIONS**





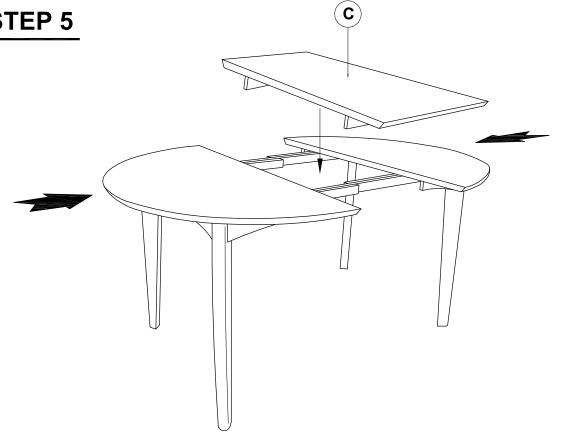


STEP 6 **COMPLETE**





ITEM: 105361



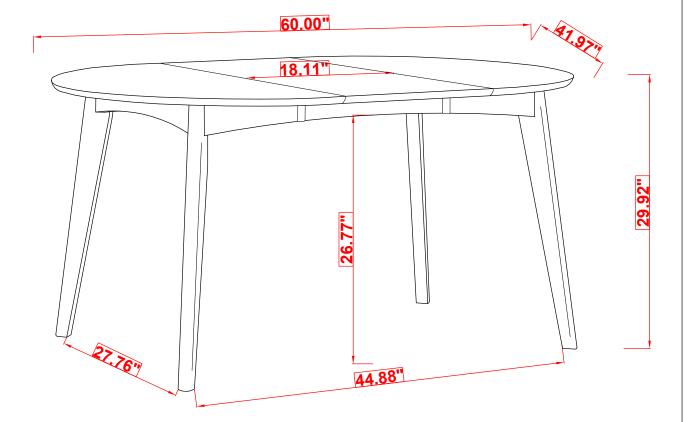

Note: Dimension tolerance ±5%