


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

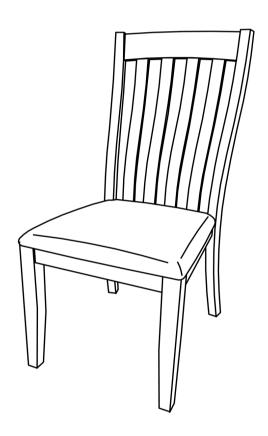

Fine Furniture for every stage of life

109812 *Dining Side Chair*

REVISION 0 : 11/05/2019 REVISION 1 : 05/24/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME	1PC
BF	SEAT CUSHION	1PC
С	SEAT FRAME	1PC
D	FRONT LEG	2PCS

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 - BLK)	1PC
2	SHORT BOLT (M6 x 40mm - RBW)	2PCS
3	MEDIUM BOLT (M6 x 60mm - RBW)	4PCS
4	LONG BOLT (M6 x 70mm - RBW)	4PCS
5	LOCK WASHER (M6 - RBW)	10PCS
6	FLAT WASHER (M6 - RBW)	10PCS
7	FLAT HEAD SCREW (M4 x 25mm - RBW)	5PCS


NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ASSEMBLY INSTRUCTIONS STEP 1

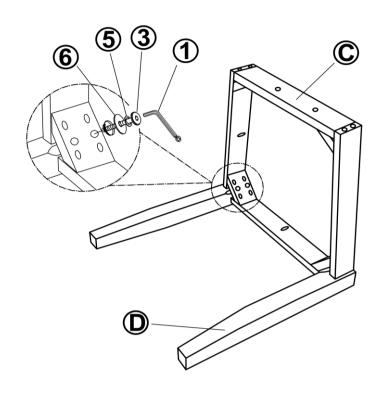

STEP 2

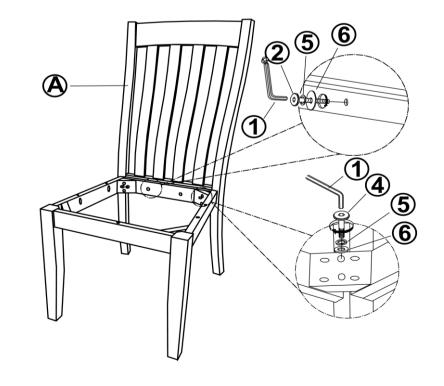


PAGE 3 OF 4


COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS STEP 3

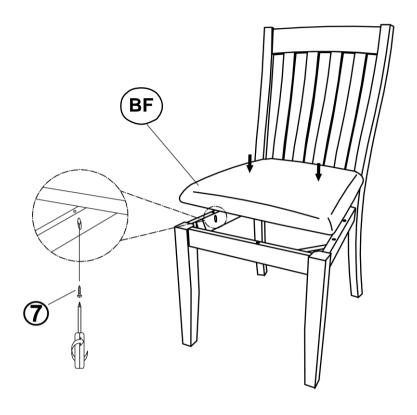


STEP 4 COMPLETE

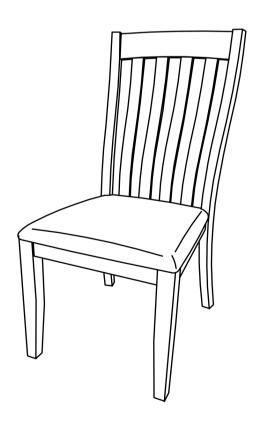





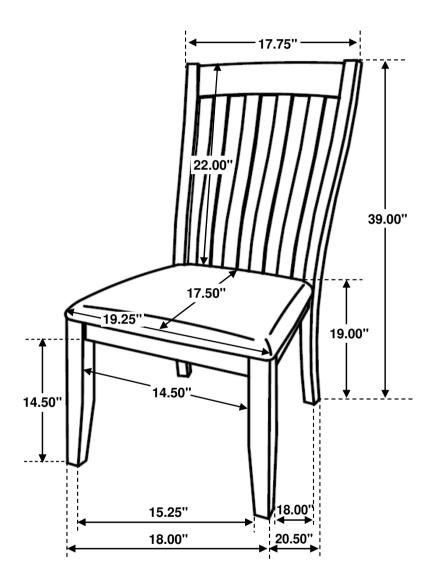

Note: Dimension tolerance ±5%