

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

110381(B1&B2) *Dining Table* 



### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

#### **WARNING!**



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

### **PART IDENTIFICATION**

### **B1 (BOX 1)**

A TOP 1PC

B LEAF 1PC

**B2 (BOX 2)** 

C LEG 4PCS

### HARDWARE IDENTIFICATION


### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 110381 (B1)

1	BOL I ( Ø5/16" x 2-3/8" - RBW )	8PCS
2	LOCK WASHER ( Ø5/16" - RBW )	8PCS
3	FLAT WASHER ( Ø5/16" - RBW )	8PCS
4	ALLEN WRENCH	1PC


# COASTER

### **ASSEMBLY INSTRUCTIONS**

## STEP 1

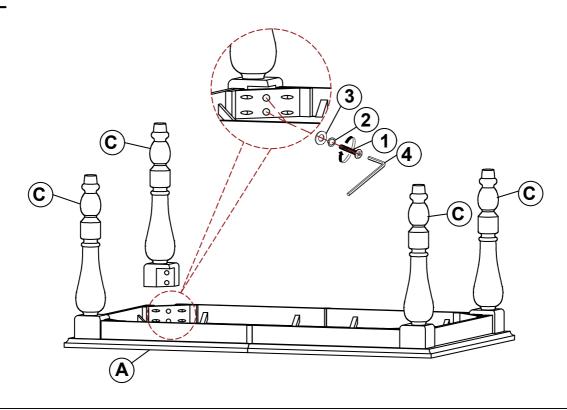


### STEP 2

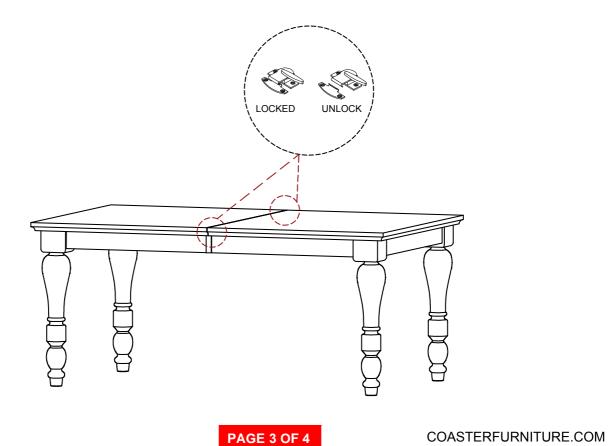




### **ASSEMBLY INSTRUCTIONS**


## STEP 3

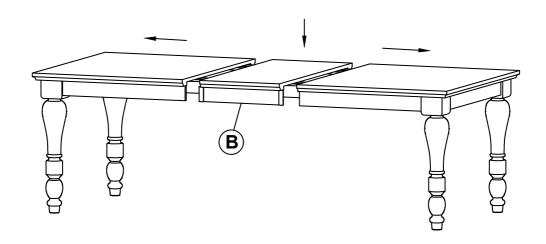

# STEP 4 COMPLETE

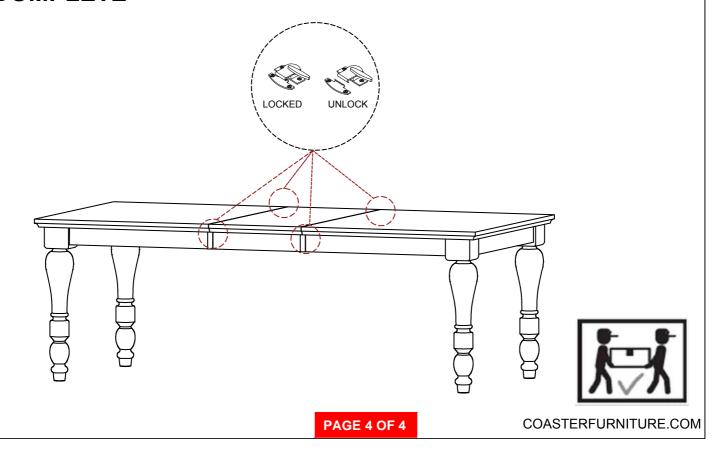



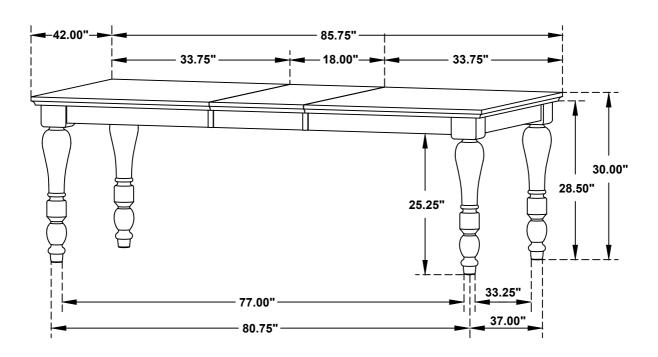

Note: Dimension tolerance ±5%