# ASSEMBLY INSTRUCTIONS

# ITEM NO: B8170 - K - BED KING HEADBOARD / FOOTBOARD / SIDE RAIL

### PART LIST

ITEM	DRAWING	DESCRIPTION	QTY
A		HEADBOARD PANEL	1
B1		LEFT HEADBOARD LEG	1
B2		RIGHT HEADBOARD LEG	1
С		FOOTBOARD	1
D	Ů	WOODEN SUPPORT	8
E		WOODEN SLAT	4
F		CONCEAL PANEL	4
G		SIDE RAIL A	2
Н		SIDE RAIL B	2
I		SIDE RAIL SUPPORT LEG	2


### HARDWARE LIST

ITEM	DRAWING	DESCRIPTION	QTY
1		ALLEN WRENCH (M4)	1
2		WOOD DOWEL (M8 x 30mm)	12
3	<b>3300</b>	CONNECTION BOLT (M6 x 80mm) (FOR HB LEG)	2
4	93	CONNECTION BOLT (M6 x 45mm) (FOR HB LEG)	8
5	9 <b>99</b>	CONNECTION BOLT (M6 x 35mm) (FOR SR)	8
6	9 <b>39</b>	CONNECTION BOLT (M6 x 25mm) (FOR HB LEG & SR)	8
7	Quino	ROUND HEAD SCREW (M4 x 20mm)	16
8	<b>Amm</b>	FLAT HEAD SCREW (#8 x 1 1/8")	8
9		SCREW DRIVER(*)	1



COMPLETED KING BED ASSEMBLY

The manufacturer does not provide item 9.

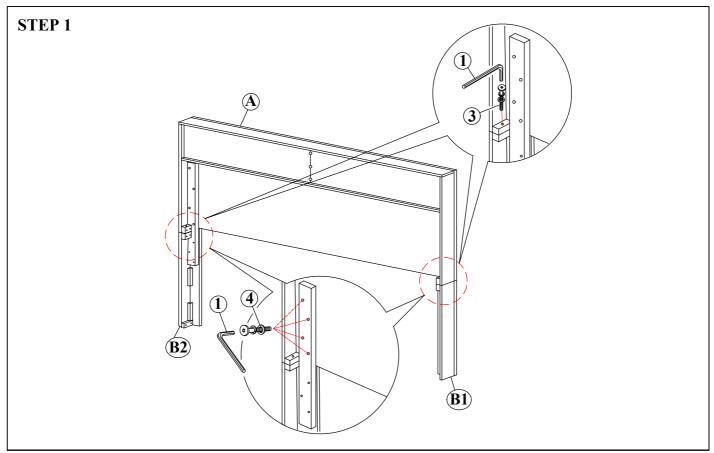


### THE HARDWARE IS LOCATED IN THE HARDWARE BAG

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

## **CLEANING INSTRUCTION**

# ASSEMBLY INSTRUCTIONS


# ITEM NO: B8170 - K - BED KING HEADBOARD / FOOTBOARD / SIDE RAIL

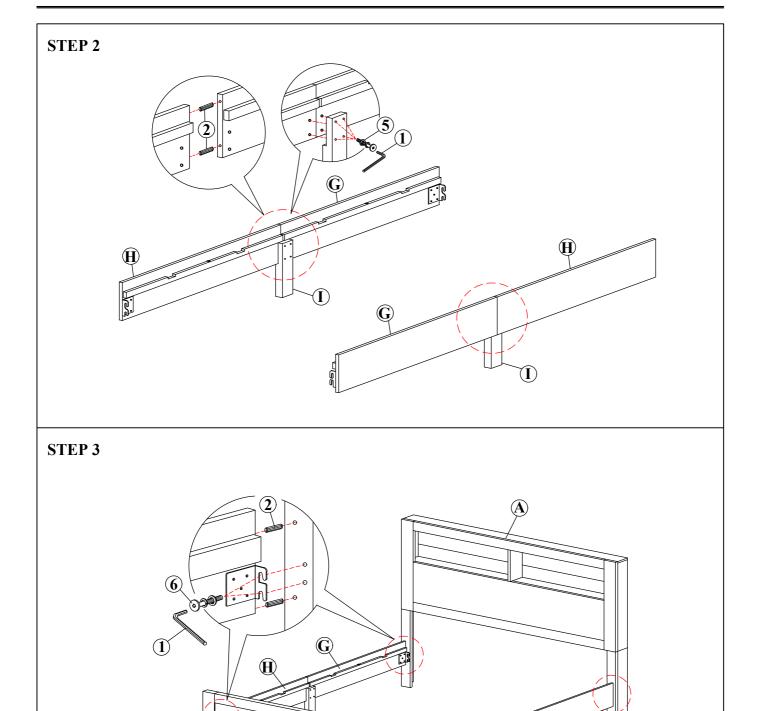

### THE HARDWARE IS LOCATED IN THE HARDWARE BAG

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

## **CLEANING INSTRUCTION**

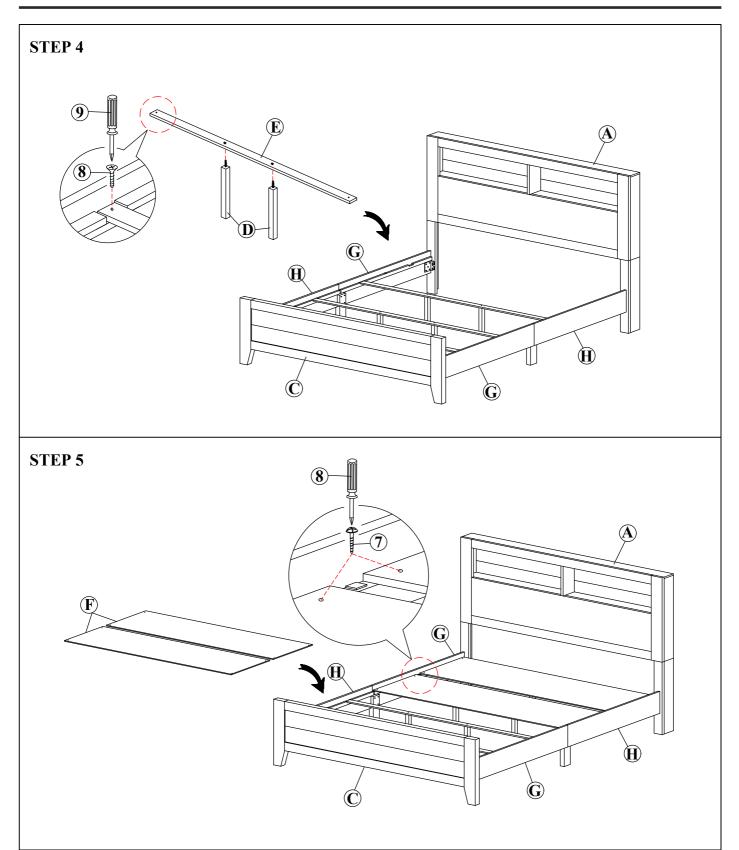

### THE HARDWARE IS LOCATED IN THE HARDWARE BAG

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

### **CLEANING INSTRUCTION**