

## FCC INSTRUCTIONS


**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**DESIGNlab**  
By OSP FURNITURE®

## KIL55 ELECTRIC LIFT GAMING DESK ASSEMBLY INSTRUCTIONS

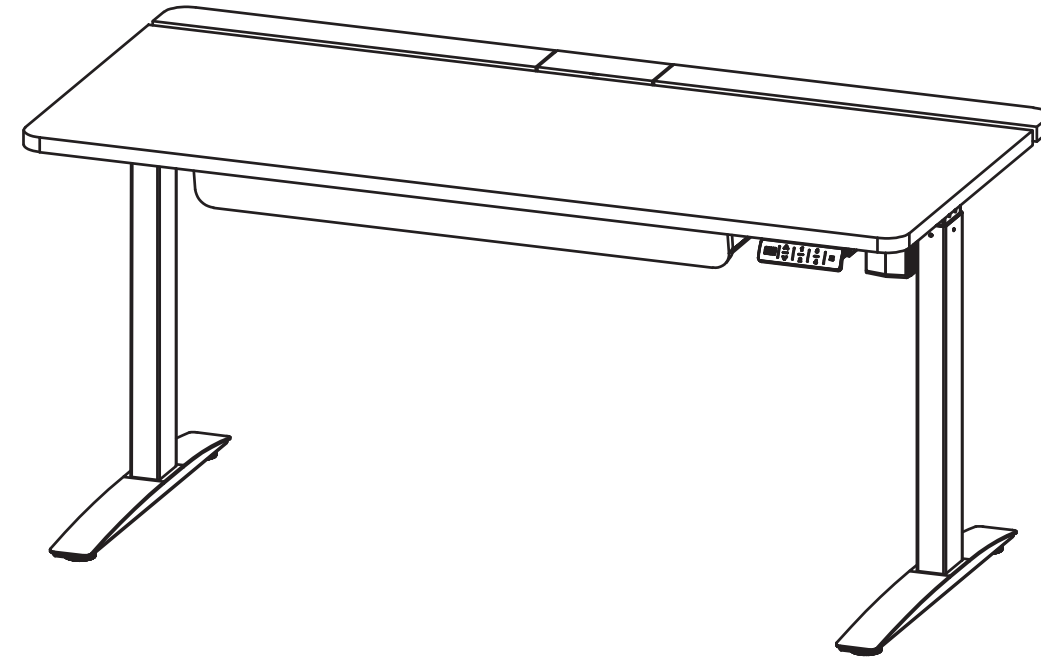

### WARNING

1. Do not use this product unless all bolts, screws and knobs are securely tightened.
2. Check that all bolts, screws and knobs are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use product as stepladder.
5. Use product for its intended purpose only.
6. Use mild detergent only for cleaning.

### OSP FURNITURE LIMITED PRODUCT WARRANTY

Design Lab Products

- 3 years on gaming desks and chairs
- Upholstery is not warranted against routine scratching and scuffing










\*All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 250 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of Office Star Products. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. When usage is more than 40 hours per week, a two year warranty on all parts applies. Fabric and foam is warranted for one year. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

It is the customer's responsibility to prepay freight on any components returned to the factory. Return freight on components covered by warranty will be paid by Office Star Products.

Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail [parts.department@officestar.net](mailto:parts.department@officestar.net) by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 3:30 p.m. Pacific Time.



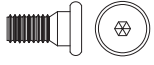
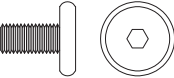
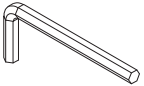


## HARDWARE LIST

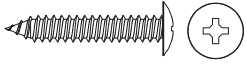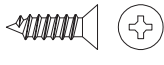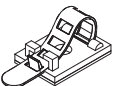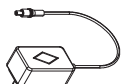NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
A		Machine Screw	3/4"	8 PCS + 1 Extra
B		Machine Screw	1/2"	16 PCS + 2 Extra
C		Allen Wrench	n/a	1 PC
D		Machine Screw	2"	3 PCS
E		Controller	n/a	1 PC
F		Wood Screw	1"	3 PCS
G		Screw	1/2"	3 PCS
H		Cable Strap	n/a	3 PCS
I		RGB LED Power Adapter	n/a	1 PC


*Phillips screwdriver also needed for assembly (not provided)*

## PARTS

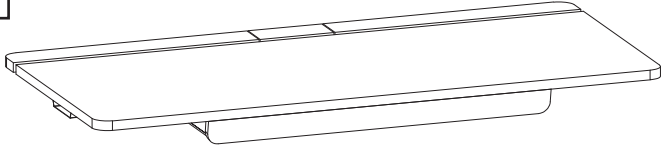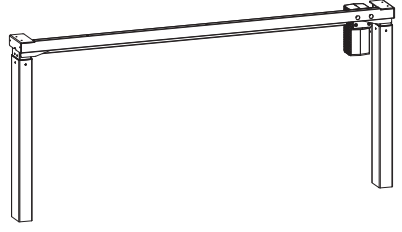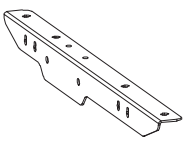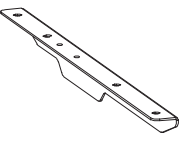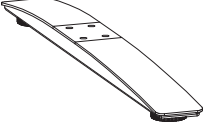
<b>1</b>		<b>2</b>	
	Desk Top (1 PC)		Frame (1 PC)
<b>3</b>		<b>4</b>	
	Left Support (1 PC)		Right Support (1 PC)
<b>5</b>			
	Foot (2 PCS)		

**KIL55**  
**ELECTRIC LIFT GAMING DESK**  
ASSEMBLY INSTRUCTIONS

**STEP 1**

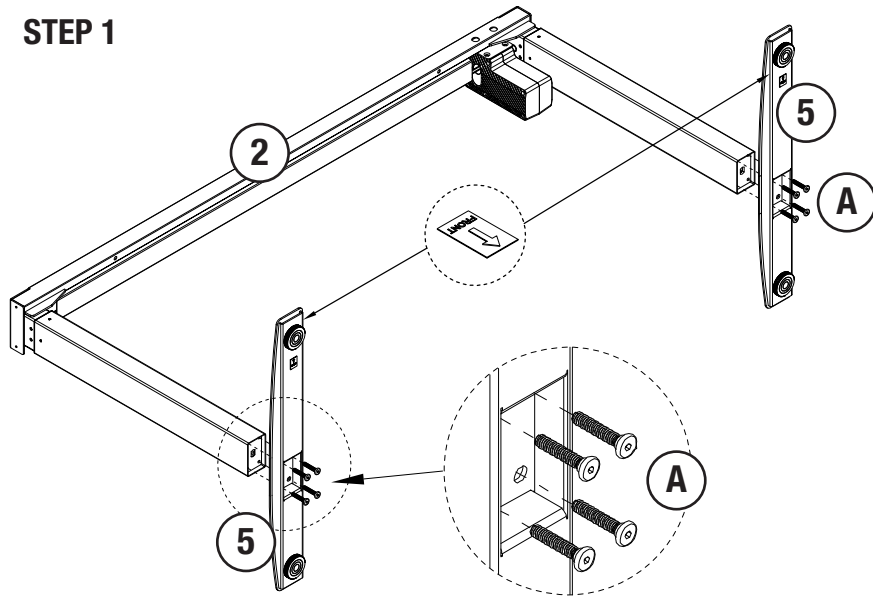

**STEP 2**

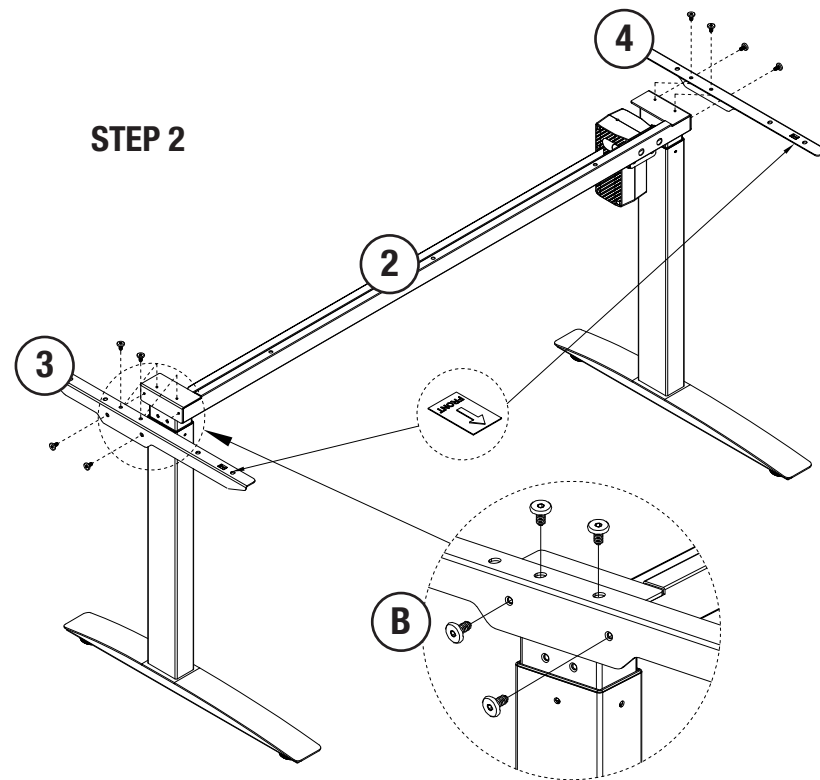

Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.


**IMPORTANT: ASSEMBLE DESK ON A SOFT, NON MARRING SURFACE.**

**STEP 1** Attach one Foot (5) to bottom of each post on Frame (2) using our Machine Screws (A) for each Foot (5). **FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (C).**


**STEP 2** Carefully turn Frame (2) to the upright position. Attach Left Support (3) and Right Support (4) to Frame (2) using four Machine Screws (B) for each support. **FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (C).**

**KIL55**  
**ELECTRIC LIFT GAMING DESK**  
ASSEMBLY INSTRUCTIONS

**STEP 3**

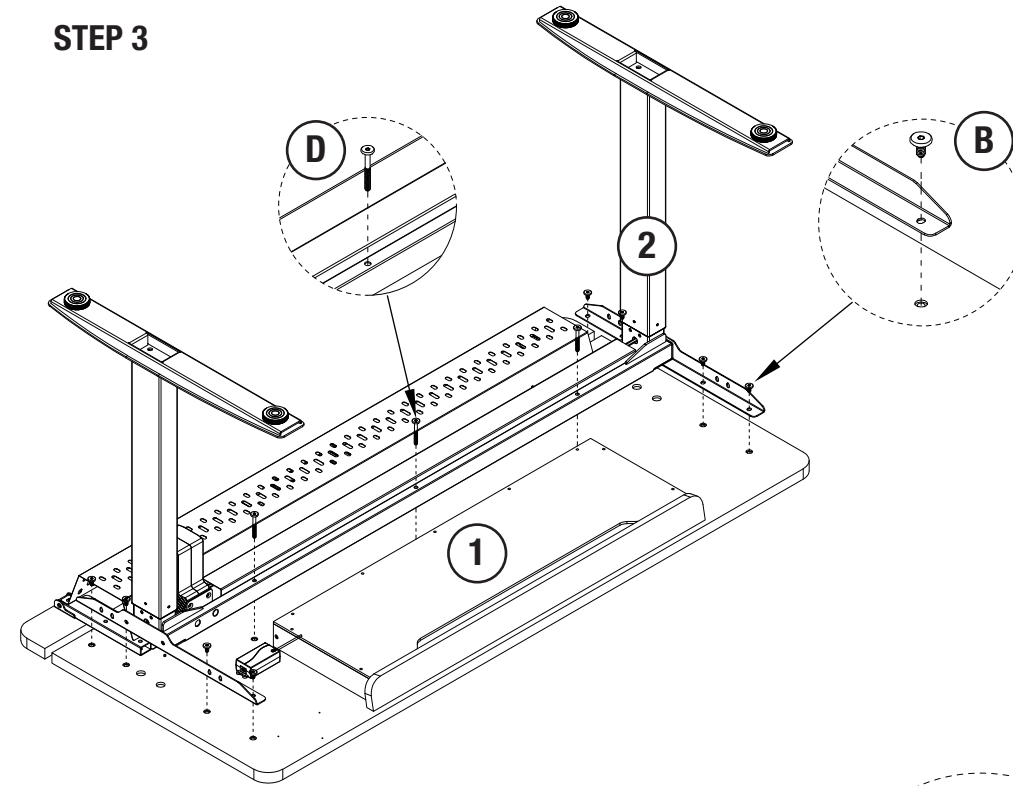

**STEP 4**

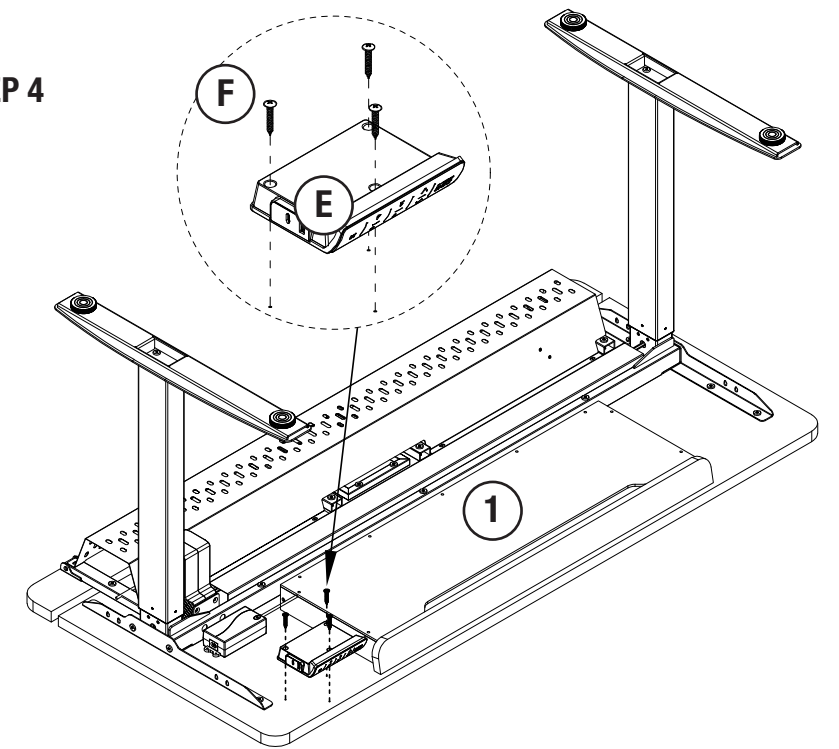




**STEP 3** Place Desk Top (1) upside down on a soft, non marring surface. Carefully place assembled Frame (2) onto Desk Top (1) and align mounting holes. Secure assembled Frame (2) to Desk Top (1) using eight Machine Screws (B) for Supports (3 & 4) and three Machine Screws (D) for center of Frame (2).

**FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (C).**

**STEP 4** Attach Controller (E) to Desk Top (1) using three Wood Screws (F). **FULLY TIGHTEN SCREWS USING PHILLIPS SCREWDRIVER (not provided).**

**KIL55**  
**ELECTRIC LIFT GAMING DESK**  
ASSEMBLY INSTRUCTIONS


**STEP 5**

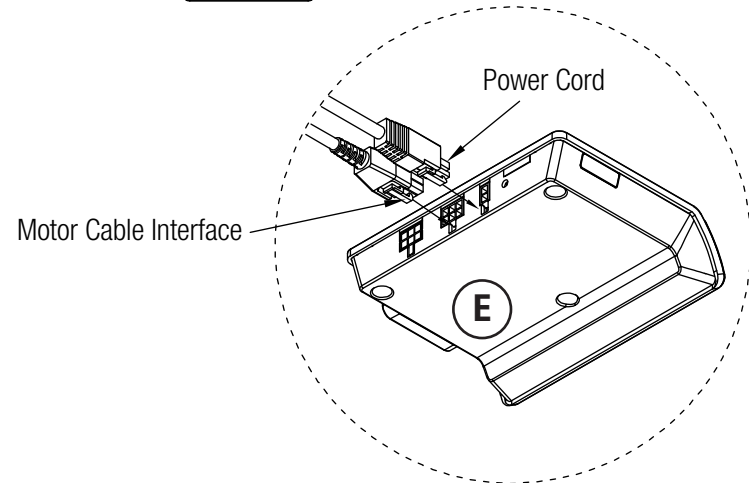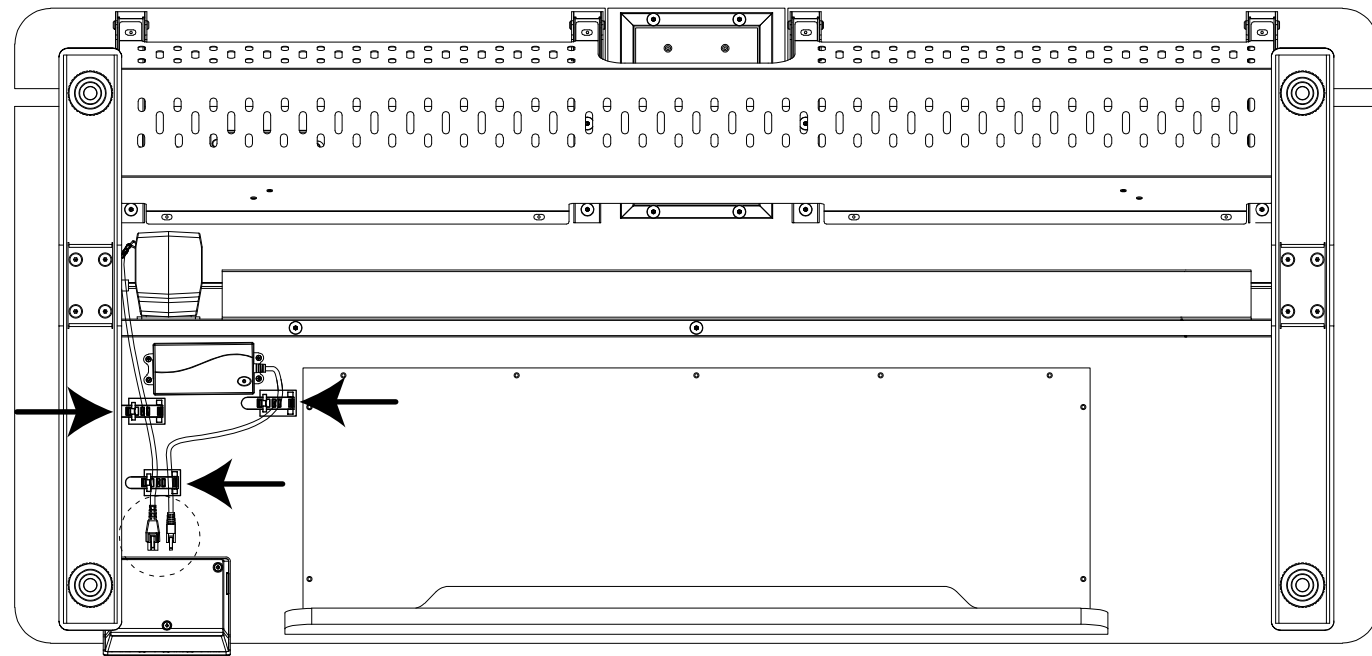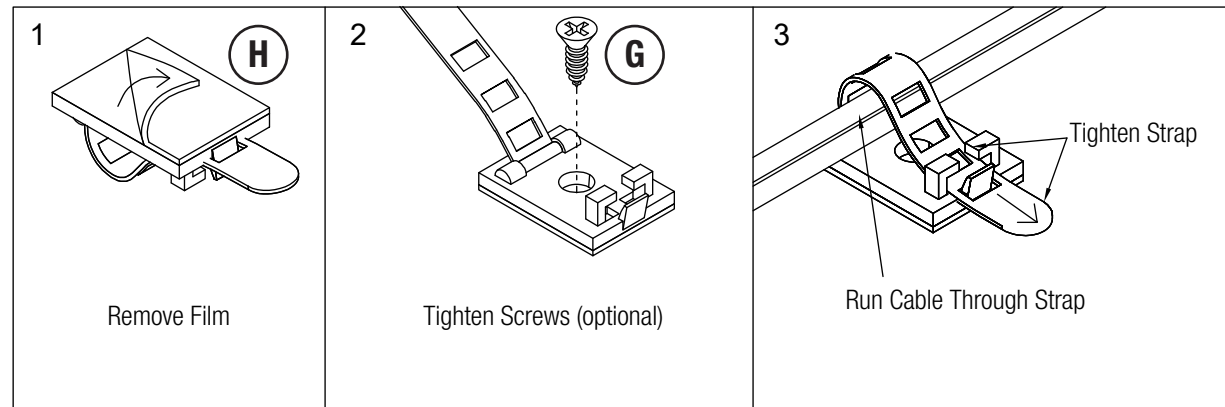


**STEP 5** Connect adapter cables to Controller (E). Run cables through Cable Straps (H).

**KIL55**  
**ELECTRIC LIFT GAMING DESK**  
ASSEMBLY INSTRUCTIONS

**STEP 6**

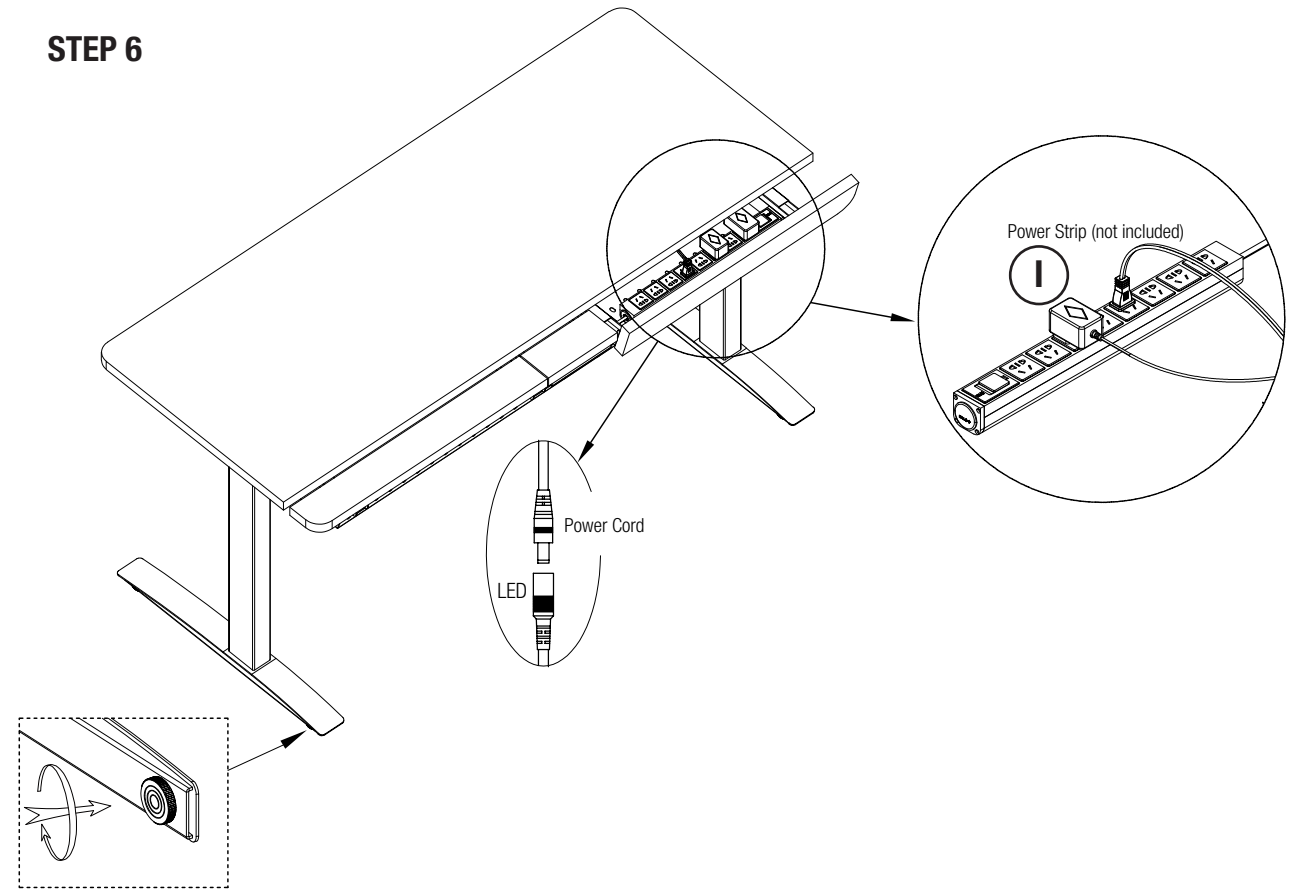

**STEP 7**

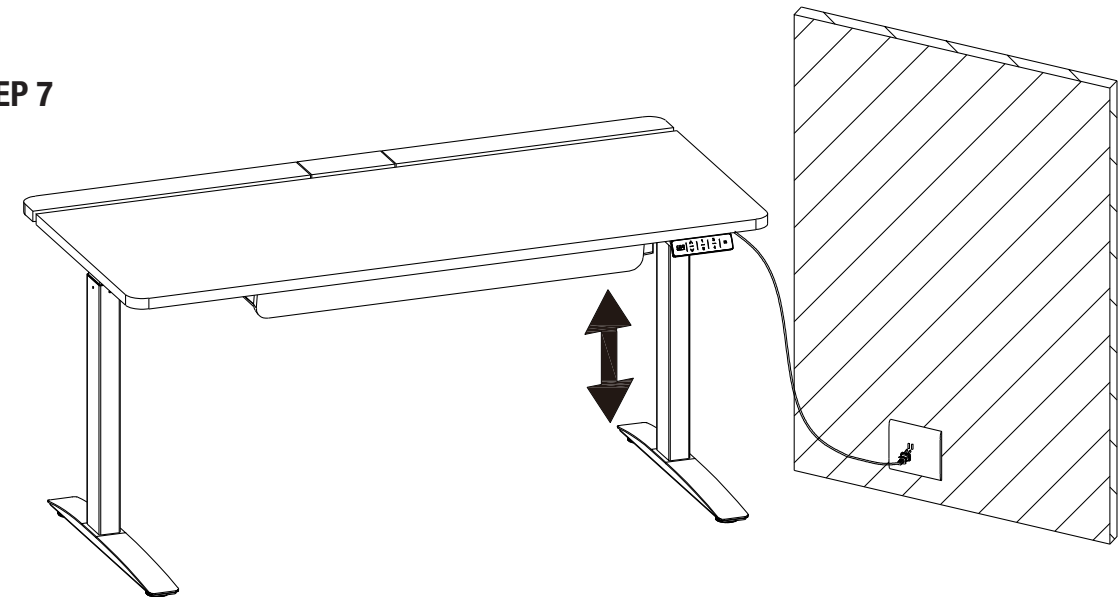

**STEP 6** Adjust levelers if needed to level desk. Connect Power Adapter (I).


**STEP 7** Factory reset is required for first time initialization.

# KIL55 ELECTRIC LIFT GAMING DESK

 HANDEST FUNCTIONS

# KIL55 ELECTRIC LIFT GAMING DESK

FAULTS & ERRORS



HANDSET IINSTRUCTION	
BUTTON	FUNCTION
△	UP Botton: To raise desk surface
▽	DOWN Botton: To lower desk surface
888	LED Display
1	Position 1: User saves 1st height position
2	Position 2: User saves 2nd height position
3	Position 3: User saves 3rd height position
4	Position 4: User saves 4th height position
M	Child Lock Lock/unlock height position Factory reset

## Operation Guide

- Reset Process
  - Factory reset is required for first time initialization or when power cut off due to electrical problems.
  - Make sure all cables are connected properly before initialization.
  - Press and hold Memory key "M" for 5 seconds until "RES" is displayed on the readout. The table will automatically lower to the bottom.
  - You will hear two chimes and "bot" will be displayed on the readout, this means the reset is complete.
- After the reset process, press the UP or DOWN button to lift or lower the height of desktop. The LED display shows the real time numerical value. The range of numerical value is 28" to 47".
- Memory setting for height position
  - Press the UP or DOWN button to lift or lower height of desktop.
  - Adjust to desired height, for example press the up arrow until the readout says 35 then press the button labeled 1 for 5 seconds. The display will flash and preset button 1 is now set to 35".
  - Repeat the same process to save 2nd and 3rd height position accordingly.
  - Press button 1, 2 and 3, 4 to reach the saved height position.
- Set the key lock function M
  - To Lock the height position, press the "M" button for 3 seconds until you hear a chime. The position is now locked and the other control buttons will not function.
  - To unlock the height position, press the "M" button for 3 seconds until you hear a chime. The position is now unlocked and the other control buttons will function.
  - The product is unlocked by default.

This list is used for checking and solving common faults and errors. The LED displays an error code with warning sound when problem occurs. In most cases, problem should be resolved by reconnecting cables and run a factory reset mode. If problem you encounter is not on the list below, please contact the manufacturer for assistance.

ERROR CODE	FAULT	SOLUTION
E1	Excessive overtime operation	Automatic recovery after no usage for 18 minutes
E2	Overloading	Reduce weight of load
E3	Connection cable failure	Check that all cables (power cord, handset cable, motor cable) and power cords are connected properly.
E4	Power voltage unmatched	Check voltage of power supply or contact manufacturer.
RES	Factory reset mode request	Run a factory reset process.
E11	Handset fault	Reconnect handset cable. Contact manufacturer if problem does not resolve.
E12	Control box fault	Run a factory reset process. Contact manufacturer if problem does not resolve.

**STEP 1** Scan QR Code or go to your app store and download the duoCo Strip app.


**STEP 2** Start the app and select the menu at the top left of the app.

**STEP 3** Select “My Devices” and your device name will show below. Make sure the link icon is not broken next to the device name. If it is then just select the device name and refresh until icon shows solid link.



**STEP 4** Select menu again to return to the “Adjust” screen and toggle the ON/OFF switch to turn on the LED lights.

**STEP 5** Select the settings icon in the top right and select “Guide” for more detailed instructions.

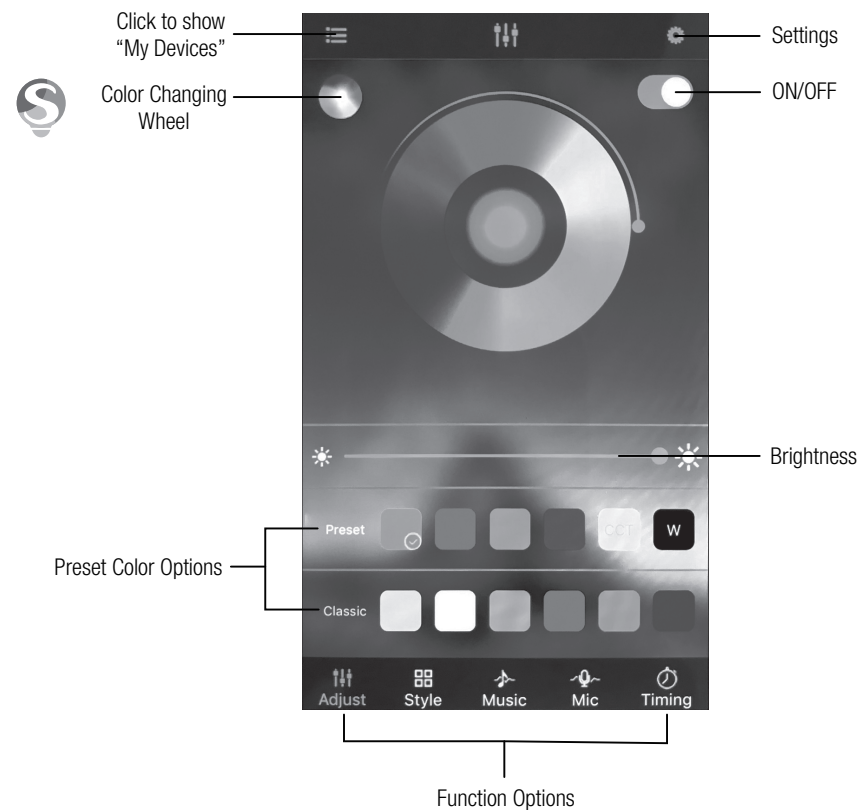

**Product Specifications**  
Bluetooth: BLE V4.2  
Input Voltage: 4.5 - 26V  
Working Temp: -25C to 75C  
Size: 43mm x 22mm x 11mm  
Weight: 30g  
Max Power: 144W(24V)

- Power supply: AC120V ± 10%, frequency 60HZ;
- Working environment: 32° - 104° F ;
- Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust.\ Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Before using the product, please make sure the product has been installed correctly.
- Before starting use of the product, please read the instructions to fully understand all the product’s functions and settings.
- Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children’s unpredictable behavior.
- Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example, do not left around your tools. And always be careful to deal with pack aging materials, in order to avoid any kinds of possible danger. Potential chocking risk exists when children play with plastic bags!
- If necessary, retain the original package for future transportation.



**RECYCLING & DISPOSAL**

This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contact the distributor or manufacturer for recycling assistance.