









LIVING SPACES

**AMERY**




SPINDLE BACK DINING CHAIR


SKU: 323501

**HARDWARE LIST**


No	Description	Sketch	Q'TY
A	Allen Wrench 4mm		1PC
B	Bolt Ø1/4x40mm		2PCS
C	Bolt Ø1/4x60mm		4PCS
D	Bolt Ø1/4x75mm		4PCS
E	Lock Washer Ø1/4x12mm		10PCS
F	Flat Washer Ø1/4x19mm		10PCS

**PARTS LIST**

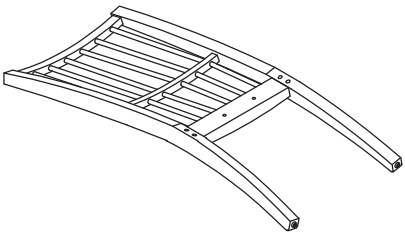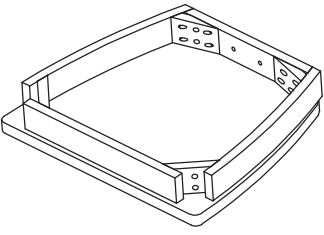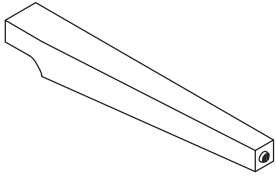CHAIR BACK (1PC)	SEAT FRAME (1PC)	LEG (2PCS)
① 	② 	③ 

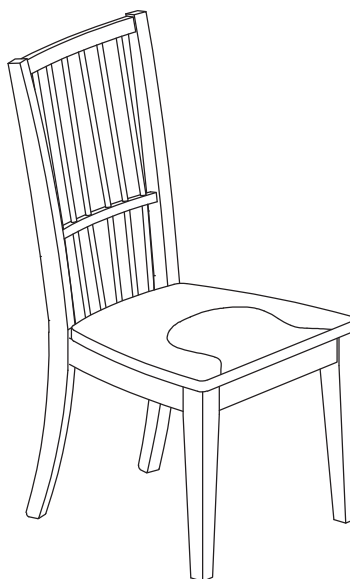


STEP 1

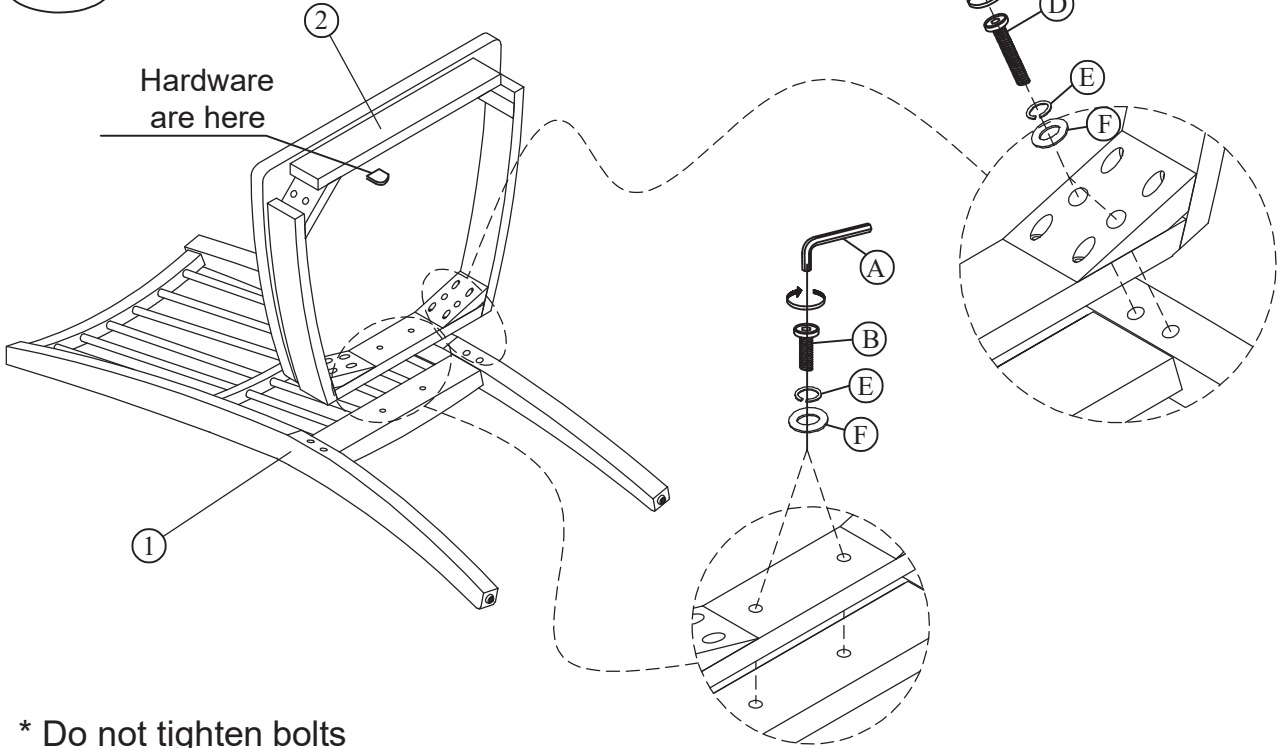

\* Do not tighten bolts

STEP 2

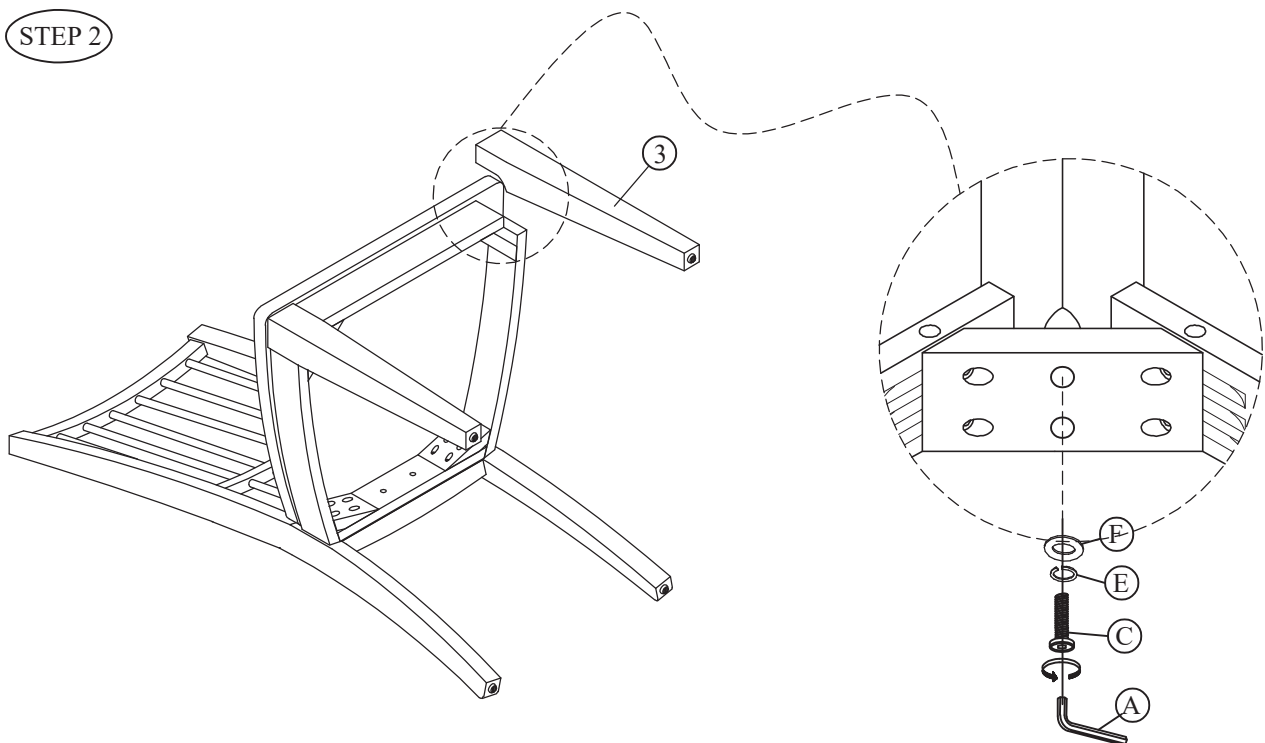

\* Tighten all screws & bolts