

# SHOWOOD LEG ASSEMBLY INSTRUCTION SHEET

ALLOW 10 MINUTES FOR ASSEMBLY

223274


#02221

# ASAMBLEA de la PATA HOJA de la INSTRUCCION

DEJE 10 MINUTOS PARA ASAMBLEA


1  
A PHILLIPS HEAD  
SCREWDRIVER IS  
NEEDED FOR ASSEMBLY

1. Make sure you have the following parts:

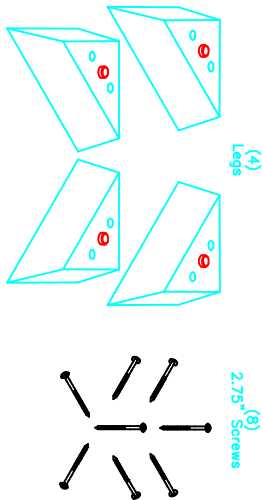


2

1. Working on a clean surface, turn the sofa on its back with the sofa base facing your work area.
2. Position leg as shown, approximately 1/4" from outside edges of bottom surface.

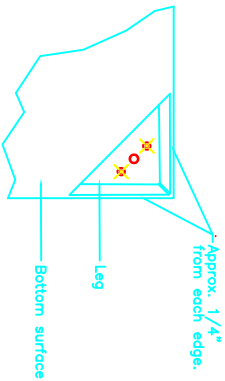


3

1. Attach leg using (2) - 3" screws per leg in holes provided.
2. Repeat the above procedures for the remaining legs.
3. Turn the sofa upright and place in the desired location.

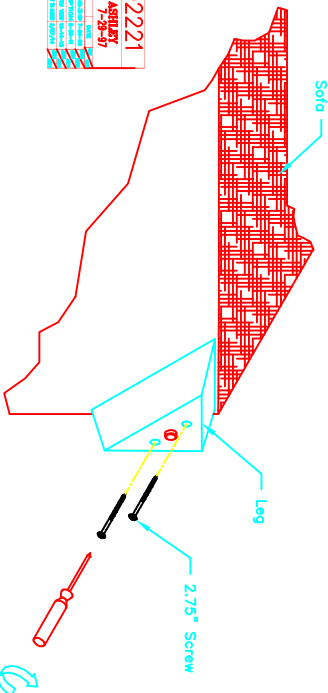


1  
Un DESTORNILLADOR Es  
REQUIRIO PARA ASAMBLEA

1. lo ASEGURA TIENE LAS PARTES SIGUIENTES:

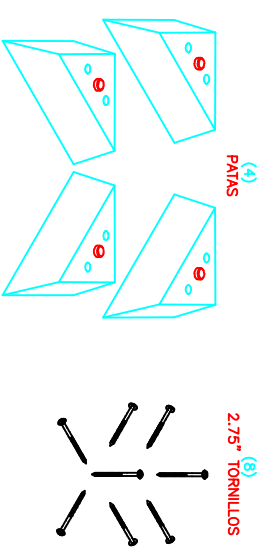

2

1. FUNCIONAMIENTO En Una SUPERFICIE LIMPIA, VUELVE EL SOFA En SU INVERSO CON EL PARAMENTO del INVERSO del SOFA SU AREA del TRABAJO.
2. POSICION LA PATA Como MUESTRA, APROXIMADAMENTE 1/ 4" DEL EXTERIOR BORDOS de LA SUPERFICIE del FONDO.

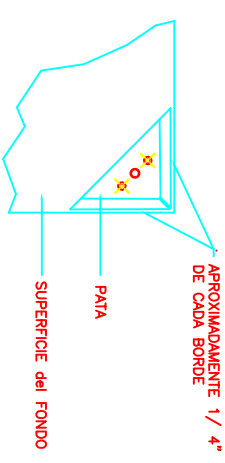

3

1. ATA LA PATA USA (2) - 3" TORNILLLOS POR PATA En LOS AGUJEROS PROVEYERON.
2. REPITA EL PROCEDIMIENTO PRECEDENTE PARA LAS PATAS del QUEDA.
3. VUELVA EL SOFA DERECHO y lo PONE En EL DESEO LOCALIDAD.

