

Shipping Cleats

240571

1.0 Scope: Applies to all stationary and motion units that are not packaged in boxes/cartons.

2.0 Description – Stationary or motion unit determined to have an excessive tipping or rolling risk require a shipping cleat. The type of cleat depends on the characteristics of the unit.

Eight types of shipping cleats currently exist.

- 1) **Small Show wood Cleat (165 mm x 89 mm x 15mm):** This goes on certain stationary units with show wood bases. The cleat is attached to sofas with three 2 ¼" (01571) screws.
- 2) **Medium Cleat (298 mm x 178 mm x 11mm):** This is used on stationary loveseats and sofas that weight 150lbs or less. The cleat is attached to the bottom of the left arm facing. It is attached with three 2 ¼" (01571) screws evenly spaced across the cleat.
- 3) **Medium Cleat (298 mm x 178 mm x 15mm):** This cleat is used on stationary sofas and sleeper units that weight 150lbs or more. The cleat is attached to sofas with three 2 ¼" (01571) screws evenly spaced across the cleat. The cleat is attached to sleepers with five 2 ¼" (01571) screws evenly spaced across the cleat
- 4) **Large Cleat (298 mm x 298 mm x 15mm):** This cleat is used on chaises with oddly-shaped backs, such as the 843-15. It is attached with three 2 ¼" (01571) screws
- 5) **Large Swivel Chair Cleat (889 mm x 178 mm):** This cleat is used on all of the large swivel chairs to prevent rolling. The cleat is attached with two 2 ¼" (01571) screws
- 6) **843 Cleat (1012 mm x 200 mm):** See "Show wood Bottom Protection" standard. The cleat is attached with four 2 ¼" (01571) screws.
- 7) **Motion #1 Cleat:** This is used on motion loveseats and sofas (non-glider mechanisms). The cleat is attached to the mechanism with two 2 ¼" (77902) self-tapping screws
- 8) **Motion #2 Cleat (393mm x 599mm):** This is used on motion loveseats and sofas with glider mechanisms. The cleat is attached to the bottom of the mechanism with two 2 ¼" (77902) self-tapping screws.



Shipping Cleats Sofa angle arm




2.7 inches


Shipping Cleats
298mmx178mmx15mm

Fixed by 3
PCS units
01571wnk

01571Wnk

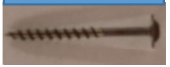

Tool

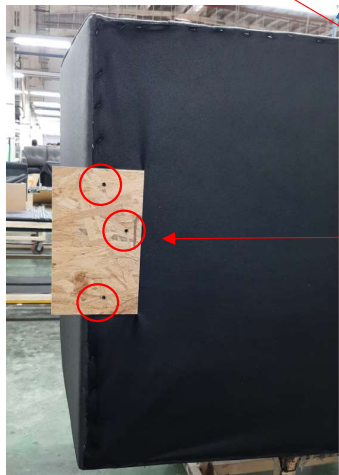

THANK YOU

We want to be the best furniture company



SHOWOOD LEG ASSEMBLY INSTRUCTION SHEET

ALLOW 10 MINUTES FOR ASSEMBLY

254012


#02221

ASAMBLEA de la PATA HOJA de la INSTRUCCION

DEJE 10 MINUTOS PARA ASAMBLEA


1
A PHILLIPS HEAD
SCREWDRIVER IS
NEEDED FOR ASSEMBLY

1. Make sure you have the following parts:

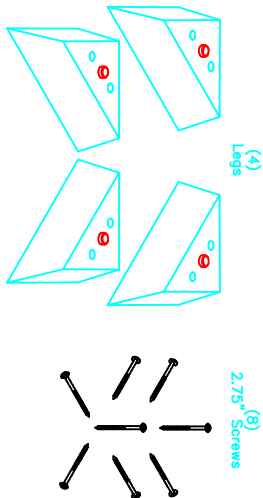


2

1. Working on a clean surface, turn the sofa on its back with the sofa base facing your work area.
2. Position leg as shown, approximately 1/4" from outside edges of bottom surface.

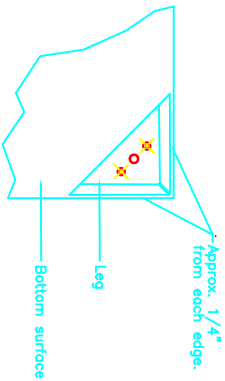


3

1. Attach leg using (2) - 3" screws per leg in holes provided.
2. Repeat the above procedures for the remaining legs.
3. Turn the sofa upright and place in the desired location.

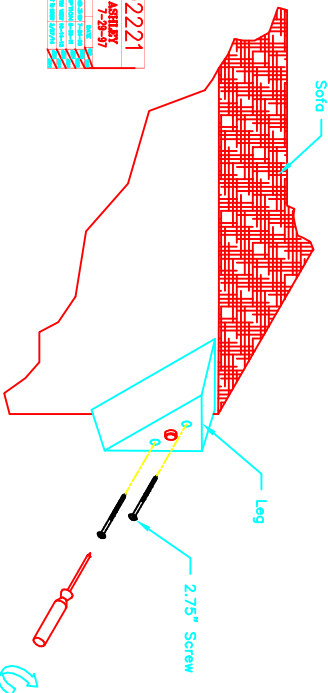


1
Un DESTORNILLADOR Es
REQUIRIO PARA ASAMBLEA

1. lo ASEGURA TIENE LAS PARTES SIGUIENTES:

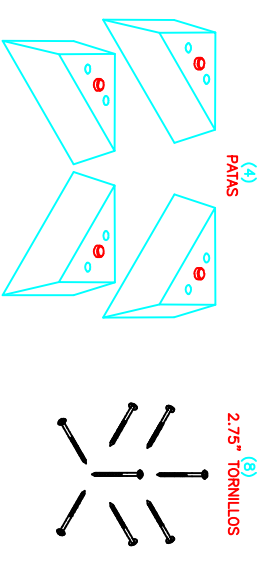

2

1. FUNCIONAMIENTO En Una SUPERFICIE LIMPIA, VUELVE EL SOFA En SU INVERSO CON EL PARAMENTO del INVERSO del SOFA SU AREA del TRABAJO.
2. POSICION LA PATA Como MUESTRA, APROXIMADAMENTE 1/ 4" DEL EXTERIOR BORDES de LA SUPERFICIE del FONDO.

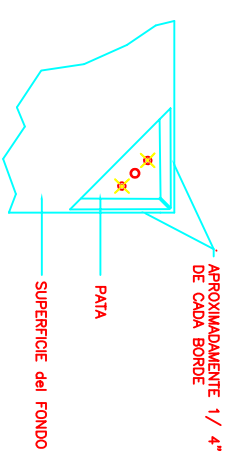

3

1. ATA LA PATA USA (2) - 3" TORNILLLOS POR PATA En LOS AGUJEROS PROVEYERON.
2. REPITA EL PROCEDIMIENTO PRECEDENTE PARA LAS PATAS del QUEDA.
3. VUELVA EL SOFA DERECHO y lo PONE En EL DESEO LOCALIDAD.

