

## **ASSEMBLY INSTRUCTIONS**

### ITEM 305-P234110

# **MIRROR**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small hardware which may have come loose inside the carton during shipment. Identify and count all hardware and compare with the hardware list below.

When placing furniture on non-carpeted flooring, HMI recommends the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.

## **PARTS LIST**


No.	Description	Sketch	Quantity
1	Mirror	"	1
2	Mirror Support		2
3	Dresser		1

### HARDWARE LIST

No.	Description	Size	Sketch	Quantity
А	JCBC Bolt	M6 x 35MM		8
В	Spring Washer	M6		8
С	Flat Washer	M6	0	8
D	Allen Key	4 x 65MM		1

TOOLS REQUIRED (NOT PROVIDED)



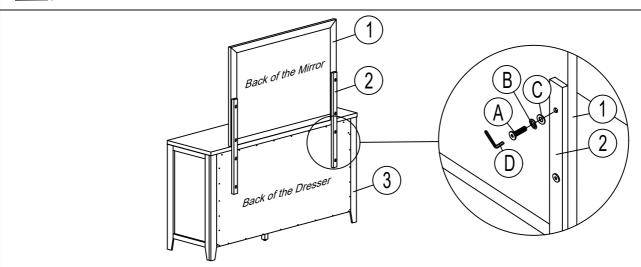

Made In Malaysia Page 1 of 1