

PROGRESSIVE FURNITURE

P608/P610/P612 PIER TO BRIDGE

Assembly Instructions

Important!

This is at least a 2 person assembly,
do not try and assemble alone.

PARTS LIST



(2x) Hex Wrench

1




(4x) 1/2" Cap Nut

2



(4x) 1/4" x 1 3/16" Machine Screw

3

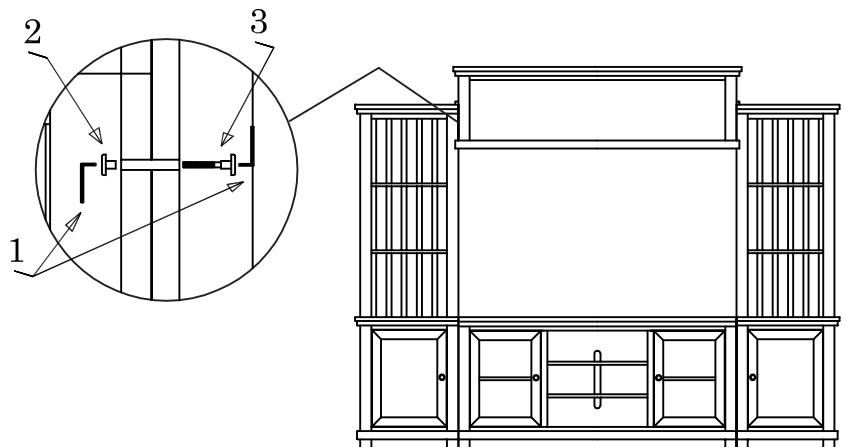

Step 1

Place Bridge on top of both Pier Units

Step 2

While someone holds the Bridge, join the pier with the
bridge using 4x Nut Caps (2) & 4x 1 3/16" Machine Screw (3)

Step 3

Tighten the screws using 2x Hex Wrench (1) in a Clock Wise
Motion

PROGRESSIVE FURNITURE

P608/P610/P612 PIER TO BRIDGE

Assembly Instructions

Important!

This is at least a 2 person assembly,
do not try and assemble alone.

PARTS LIST



(2x) Hex Wrench

1




(4x) 1/2" Cap Nut

2



(4x) 1/4" x 1 3/16" Machine Screw

3

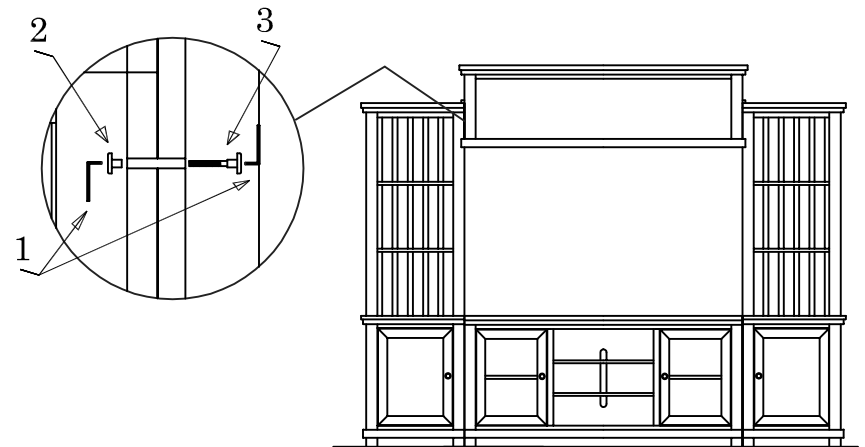

Step 1

Place Bridge on top of both Pier Units

Step 2

While someone holds the Bridge, join the pier with the
bridge using 4x Nut Caps (2) & 4x 1 3/16" Machine Screw (3)

Step 3

Tighten the screws using 2x Hex Wrench (1) in a Clock Wise
Motion