

SHOWOOD LEG ASSEMBLY INSTRUCTION SHEET

ALLOW 10 MINUTES FOR ASSEMBLY

253939


#02221

ASAMBLEA de la PATA HOJA de la INSTRUCCION


DEJE 10 MINUTOS PARA ASAMBLEA

1
A PHILLIPS HEAD
SCREWDRIVER IS
NEEDED FOR ASSEMBLY


1. Make sure you have the following parts:

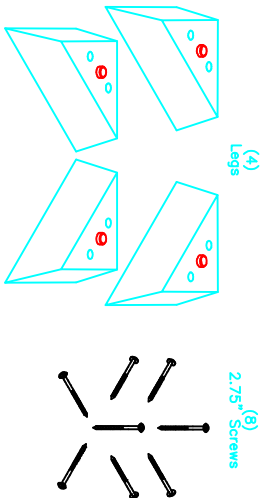

2
1. Working on a clean surface, turn the sofa on its back with the sofa base facing your work area.
2. Position leg as shown, approximately 1/4" from outside edges of bottom surface.

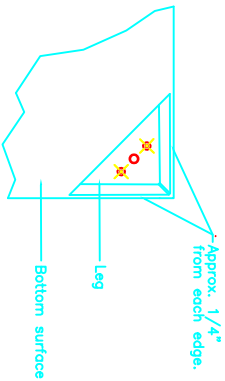


3
1. Attach leg using (2) - 3" screws per leg in holes provided.
2. Repeat the above procedures for the remaining legs.
3. Turn the sofa upright and place in the desired location.

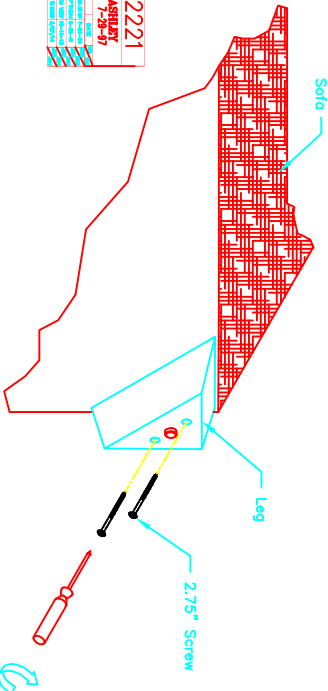


1
Un DESTORNILLADOR Es
REQUIRIO PARA ASAMBLEA

1. lo ASEGURA TIENE LAS PARTES SIGUIENTES:

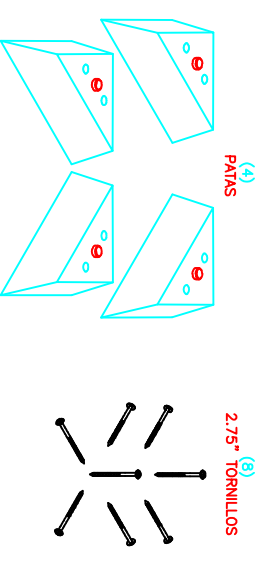

2
1. FUNCIONAMIENTO En Una SUPERFICIE LIMPIA, VUELVE EL SOFA En SU INVERSO CON EL PARAMENTO del INVERSO del SOFA SU AREA del TRABAJO.
2. POSICION LA PATA Como MUESTRA, APROXIMADAMENTE 1/ 4" DEL EXTERIOR BORDOS de LA SUPERFICIE del FONDO.

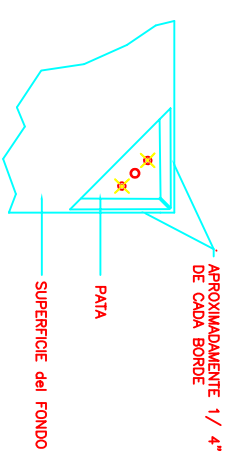

3
1. ATA LA PATA USA (2) - 3" TORNILLLOS POR PATA En LOS AGUEROS PROVEYERON.
2. REPITA EL PROCEDIMIENTO PRECEDENTE PARA LAS PATAS del QUEDA.
3. VUELVA EL SOFA DERECHO y lo PONE En EL DESEO LOCALIDAD.

