

Assembly Instructions For




255020 BRANDON MIRROR CHARCOL





CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT. THESE PIECES ARE HEAVY. IN ORDER TO PREVENT PERSONAL INJURY AND ENSURE THAT THIS PRODUCT IS NOT DAMAGED DURING THE ASSEMBLY PROCESS. IT IS STRONGLY RECOMMENDED THAT YOU ENLIST THE ASSISTANCE OF ONE OR MORE PEOPLE.

CUIDADO: FAVOR DE LEER TODAS LAS INSTRUCCIONES ANTES DE ENSAMBLAR SU PRODUCTO. ESTAS PIEZAS SON PESADAS. PARA PREVENIR HERIDAS PERSONALES Y ASEGURAR QUE SU PRODUCTO NO SEA DAN ADO MIENTRAS ES ANSAMBLADO, SE RECOMIENDA LA ASSISTENCIA DE UNA O MAUS PERSONAS.

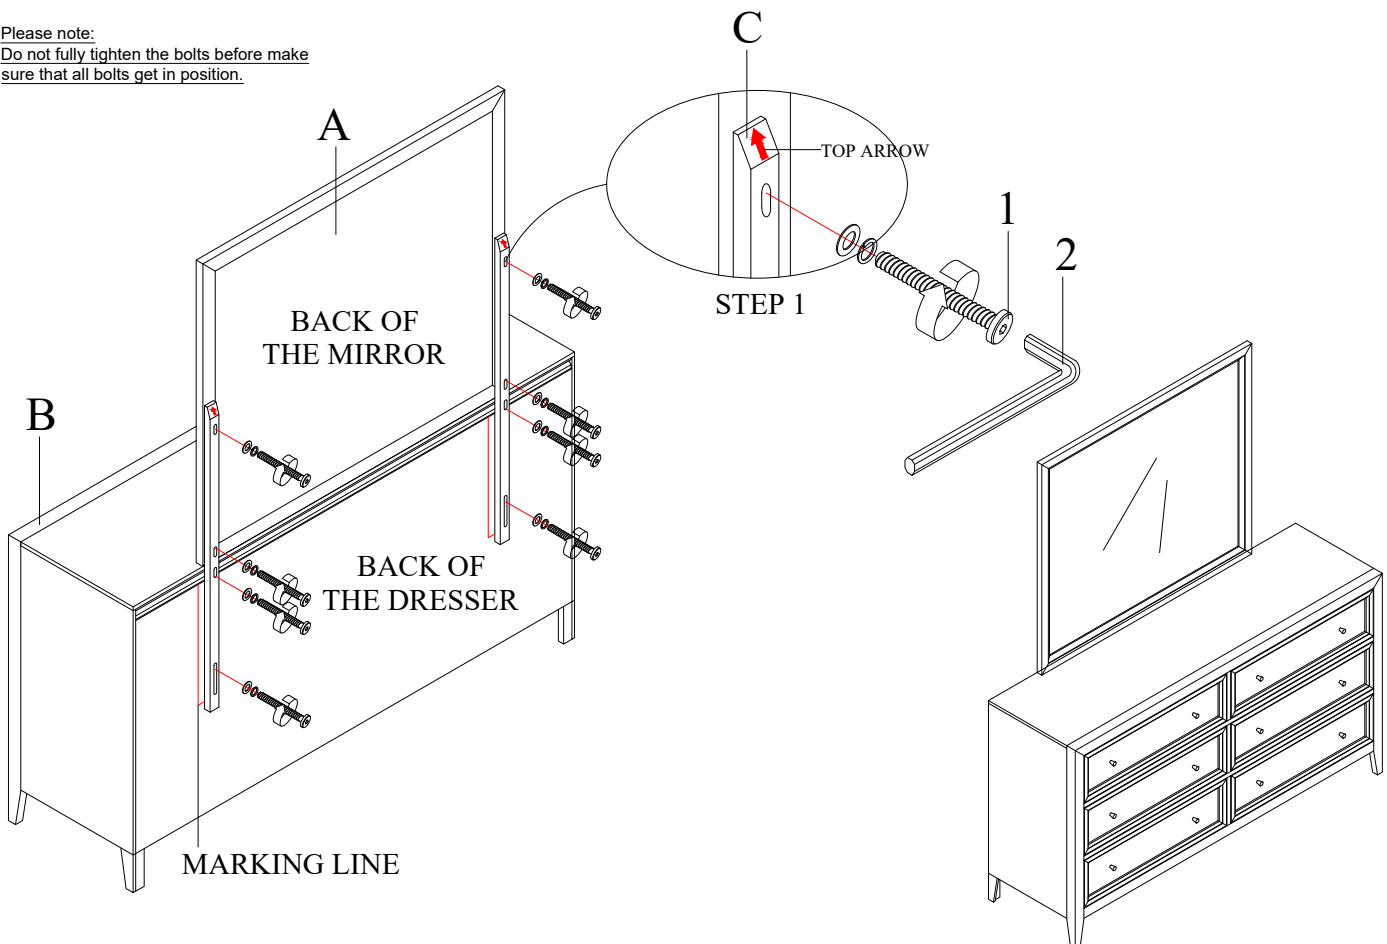
WARNING.....PROTECTIVE GLIDE IS PLACED UNDER LEGS OF FURNITURE TO RESIST SCRATCHES TO FLOOR SURFACE. SOME FLOOR SURFACES CAN BE EXTRA SENSITIVE TO MARKING. IF YOU ARE NOT SURE CONSULT WITH YOUR DEALER.

ADVERTISSEMENT... LES PIEDS DES MEUBLES SONT MUNIS DE PAINTS DESTINÉS À PROTÉGER LE PLANCHER. CERTAINS REVÊTEMENTS DE SOL PEUVENT ÊTRE TRÈS FRAGILES. EN CAS DE DOUTE, CONSULTER LE MARCHAND.

NO.	Parts List	Q'TY
A	 MIRROR	1
B	 DRESSER	1
C	 SUPPORT	2

NO.	Hardware List	Q'TY
1	 Φ 1/4 " * 1 3/8 " L Allen Bolt	8
	 Φ 1/4 " Spring Washer	8
	 Φ 1/4 " Φ 19mm * 2.4mm Flat Washer	8
2	 Allen Wrench (4mm)	1

Please note:
Do not fully tighten the bolts before make sure that all bolts get in position.



Assembly completed
MADE IN MALAYSIA