













MADISON PARK

Assembly Instruction---Counterstool


Parts#	Parts Name	Drawing	Qty
P1	Left side footrest		1
P2	Right side footrest		1
P3	Front leg frame		1
P4	Back leg frame		1
P5	Seat		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts φ5/16*2-3/8"		9
H2	Lock Washers φ5/16"		9
H3	Flat Washers φ5/16"		9
H4	Allen Wrench φ5/16"		1
H5	Screw		6
H6	Screwdriver		Not provided


Step 1. Take out the leg frames, footrest and hardware from the box.

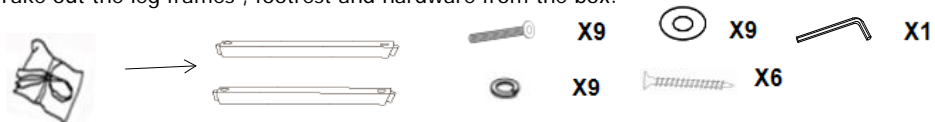


Step 2: Insert Front leg frame (P3) to the seat frame (P5), Lock the front legs to the seat frame using Allen Wrench (H4) to loosely tighten bolt (H1), lock washer (H2), flat washers (H3) as illustration below.

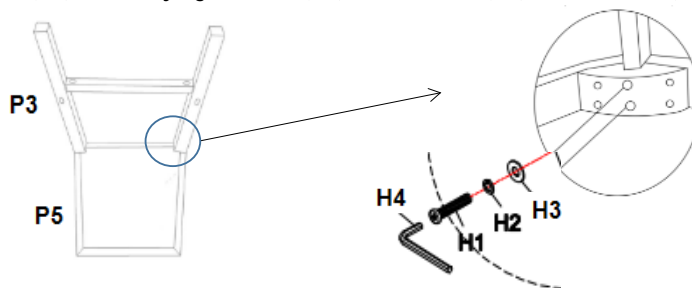


Step 3: Insert P1 and P2 to the front leg frame (P3), lock the footrest to the front legs, loosely tighten the screw (H5) with the screw driver (H6) as illustration below.

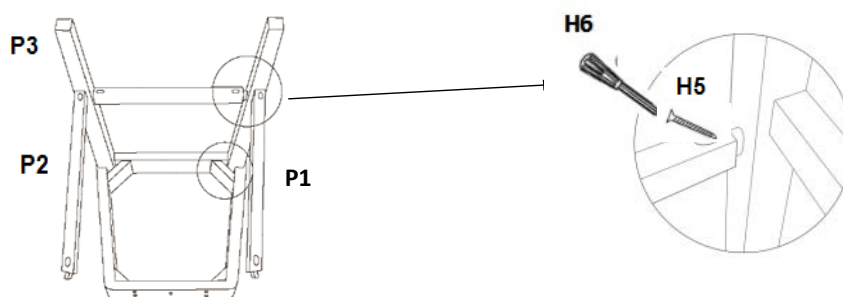

Step 4: Attach Step 3 finished part to back leg frame (P4) as shown in below illustration.

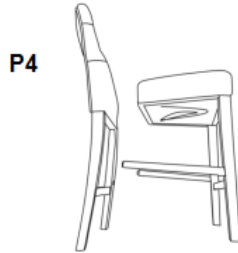

Step 5: Lock the seat (P5) to the back frame (P4) using Allen Wrench (H4) to loosely tighten bolt (H1), lock washer (H2), flat washers (H3) as below illustration. Loosely tighten the screw (H5) with the screw driver (H6) to lock P1 and P2 to the back legs (P4) as illustration below.

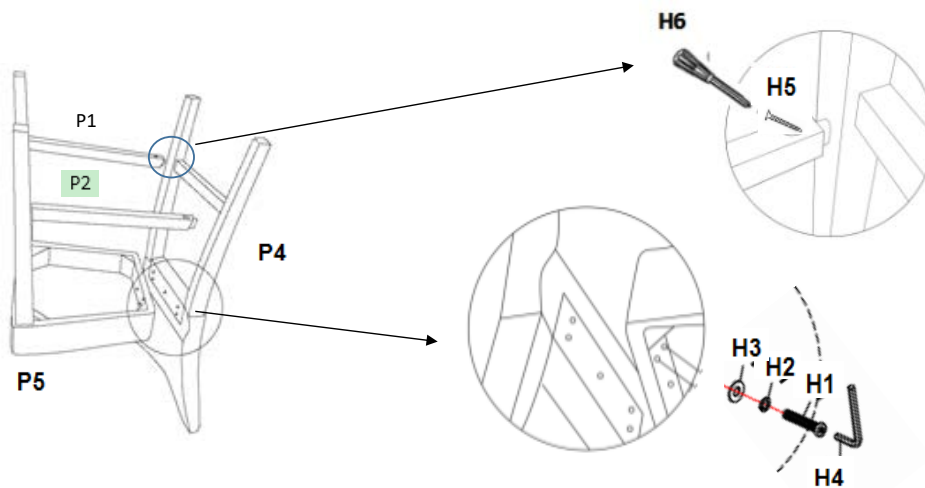

Step 6: Securely tighten all bolts with Allen Wrench and all screws with screw driver before turning the chair over and palce it upright on a level surface. Assembly is complet.



ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.