

# CAPRI OUTDOOR POWER MOTION RECLINER 12C057A-W-2-PM

#### 12C057A-W-2-PN 267853

# **Assembly Instruction**

#### **Parts List:**


1 41 65 2.50			
REF	DESCRIPTION	IMAGE	QTY
А	SOFA SEAT		1
В	SOFA BACK		1

#### **Hardware List:**


REF	DESCRIPTION	IMAGE	QTY

#### Diagram:

### Step 1

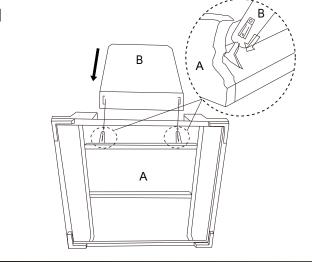

## Step 2

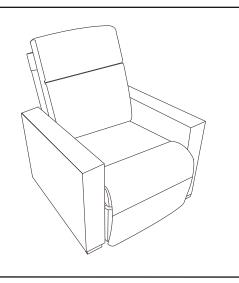

#### **Assembly Steps:**

Tip-Remove protective wrapping and lay all parts on floor. Indentify all parts packed in carton against attached parts list to make sure all parts are presented.

Step 1: Please turn over the base face down on sofa and smooth surface. You have inserted it all the way. If you experience difficulty, insert the shaft into the bushing portion by using a twisting motion as you insert. Step 2: Help the chair up, Then the chair is now ready for use.

NOTE: IT IS USER'S RESPONSIBILITY TO MAKE SURE ALL PARTS ARE ASSEMBLED AND TIGHTENED PROPERLY AND SECURELY.