



Mateo Collection: Twin/Full Bunk Bed

7030-01105 KIT

4242 Frame Rails/4243 Bunk Ends



(Scan code for instructional video)

PARTS LIST

BOX 1: 4243 Mateo Twin/Full Bunk Ends


Part #	Picture	Description	Quantity
S0080END		Mateo Twin/Full Bottom Left Bunk End	1
S0081END		Mateo Twin/Full Bottom Right Bunk End	1
S0073END		Mateo Twin Top Bunk End	2

BOX 2: 4242 Mateo Twin/Full Bunk Frame

Part #	Picture	Description	Quantity
S1001SRL		5/4 x 6 x 75 Mattress Rail	2
S1010SRL		5/4 x 4 x 75 Mattress Rail	2
541750001		5/4 x 4 x 75 Guard Rail	4
149383/40		Twin Individual Slat	3
140533/40		Full Individual Slat	3
5040-43183		7MM x 100MM Decorative Lag Bolt	32
5040-35410		#6 x 1 1/4 Phil Flat Slat Scew	20
ALNWR		4MM Allen Wrench	1
PWRDD		4MM Power Drill Driver	1
FLDWL		3" Fluted Dowel	4

Make sure you have all parts before beginning assembly. If you need a part, contact Living Spaces

COMPLETED ASSEMBLY

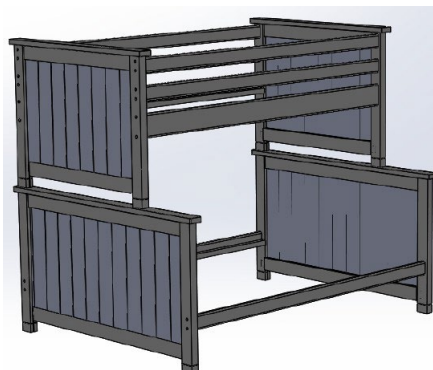


TOOLS REQUIRED: Phillips Head Screwdriver - recommended: Drill for 4mm driver and phillips bit (not included)

WHEN USING THE 4mm DRIVER WITH A DRILL, MAKE SURE THAT THE 4mm DRIVER IS FULLY SEATED INTO BOLTS BEFORE TURNING...GIVE THEM A PUSH, YOU'LL FEEL THEM SETTLE IN COMPLETELY.

BE SURE TO JUST **START** LAGS INTO THE HOLES ON THE FRAME RAILS FOR ASSEMBLY. SPEND TWO ROUNDS TIGHTENING LAGS SLOWLY AROUND EACH BED SURFACE SO THAT YOU DON'T BREAK OUT THE MATTRESS/GUARD RAILS BY DRIVING LAGS IN CROOKED.

ASSEMBLY INSTRUCTIONS

- 1) Attach two 3" tall mattress rails to two bottom end assemblies with 8 lag bolts and tighten per above instruction.
- 2) Attach two 5" mattress rails and four 3" guard rails to top end assembly with 24 lag bolts and tighten per above instruction.
- 3) Place four wooden dowels in the four holes of the two caps of set up bottom bunk assembly. (2 per end piece)
- 4) Place the top bunk assembly on the bottom bunk assembly, ensuring that the dowels go into the holes drilled in the bottom of the posts for the top bunk ends. All 4 dowels should go into a top post.
- 5) Roll out Slat Kit across top bunk bed surface, resting on the mattress rail cleats, placing the outer two slats tightly against the bunk bed ends. Install a Slat screw through the slat into the cleat at each of the 4 corners of the bed. A split slat won't hurt anything if the screw holds the slat in place. Follow the same procedure for bottom bunk surface.
- 6) Lay 3 loose mattress slats into the 3 gaps build into the Slat Kit and install slat screw through slat into mattress rail cleats for all 6 loose slats (3 per bed surface) per diagram 2 of Slat Kit instructions.
- 7) Add mattress not to exceed 10 inches in thickness. See Safety Warning for details.

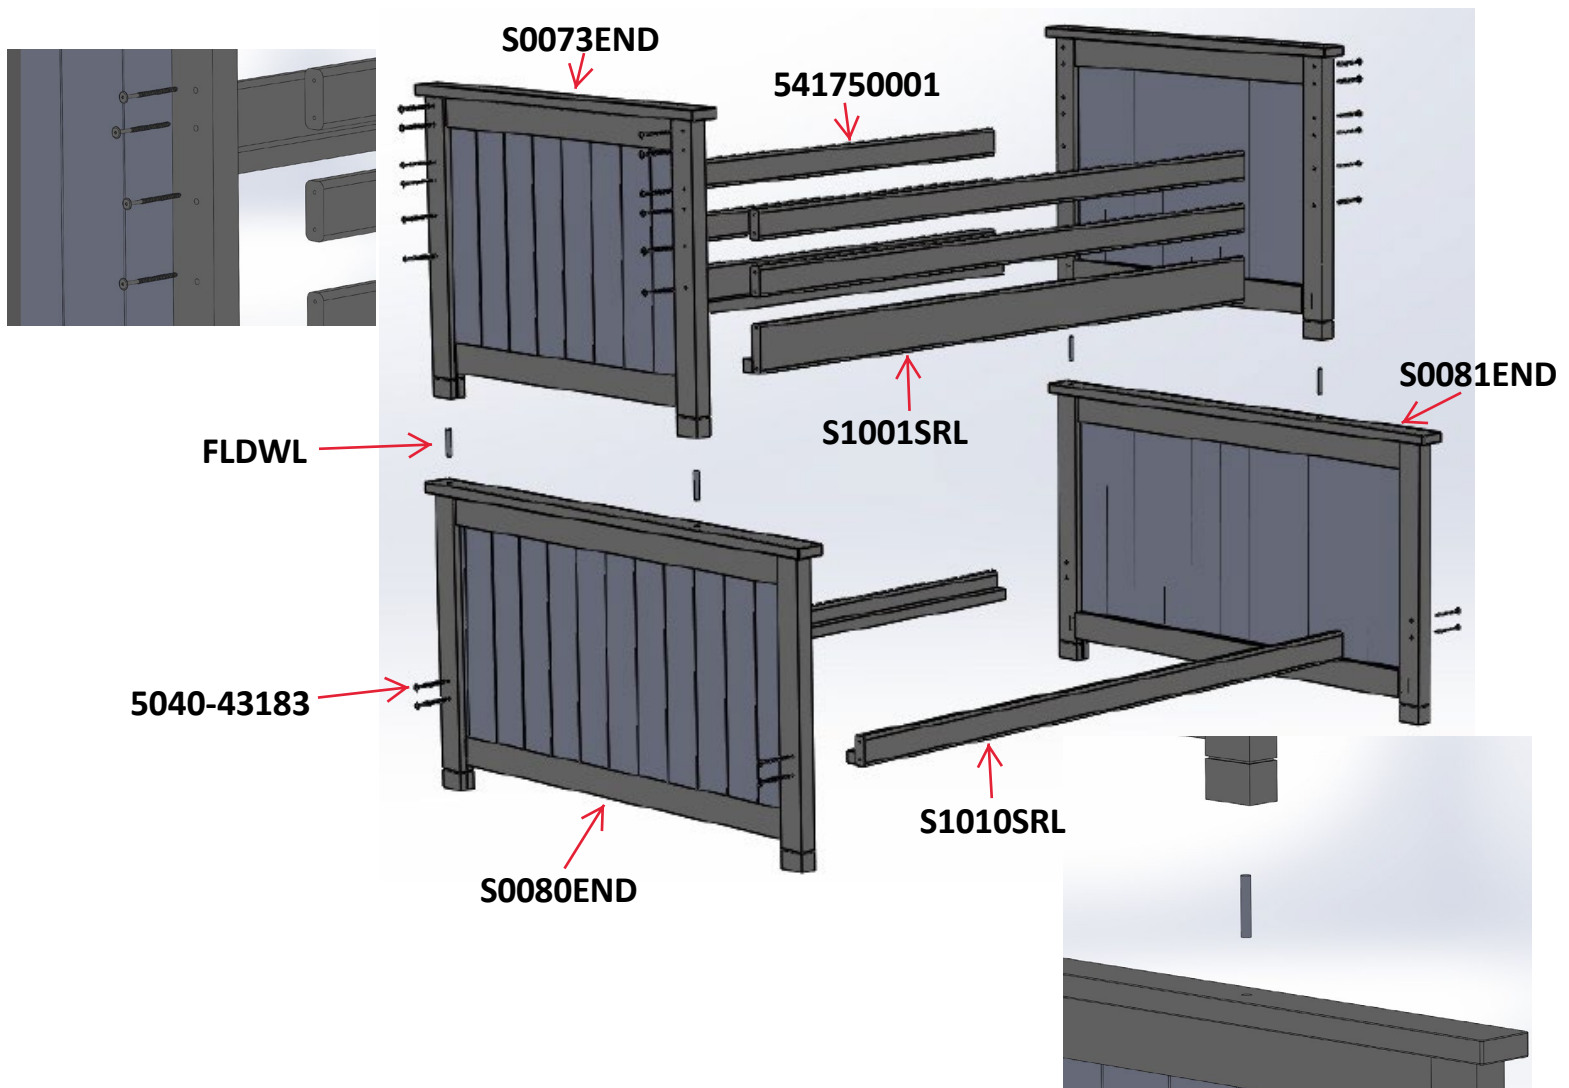

SAFETY WARNING

Our Bunk Beds have been tested by an Independent Laboratory and are certified to be in compliance with: ASTM F-1427, “Standard Consumer Safety Specification for Bunk Beds” and U.S. Government specifications 16 Code of Federal Regulations, parts 1213 and 1513.

SAFETY WARNINGS

1. Follow the information on the warnings attached to the upper bunk end structure and on the carton. Do not remove this label.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Top surface of mattress must be at least **five inches** (127mm) below the upper edge of top guard rails.
4. Do not allow children less than six years of age to use the upper bunk.
5. Periodically, check and ensure that the guardrail, ladder and other components are in their proper position, free from damage and that all connectors are tight.
6. Do not allow horseplay on or under the bed and prohibit jumping on the bed and ladder.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder or bed end for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact Living Spaces for replacement parts.
10. Use of a night-light may provide added safety precautions for a child using the upper bunk.
11. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall. (This applies only to bunk beds without two full-length guardrails.)
12. Always use guardrails on both long sides of the upper bunk.
13. The use of water or sleep flotation mattress is expressly prohibited.
14. Keep these instructions for future reference.

STRANGULATION HAZARD

15. Never attach or hang items to any part of the bunk bed that are not designed for use with the bed for example, but not limited to hooks, belts and jump ropes.

SIZE OF MATTRESS AND FOUNDATION

Your Twin bed is designed to use a mattress 37”-39” in width and 74” - 75” in length.

Your Full bed is designed to use a mattress 52”- 54” in width and 74” - 75” in length.

The total thickness of mattress and foundation (slat kit, bunk board, etc.) combined must not exceed **10”**.

Note: There must be at least 5” from mattress sleeping surface to top edge of guardrail.


REPLACEMENT PARTS

Replacement parts, including additional guardrails, may be requested from Living Spaces, usually at a cost.

Scan Code for Instructional video




Diagram 1

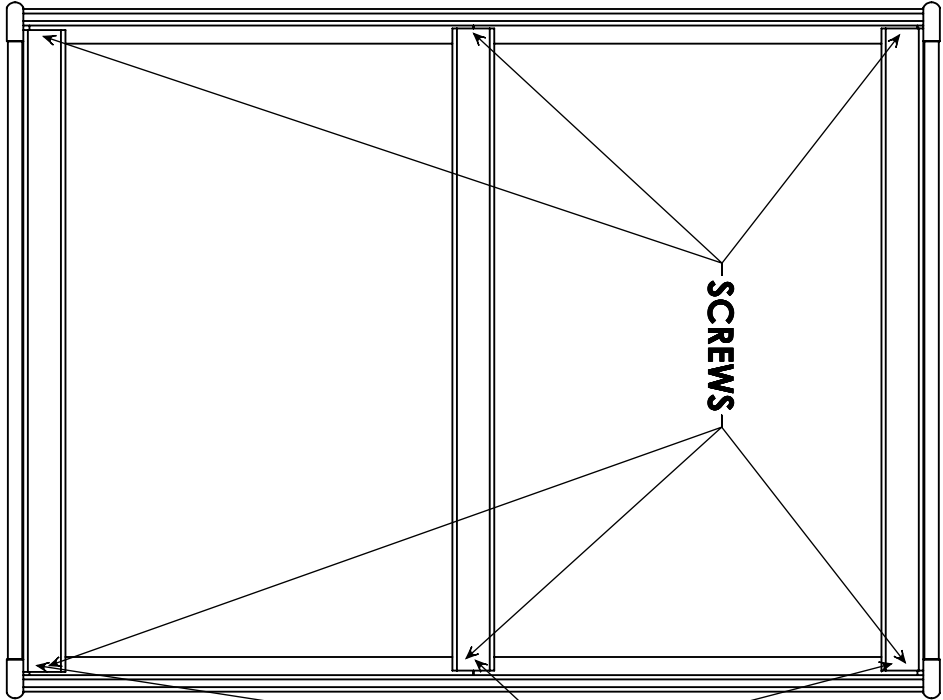

Installation of individual slats for use with
Bunkie Board
(Bunkie Board sold separately)
See your retailer for purchase of Bunkie
Board

When used with a slot roll, the three
individual slats should be placed evenly in the gaps
and underneath the strapping before fastening.

Diagram 2

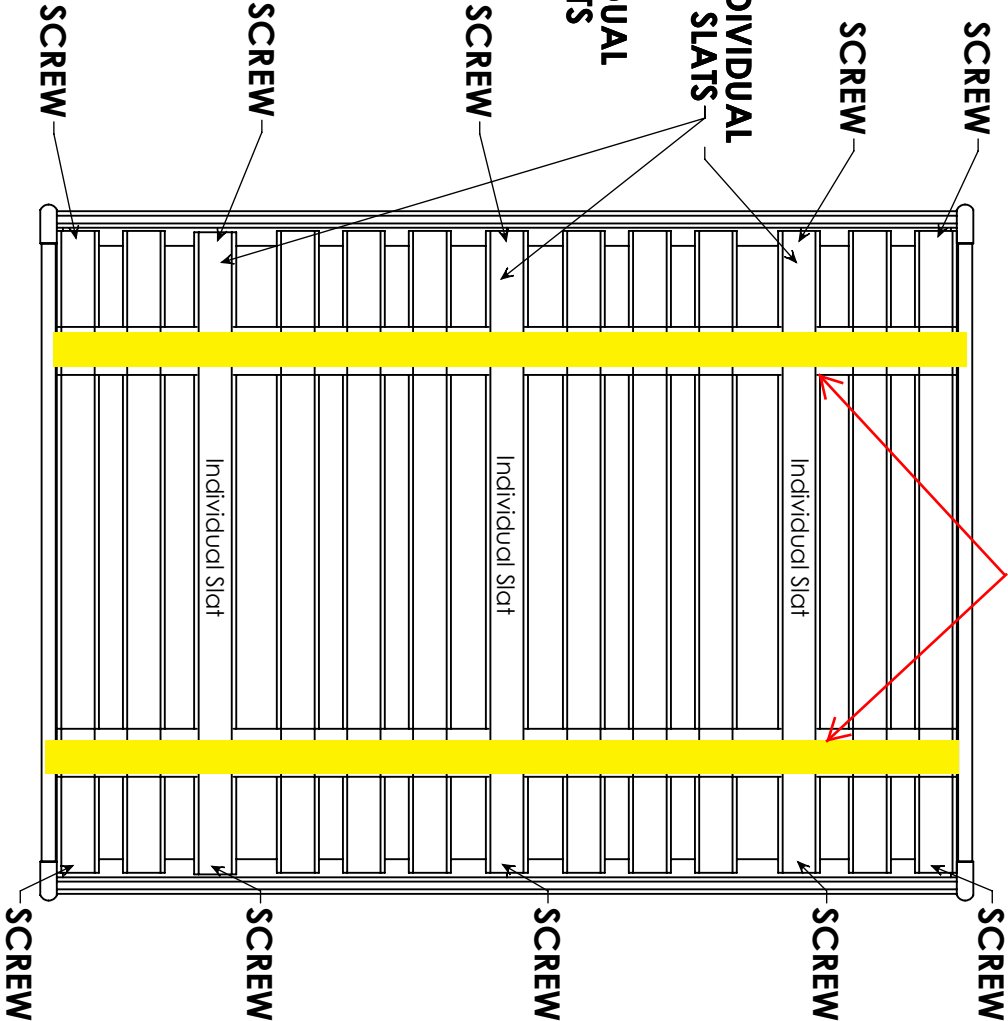

Installation of individual slats for use with
Slot Roll
(Slot roll sold separately)
See your retailer for purchase of Slot Roll



7030-01205 KIT

4684 Ladder






(Scan code for instructional video)

Summit/Mateo Collection: Ladder


PARTS LIST

BOX 1: 4684 Summit/Mateo Ladder

Part #	Picture	Description	Quantity
S0050FFR		Summit/Mateo Ladder Assembly	1
5045-65306		Ladder Hook	2
5040-35408		#8 x 1 1/4" Phil Flat Zinc Screw	8

Make sure you have all parts before beginning assembly. If you need a part, contact Living Spaces

COMPLETED ASSEMBLY

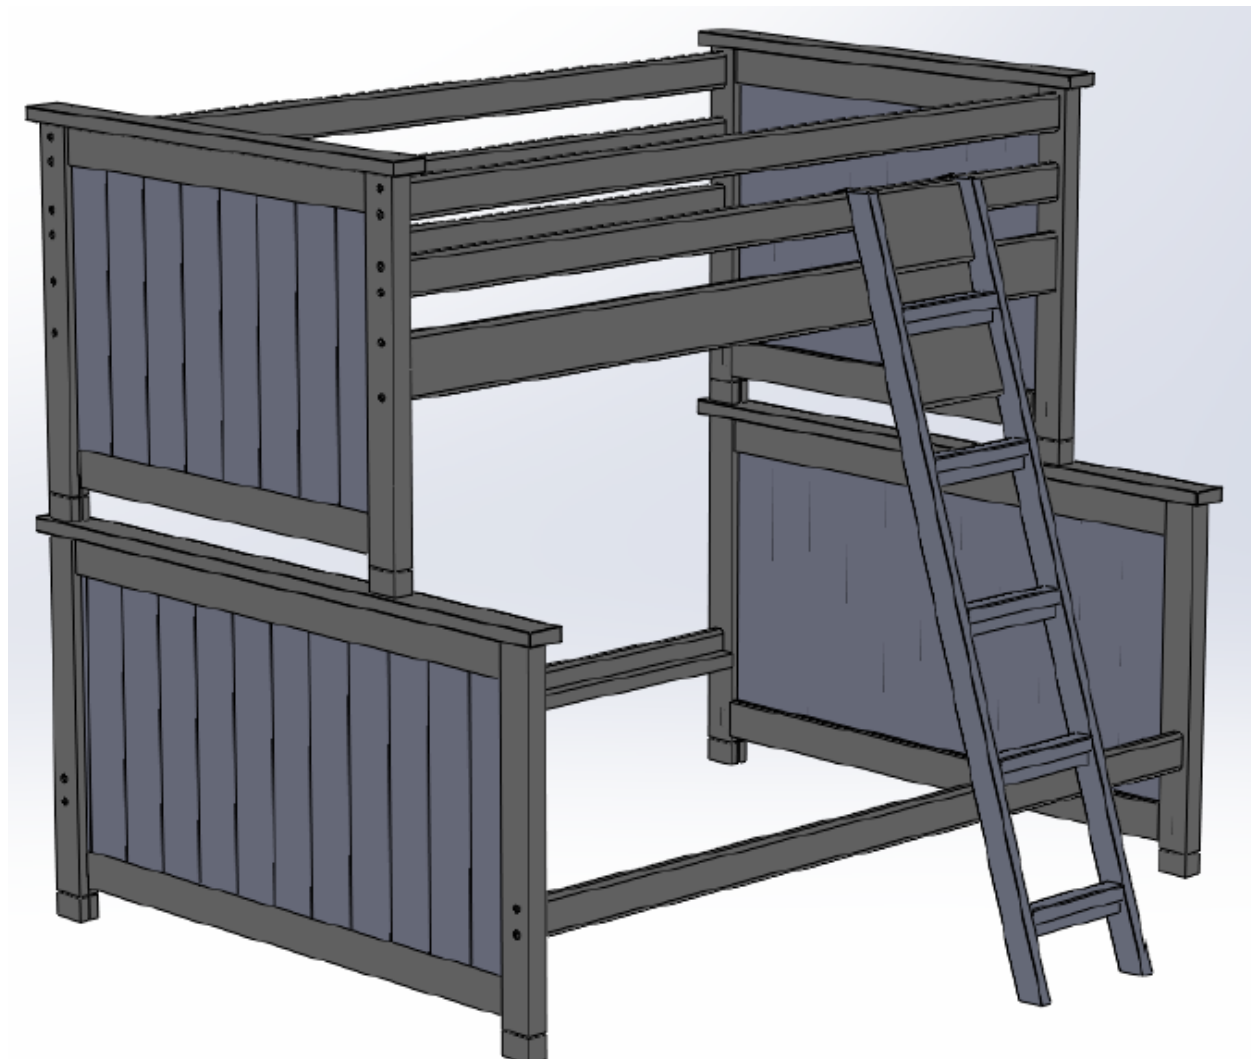

TOOL REQUIRED:

1. Phillips Head Screwdriver


TOOL RECOMMENDED:

1. Electric drill with phillips bit

ASSEMBLY INSTRUCTIONS:

- 1) Locate the pre-drilled holes in the back of the ladder.
- 2) Attach the ladder hooks hook-side-out with 4 screws, 2 on each hook.
- 3) Determine the best placement for your ladder on the top bunk, being mindful of your child's accessibility and safety. For Mateo bunks, the middle guard rail will need to be used. For Summit bunks, the top guard rail can be used.
- 4) Secure ladder brackets to the guard rail using the remaining 4 screws, 2 on each hook, and tighten.

STEP 1

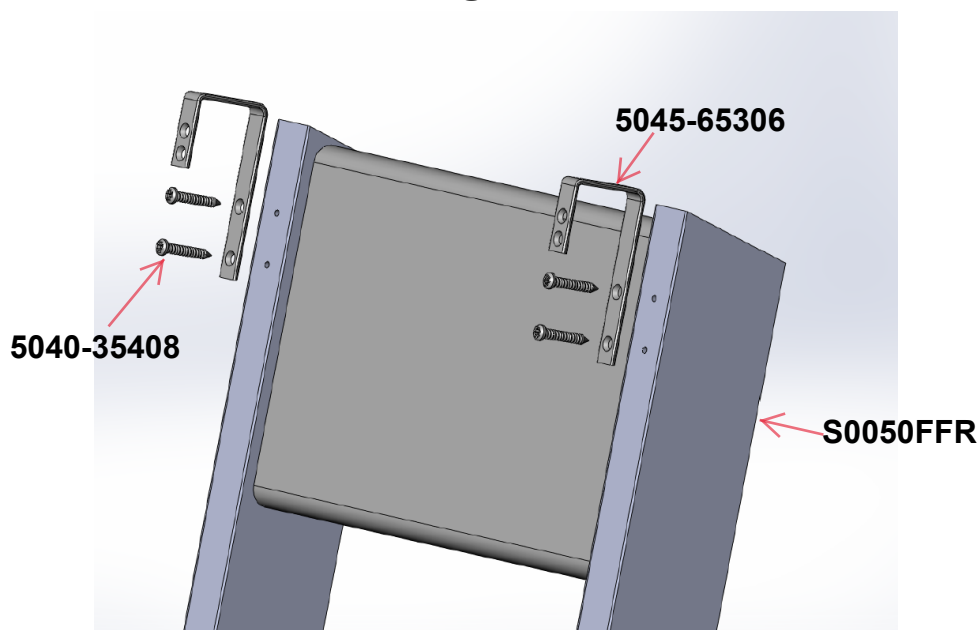

STEP 2

