



# ASSEMBLY INSTRUCTIONS

CROWN MARK : 0035A QUEEN BED (3+3)		
No	Part List	Qty.
A	Head Board	1 PC
B	Foot Board	1 PC
C	(L/R) Head Board Leg	2 PCS
D	Side Rail	2 PCS
E	Bed Slat	3 PCS
F	Bed Slat Support	3 PCS
No	Hardware List	Qty
G	CSK SCREW M4 x 32MM	6 PCS
H	JCBC BOLT M6 x 35MM	6 PCS
I	ALLEN WRENCH M4	1 PC
J	FLAT WASHER M6 X 13mm blk	6 PCS
K	1/4 X M6 SPRING WASHER	6 PCS


**STEP 1 :** Attach Head Board Leg ( C ) to Head Board ( A ) as shown using JCBC BOLT ( H )with Spring Washer ( K), Flat washer ( J) and securing with ALLEN WRENCH ( I ).

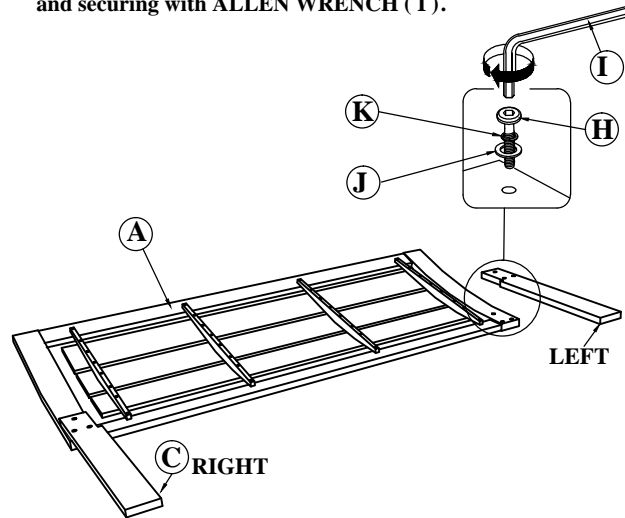

**STEP 2 :** Hook SIDE RAIL ( D ) TO HEAD BOARD ( A ) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD ( B ).

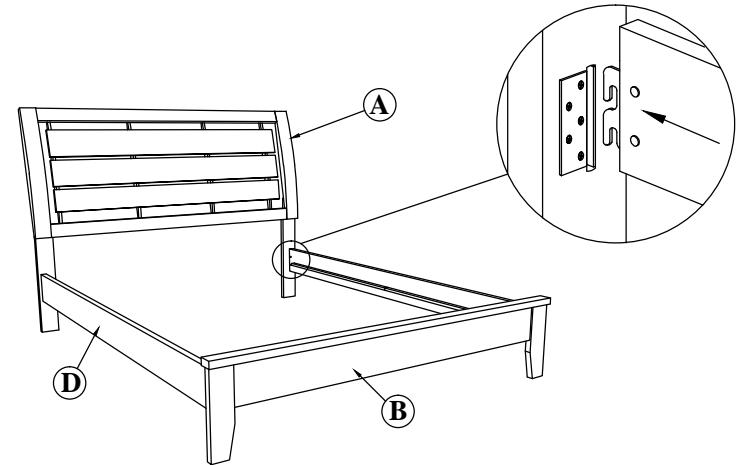

Fix the Bed Slats Support ( F ) to Bed Slats ( E ) as Shown and fix the Bed Slats to Side Rail ( D ) by using CSK Screw ( G ). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

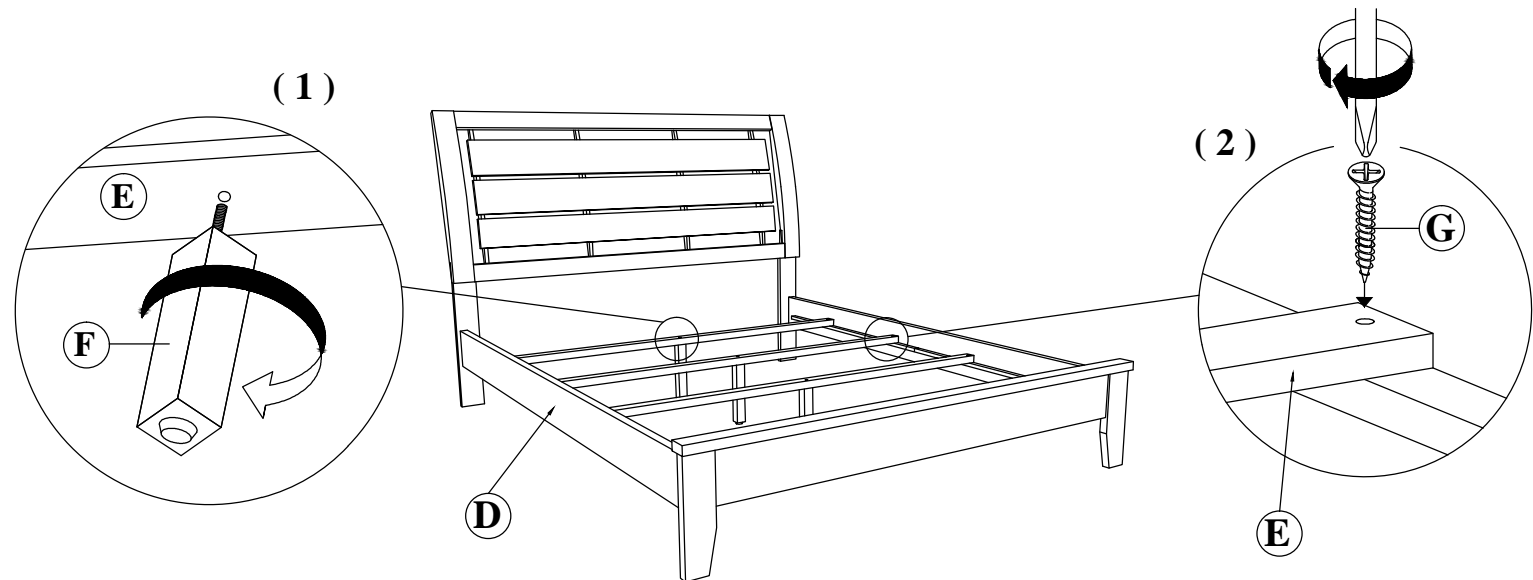

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.