









**ASSEMBLY INSTRUCTIONS****Description:** Tuscan Counter Stool**Important safety instructions:**


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.







**Pre-assembly:**

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

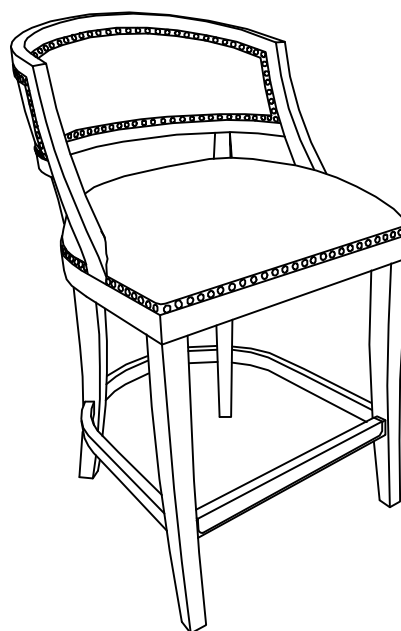**Parts List**

Item	Description		QTY
P1	Chair Top	 (P1)	1
P2	Front Left Leg	 (P2)	1
P3	Front Right Leg	 (P3)	1
P4	Back Legs	 (P4)	2
P5	Front Stretcher	 (P5)	1
P6	Left Stretcher	 (P6)	1
P7	Right Stretcher	 (P7)	1
P8	Back Stretcher	 (P8)	1

**Hardware List**

Item	Description		QTY
H1	Bolts $\phi 5/16"$ *2"L		8
H2	Lock Washers 5/16"		8
H3	Flat Washers 5/16"		8
H4	Allen Wrench 5/16"		1
H5	Wood Screw #8*1-1/2"L		8
H6	Screw Driver		Not included

## Assembly Procedures:

Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert back legs (P4) to the bottom of chair top(P1), and insert back stretcher (P8) between the legs, loosely attach legs as shown below image 1.






- |        |              |            |   |
|--------|--------------|------------|---|
| (H1)x4 | Bolts        | Ø5/16"*2"L |  |
| (H2)x4 | Lock Washers | 5/16"      |  |
| (H3)x4 | Flat Washers | 5/16"      |  |
| (H4)x1 | Allen Wrench | 5/16"      |  |

Image 1



Step 2. Insert front right leg (P3) to the bottom of chair top(P1), and insert right stretcher (P7) between the legs, then loosely attach front right leg as shown below image 2.



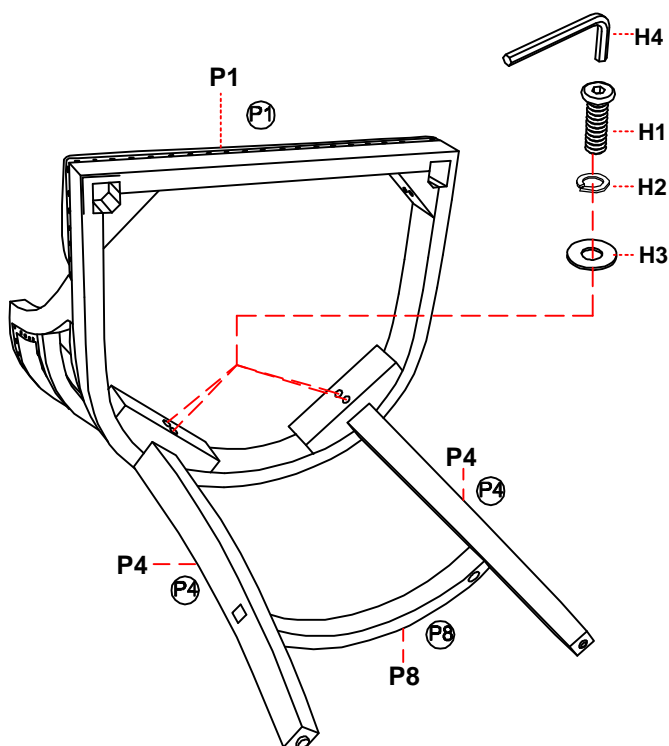


- |        |              |            |   |
|--------|--------------|------------|---|
| (H1)x2 | Bolts        | Ø5/16"*2"L |  |
| (H2)x2 | Lock Washers | 5/16"      |  |
| (H3)x2 | Flat Washers | 5/16"      |  |
| (H4)x1 | Allen Wrench | 5/16"      |  |

Image 2



Step 3.

- 1) Insert front left leg (P2) to the bottom of chair top(P1), and insert front stretcher (P5) and left stretcher (P6) to the assembled legs, then loosely attach front leg as shown below image 3.
- 2) Make sure the screw holes face to the bottom of leg, then tighten all screws (H5) with screw driver (not provided) see image 4.

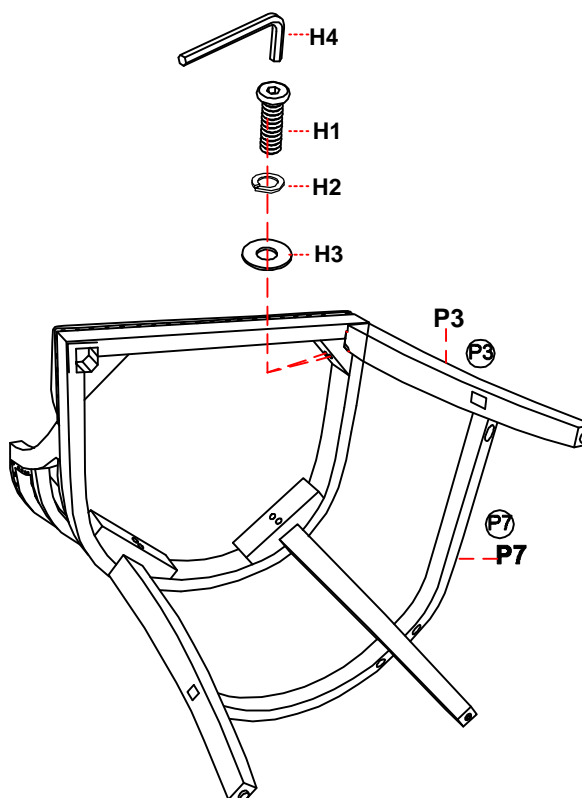




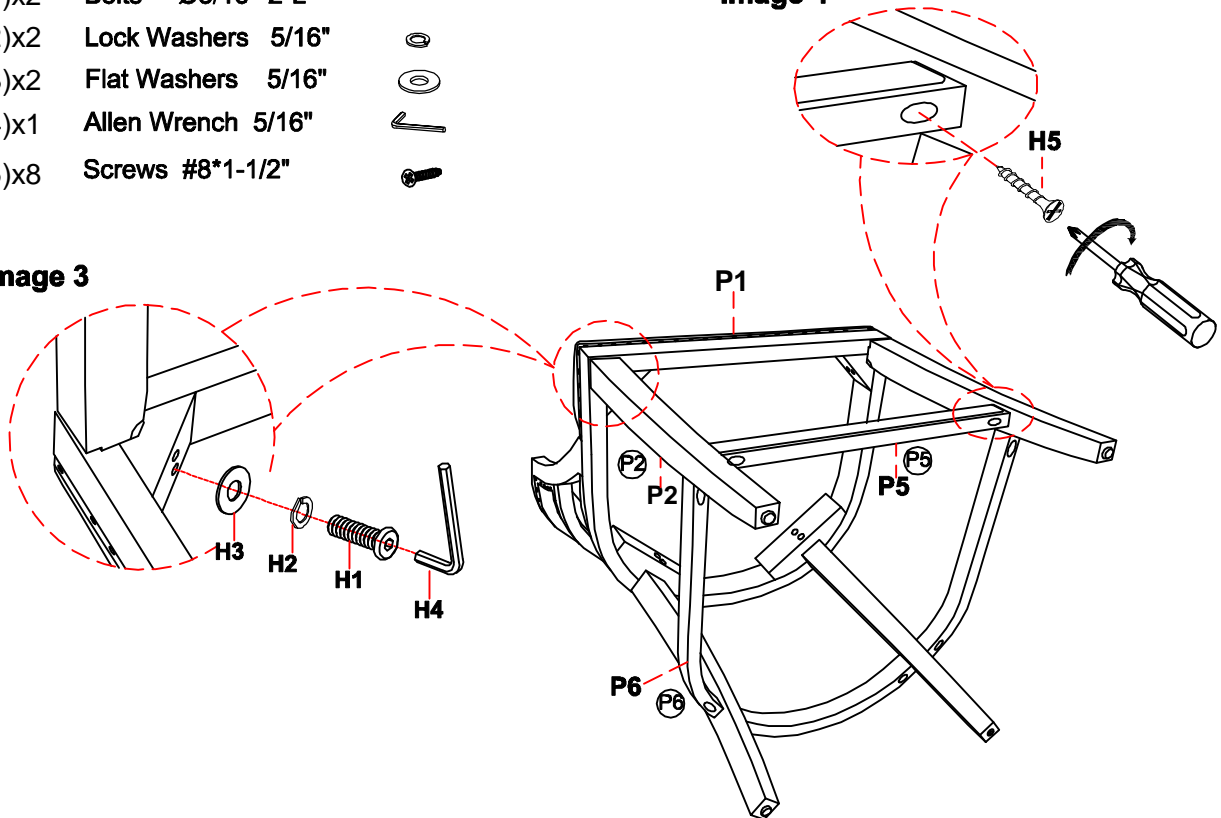
(H1)x2	Bolts	Ø5/16"*2"L	
(H2)x2	Lock Washers	5/16"	
(H3)x2	Flat Washers	5/16"	
(H4)x1	Allen Wrench	5/16"	
(H5)x8	Screws	#8*1-1/2"	


Image 4

Image 3



Step 4.

- 1) Make sure the stool is level and securely tighten all bolts by Allen wrench (H4). Turn the assembled stool to an upright position
- 2) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

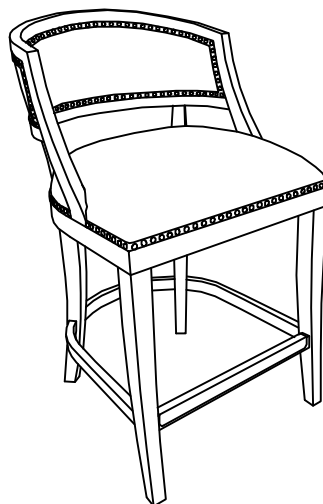

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase