


# Chest Bed Instructions

## Components of Bed:

- Headboard/Footboard
- Spacer Kit
- 2 Pedastals
- 8 Pan Head Screws & Washers
- 8 - 1 ¼" flat head wood screws

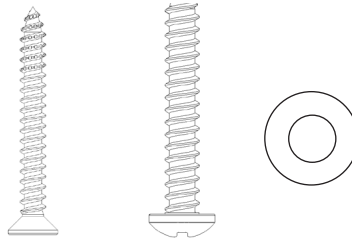

## Tools Required:

- Phillips Head Screwdriver  
(Power Screwdriver recommended)

### Step 1: Initial Pedestal Setup

- Place pedestals side by side in the area where the bed will be located. Remove drawers closest to the headboard and footboard. Number each so they can correspond with the specific opening (**blank pedestals only, remove top - fig. 2**)

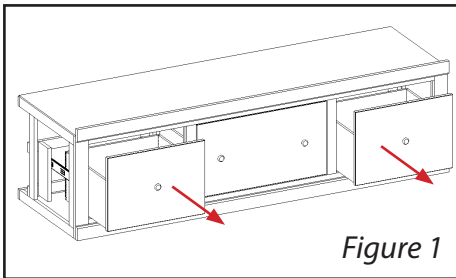


Figure 1

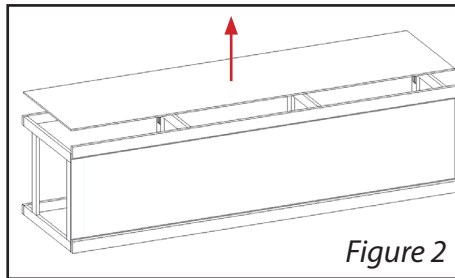


Figure 2



### Step 2: Spacer Kit

#### (INCLUDED):

- 4 spacer boards (1 attached to smaller of the two plywood panels)
- (8) 1 ¼" flat head wood screws
- 2 plywood panels
- Lay spacer board flat on top of cleats (on backside of pedestal). Attach with 8 - 1 ¼" flat head wood screws (fig. 3) - (twin beds do not have spacer kits)

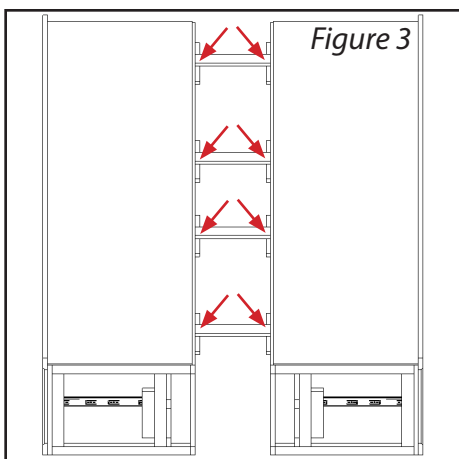


Figure 3

### Step 3: Headboard & Footboard

- Align headboard with pedestals. Attach headboard by screwing 4 pan head machine screws with washers into the metal inserts located on the headboard posts. (fig. 4 & 5).
- Align footboard with pedestals. Attach footboard by screwing 4 pan head machine screws with washers into the metal inserts located on the footboard posts (fig. 4 & 5).

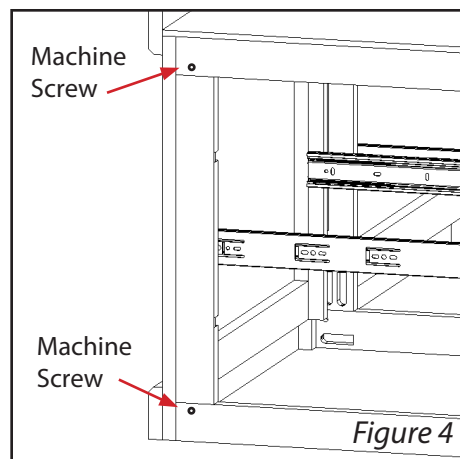


Figure 4

### Step 4: Complete

- Place drawers back in the cabinet in the same location they were originally located.
- If assembling a bed with blank pedestal, replace top now.

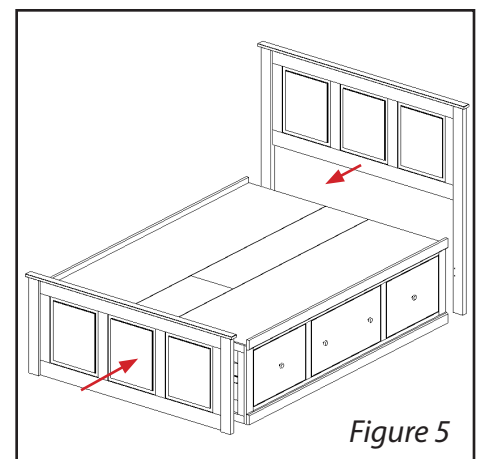


Figure 5

### Important:

When assembling headboard or footboard to pedestals with included screws and washers, do not tighten screws completely until all four have been started. Once all four screws are engaged into metal inserts tighten each screw while holding the headboard or footboard tight to the bed.