

PERRY STOOL – ASSEMBLY INSTRUCTIONS

LS20PERCSBUF

UNPACKING:

Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of the packaging materials.

Parts Included: Refer to Figure 1.

1. Metal Base – x 1 (A)
2. Leather Seat – x 1 (B)
3. Bolt – x 4 (C)
4. Washer – x 4 (D)
5. Allen Wrench – x 1 (E)

Assembly Procedure: Refer to Figure 2.

1. Place Metal Base (A) face up on a clean & padded floor surface.
2. Place the Leather Seat (B) on the top of Metal Base (A). Make sure screw holes in the Metal Base (A) & Leather Seat (B) align.
3. Secure Metal Base (A) in place with the Washer (D) and Bolt (C) using the Allen Wrench (E). Repeat this step until all Bolt (C) are secured on each corner of the Leather Seat (B).
4. Your product Perry Stool is ready to use.

FIGURE 1.


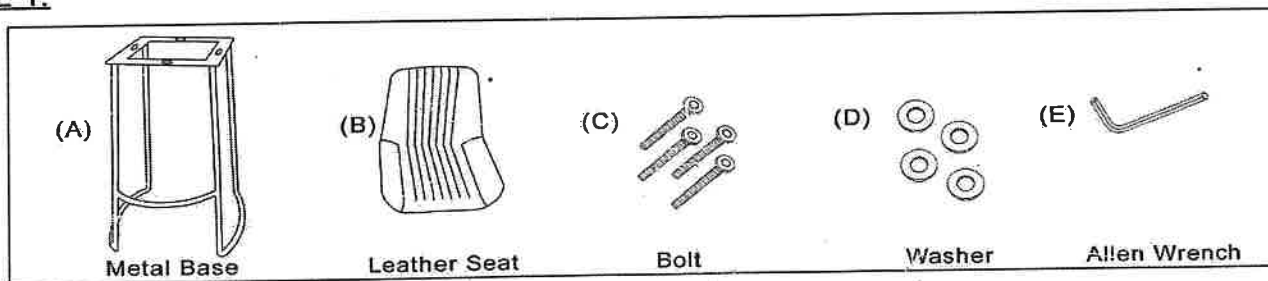


FIGURE 2.

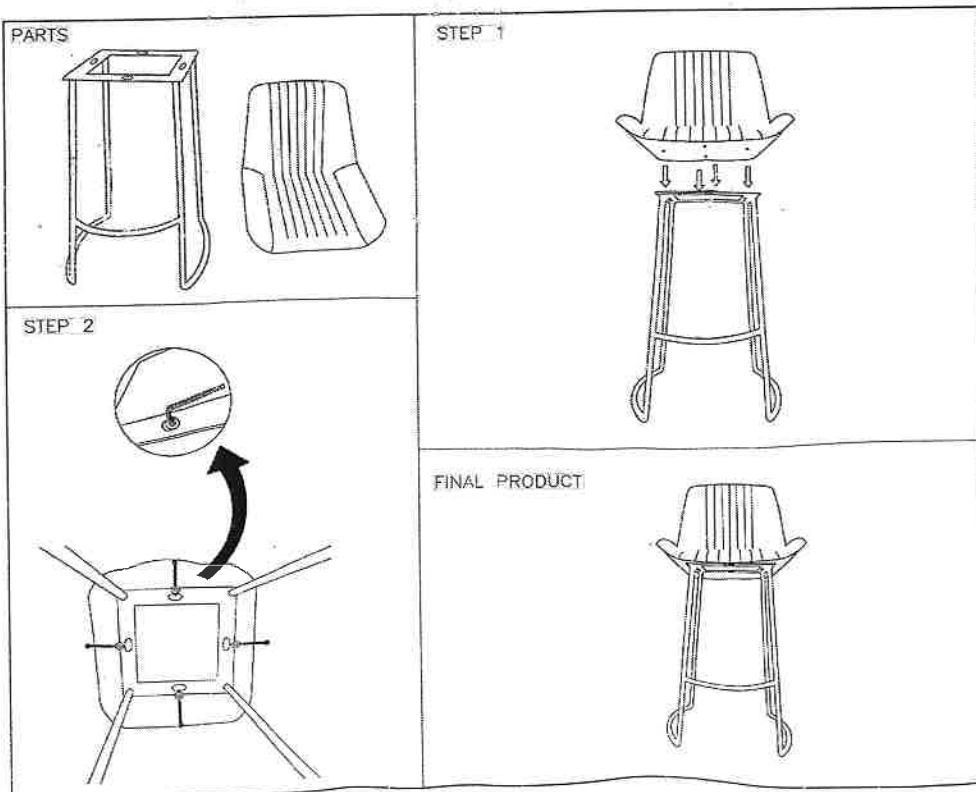


Caring & Cleaning:

To clean, wipe with a soft, dry cloth.

DO NOT USE cleaners, scouring pads, etc.


SAVE THESE INSTRUCTIONS

Assembly Instruction

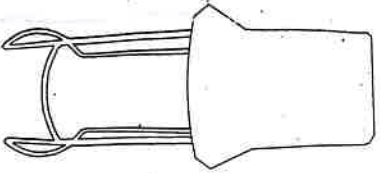



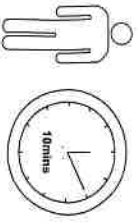


Note:


- Please read this instruction carefully before assembly
- After approx 5 weeks, tighten all the screws and connecting parts to ensure stability and security
- The product is not suitable for outdoor use
- Keep away from exposure, fire (heat sources) and damp.



Part List

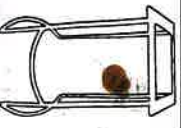A 7mm 1X 	B M7X40 4BX 	C M9 4X 		
① 	② 			

STEP

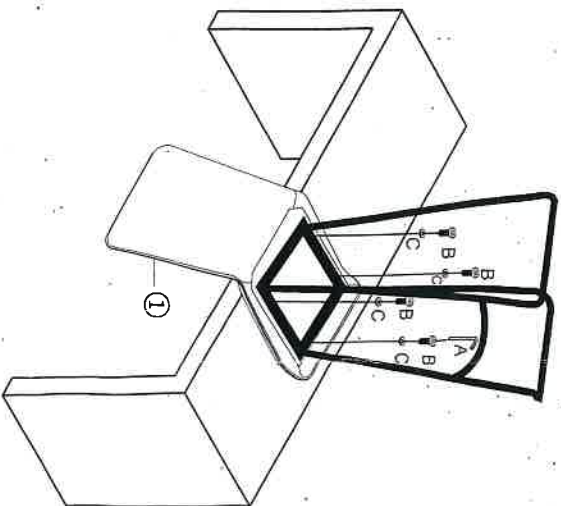

FINISHED

