
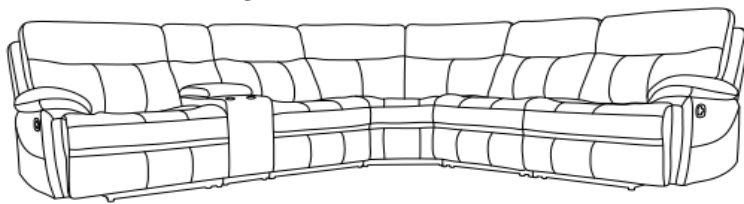


Assembly Instructions


Components:

- A: LAF Recliner Base (x1) E: Armless Chair Base (x1) I: Wedge Right Back (x1) M: RAF Recliner Back (x1)
- B: LAF Recliner Back (x1) F: Armless Chair Back (x1) J: Armless Recliner Base (x1) N: Power Wire (x3)
- C: Console Base (x1) G: Wedge Base (x1) K: Armless Recliner Back (x1) O: Power Transformer (x3)
- D: Console Back (x1) H: Wedge Left Back (x1) L: RAF Recliner Base (x1)

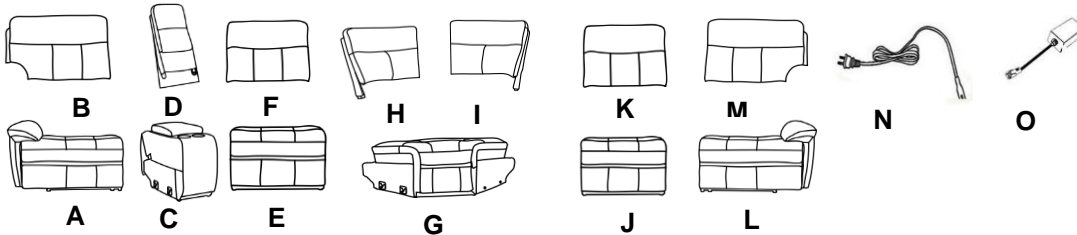

Step 1: Remove the transformer boxes(N&O) which are tied to the steel mechanism motor at the bottom of A,J and L.

Step 2: Assemble the backrests as seen below. Insert all recliner backs into the base of each individual recliner. And then connect the all individual pieces using the brackets as below picture shows.

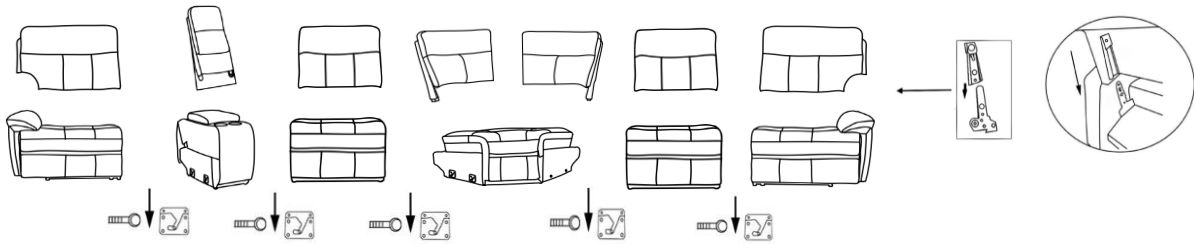

Step 3: Wire connection as below picture in circle shows. Wire for power headrest, black to black.

Power connection: connect the plug from the recliner base A,J and L to the power transformer(O) and then connect the power wire(N) to the other end of the power transformer(O) as below picture shows.

