email: <u>info@riverside-furniture.com</u>

Bradford Home Office Assembly Instructions

Made in Viet Nam

Page 1 of 2

Warning:

Desk Top

1 pc.

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture MUST BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.

1 pc.


Allen Head Bolt


5/16" x 2-3/8"

46630 Writing Desk

Components and Hardware List Back Leg (Left) Back Leg (Right) Front Leg (Left) Front Leg (Right)



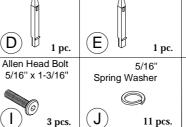






Step 1: Do not fully tighten the bolts




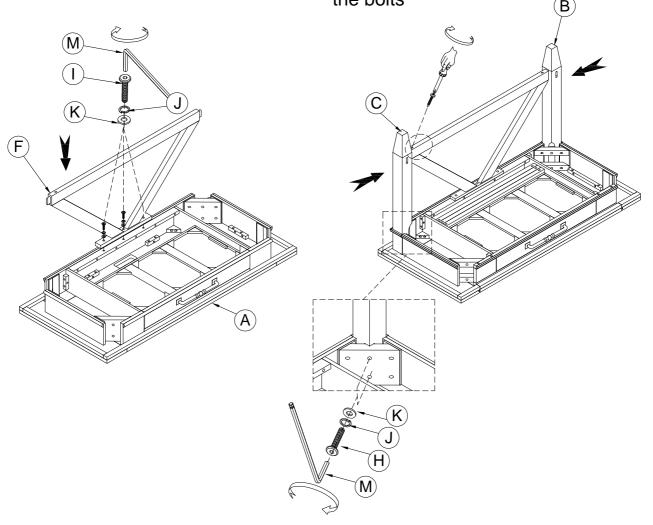

Riverside FURNITURE ail: info@riverside-furniture.com Bradford Home Office Assembly Instructions Page 2 of 2

Made in Viet Nam

Writing Desk

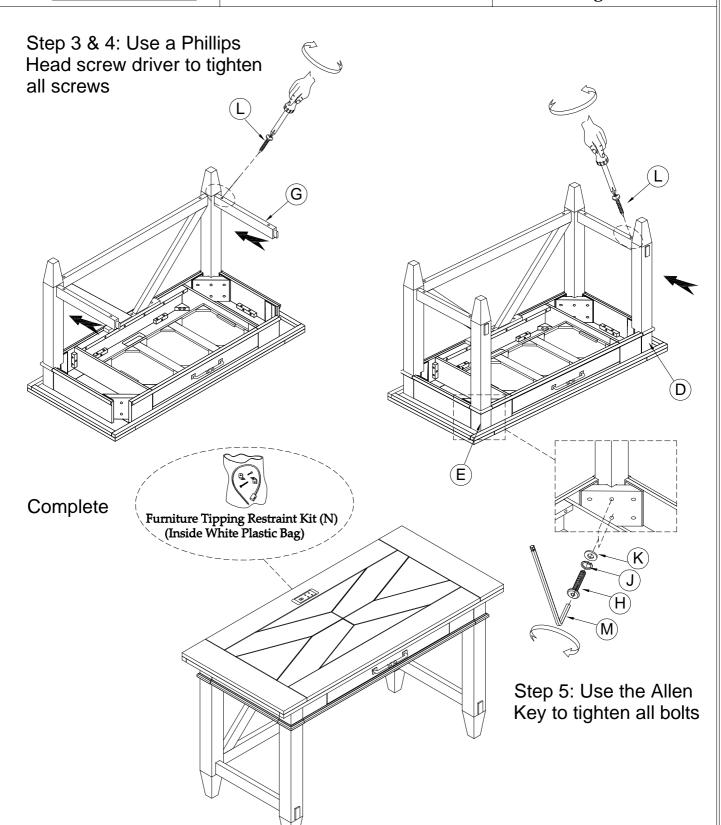

For product and personal safety, a Furniture Tipping Restraint kit has been included with this unit which can help to minimize the risk of the unit accidentally tipping forward, if used and properly installed per the kit manufacturer's instructions.