




ASSEMBLY INSTRUCTIONS

LUCA 3 DRAWER PANEL/BUNK/DAYBED UNDERBED STORAGE

ITEM NO: Y2103W-347	SKU: 314670
<i>Y2103B-347</i>	314582
Y2103G-347	314626

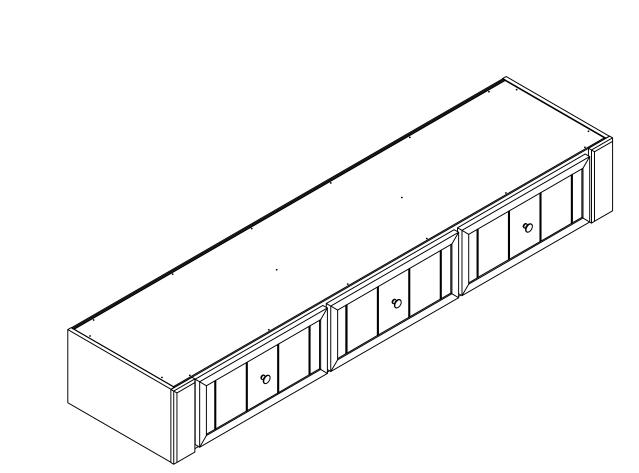




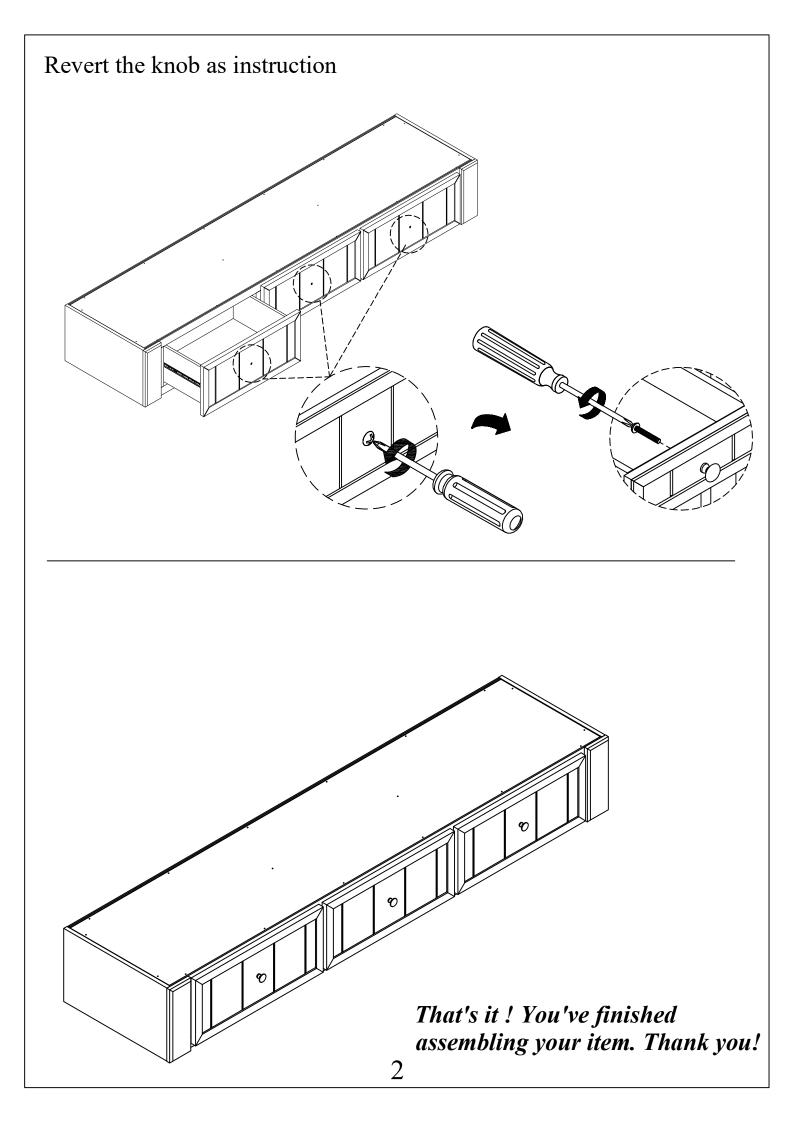




ASSEMBLY INSTRUCTIONS

LUCA FULL PANEL BED ITEM NO: Y2103W-333/334 SKU: 314657/314658 Y2103B-333/334 314569/314570 Y2103G-333/334 314613/314614

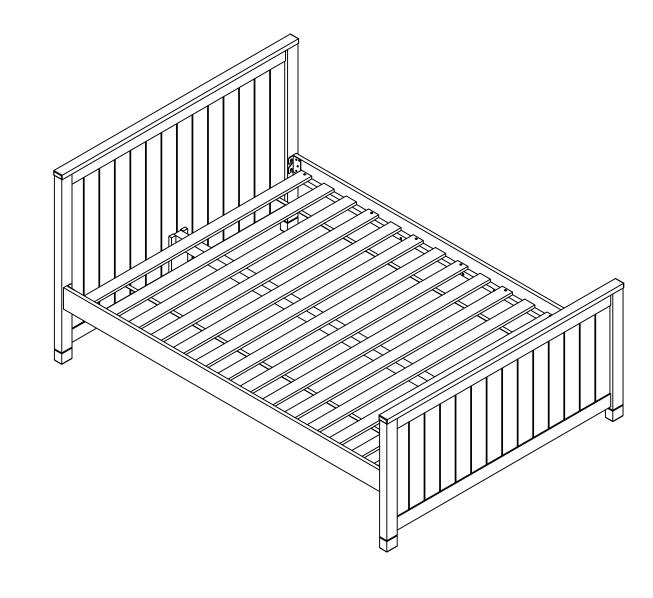



PART	SKU#	SKU# IMAGE DESCRIPTIO		N QTY	
A	1994F-A-W: (White) 1994F-A-B: (Blue) 1994F-A-G: (Grey)		Headboard	1	
B	1994F-B-W: (White) 1994F-B-B: (Blue) 1994F-B-G: (Grey)	Footboard			
Ē	1994F-E		Slats	1	
	BOX	X 2- FL RAILS PANEL BED			
PART	SKU#	IMAGE	DESCRIPTION	QTY	
C	1994F-C-W: (White) 1994F-C-B: (Blue) 1994F-C-G: (Grey)		Rails	2	
D	1994F-D-W: (White) 1994F-D-B: (Blue) 1994F-D-G: (Grey)		Slat support	1	

Z

Hardware List of Luca Full Panel Bed


Part	SKU#	IMAGE	DESCRIPTION	QTY
	1994F-1(8)	0	Bolts M8*20mm	8
2	1994F-2(14)	Banana	Screws 8#*30mm	14
3	1994F-3(1)		Allen key 60*22*4mm	1

Note: Screwdriver will be prepared by yourshelf. THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE: MUST TIGHTEN SCREWS PERIODIACLLY. WITH USE SCREW MAY ENCOME LOOSE CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

CLEANING INSTRUCTIONS:

After assembly, clean and polish the completed parts if necessary with soft cloth and industrial recognized furniture polish.

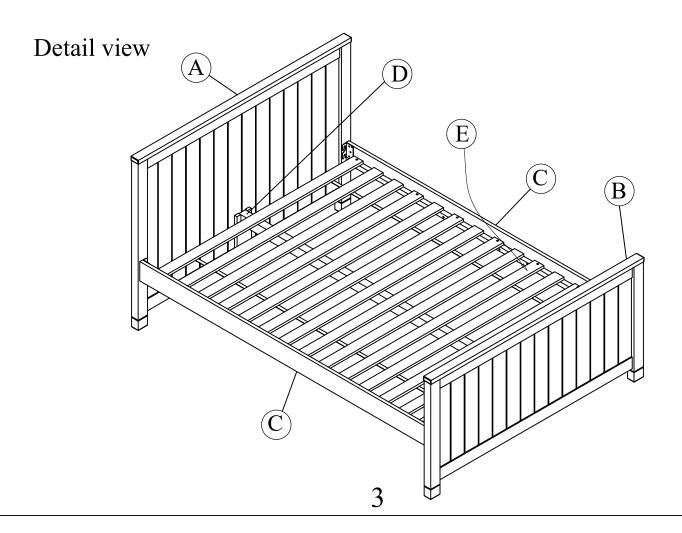

STEP 1:

⚠

- Attaching Bolt (1) to Pre-holes on Headboard (A), Footboard (B). Please be noted that "*should not tighten*" bolts.
 - Connecting the hook on Rail (C) to Bolt (1) and fasten again.
 - Pay attention to rail orientation.

