

## **ASSEMBLY INSTRUCTIONS**



BOX 1- TW BACK/RAILS DAYBED							
PART	SKU#	IMAGE	DESCRIPTION	QTY			
A	1992T-A-W: (White)		Back	1			
B	1992T-B-W: (White)		Rail	1			
BOX 2- TW ENDS/SLATS DAYBED							
PART	SKU#	IMAGE	DESCRIPTION	QTY			
<u>C</u>	1992T-C-W: (White)		Left End	1			
$\bigcirc$	1002T D W		Right End	1			
	1992T-D-W: (White)						
E			Slats	1			

### Hardware List of Twin Daybed

Part	SKU#	IMAGE	DESCRIPTION	QTY
1	1992T-1(4)	0	Bolt and nut M8*80mm	4
2	1992T-2(4)	<b>O</b>	Bolts M8*20mm	4
3	1992T-3(4)		Dowel Ø8*40mm	4
4	1992T-4(14)	(3) Managara	Screws 8#*30mm	14
5	1992T-5(1)		Allen key 60*22*4mm	1

Note: Screwdriver will be prepared by yourshelf.


THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE: MUST TIGHTEN SCREWS PERIODIACLLY. WITH USE SCREW MAY ENCOME LOOSE CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

#### **CLEANING INSTRUCTIONS:**

After assembly, clean and polish the completed parts if necessary with soft cloth and industrial recognized furniture polish.

# Detail view

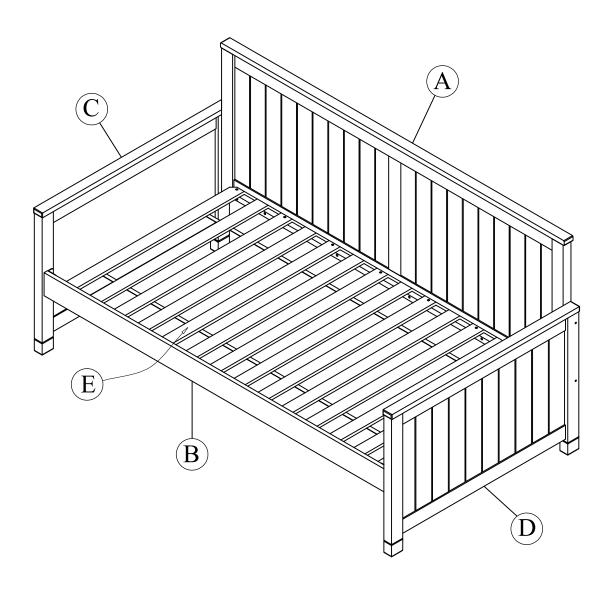


### STEP 1:

- Inserting the dowel (3) into the respective holes at Back (A)
- Assemble Side End (C), (D) to Back (A) by Bolt+nut (1)

**⚠** Distinguishing the Ends (C), (D).





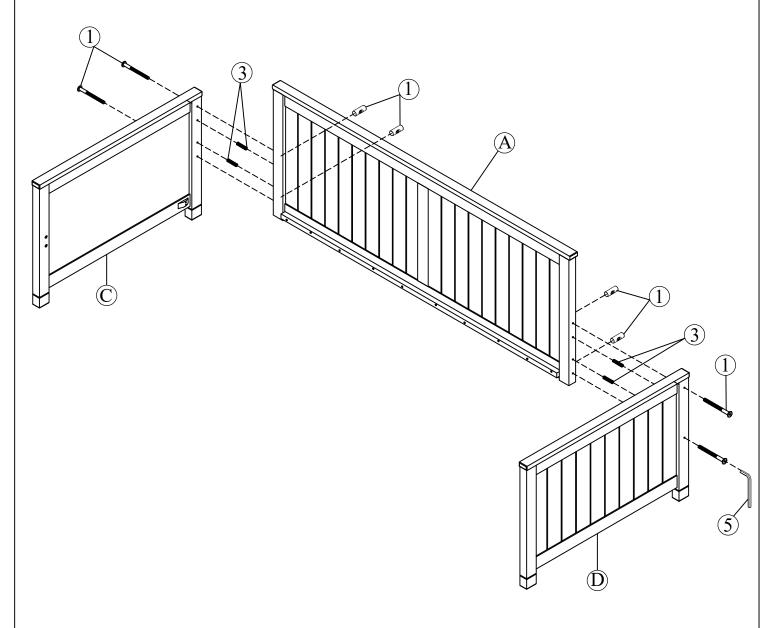


1=4 Pcs

#### STEP 2:


- Attaching Bolt (5) to Pre-holes on Side End (C) and (D).
- Connecting the hook on Rail (B) to Bolt (5) and fasten.

Pay attention to rail orientation.

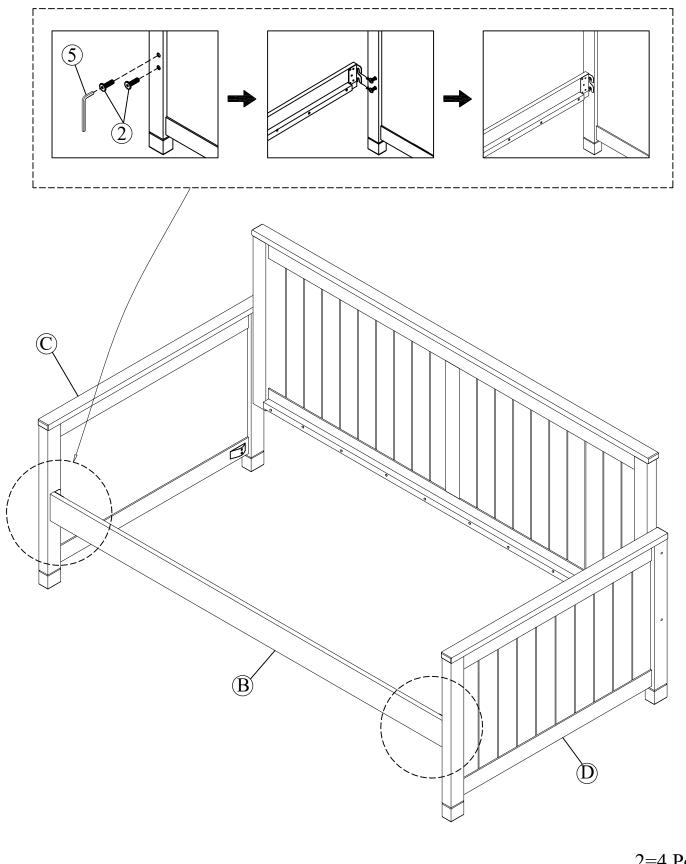


### **STEP 3**:

Please fasten slats (E) by screw (4) into corresponding holes.

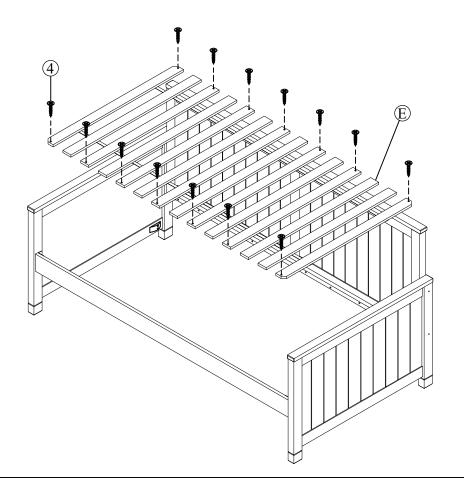

4=14 Pcs

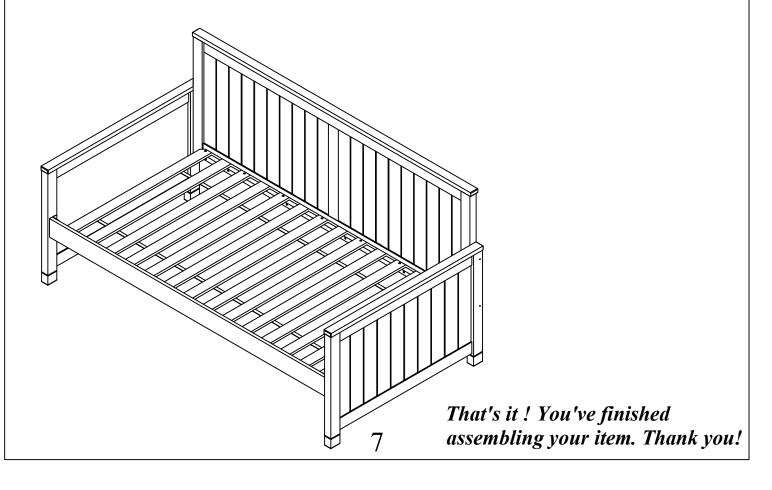




### ASSEMBLY INSTRUCTIONS

LUCA PANEL/BUNK/DAYBED TRUNDLE

*Y2103G-348* 314627

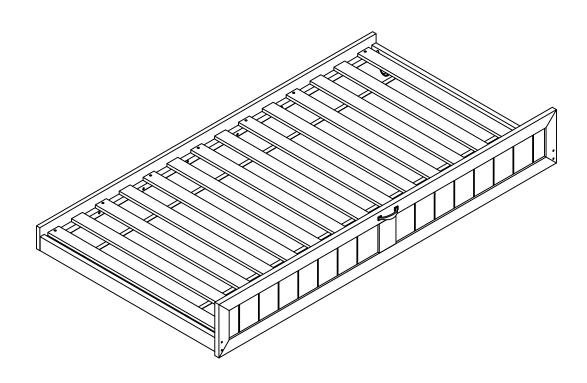

Part list					
PART	SKU#	IMAGE	DESCRIPTION	QTY	
A	1996-A-W: (White) 1996-A-B: (Blue) 1996-A-G: (Grey)		Front	1	
<b>(B)</b>	1996-B-W: (White) 1996-B-B: (Blue) 1996-B-G: (Grey)		Back rail	1	
<u>(C)</u>	1996-C-W: (White) 1996-C-B: (Blue) 1996-C-G: (Grey)		Side rails	2	
(D)	1996-D		Slats	1	

#### Hardware List of Luca Trundle

Part	SKU#	IMAGE	DESCRIPTION	QTY
	1996-1(8)	0	Bolt and nut M8*70mm	8
2	1996-2(2)		Bolts M4*20mm	2
3	1996-3(4)		Dowel Ø8*40mm	4
4	1996-4(14)	(3) Managang	Screws 8#*30mm	14
5	1996-5(1)		Handle	1
6	1996-6(1)		Allen key 60*22*4mm	1


Note: Screwdriver will be prepared by yourshelf.
THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE: MUST TIGHTEN SCREWS PERIODIACLLY. WITH USE SCREW MAY ENCOME LOOSE CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

### CLEANING INSTRUCTIONS:

After assembly, clean and polish the completed parts if necessary with soft cloth and industrial recognized furniture polish.

## Detail view

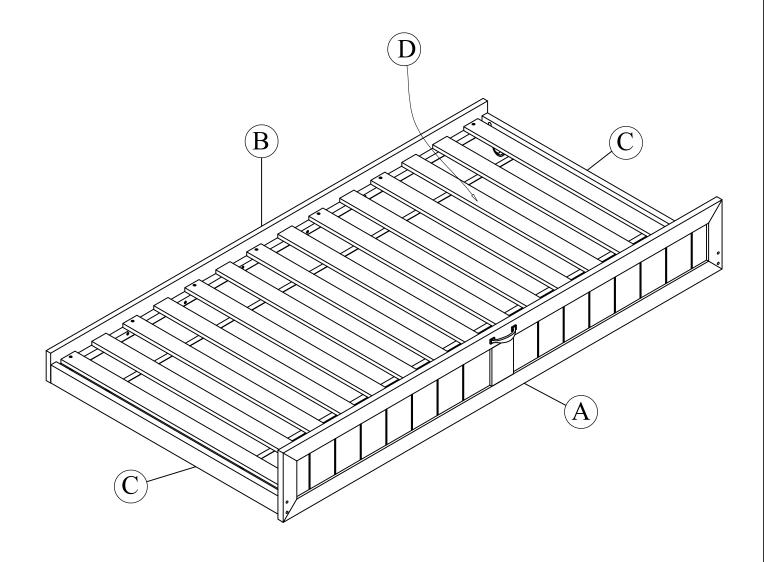


## STEP 1:


Firstly, please locate Side Rail (C) to Front (A), Back (B) by dowel (3).




- Fasten Side Rail (C) by (Bolt+nut) (1).

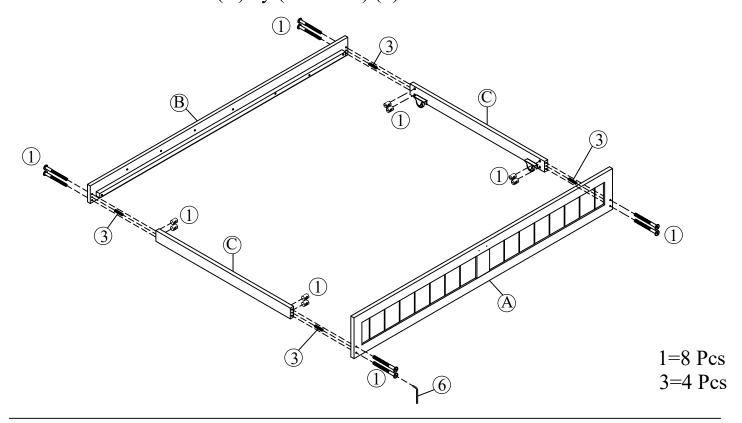


STEP 2: Please fasten slats (D) by screw (4) into corresponding holes.

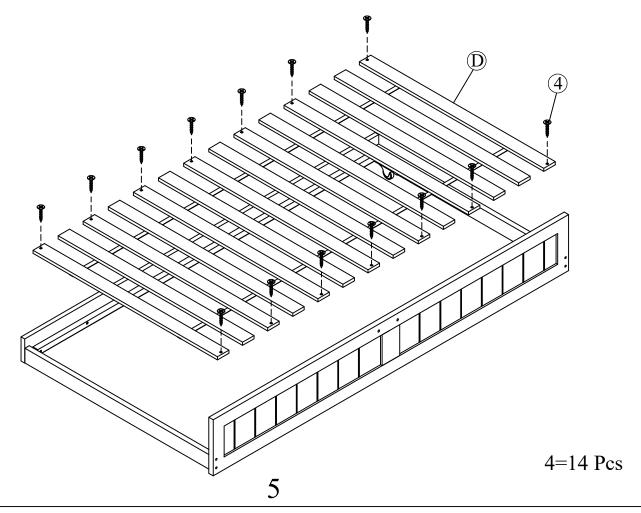

STEP 3: Assemble the handle (5) into Front (A)

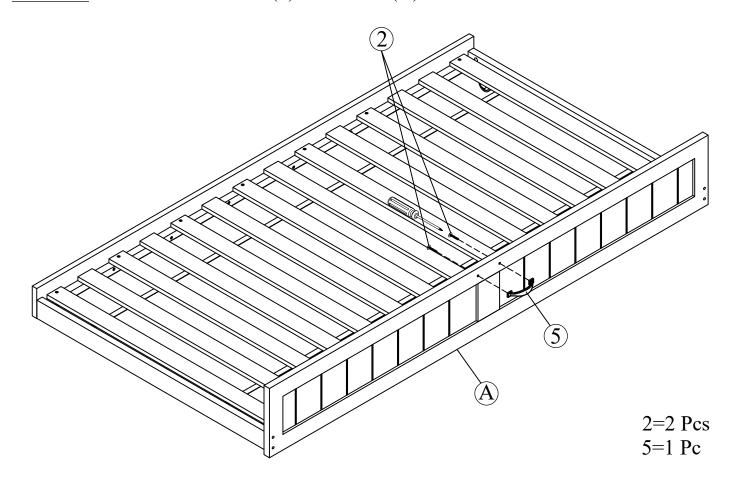

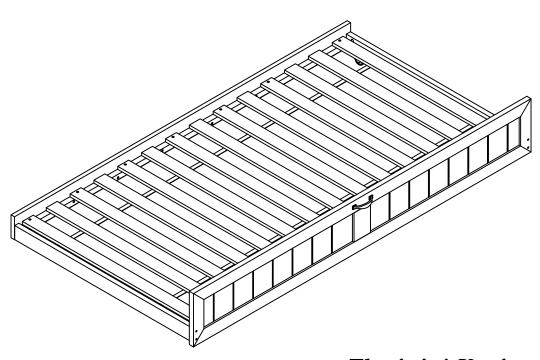

That's it! You've finished assembling your item. Thank you!