


STORAGE BED ASSEMBLY MANUAL

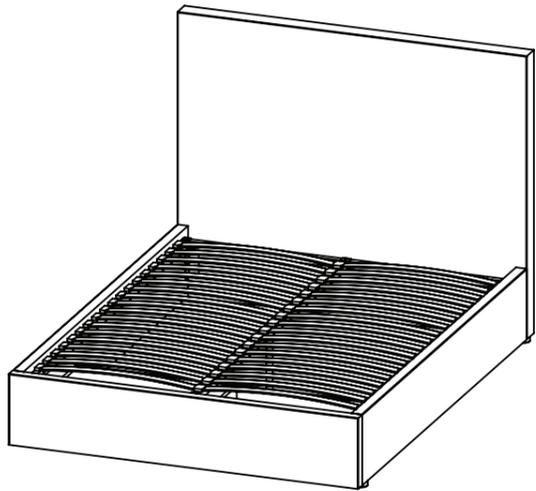


BED ASSEMBLY NOTES

- Proper assembly of this item requires Two adults.
- Unpack and check all contents before Assembly.
- To avoid damage to the fabric, please Assemble this item on a soft surface, Such as carpet or cardboard.

UNIVERSAL HEADBOARD BRACKET REMOVAL INSTRUCTIONS


STEP A.1

REMOVE THE UNIVERSAL MOUNTING BRACKETS (L,R) FROM THE UNDERSIDE OF THE HEADBOARD
REMOVE THE PRE-INSTALLED SCREWS FROM THE HEADBOARD

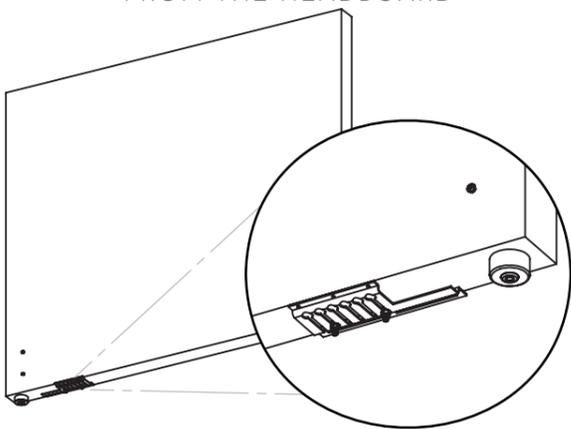


STEP A.2

USE THE SCREWS REMOVED FROM THE HEADBOARD IN STEP A.1 TO SECURE THE UNIVERSAL MOUNTING BRACKET TO THE HEADBOARD

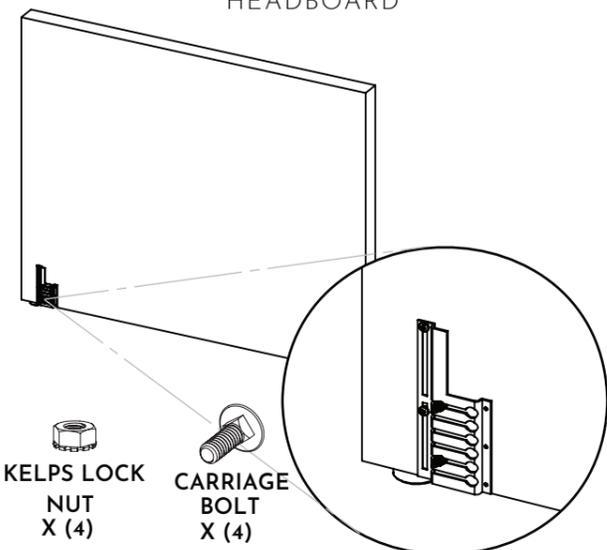


COMPONENTS (QTY)

*NOT TO SCALE

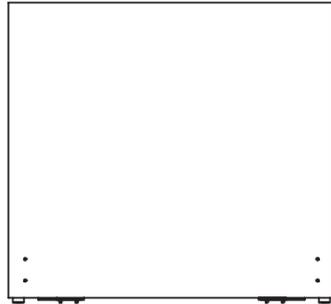


HEADBOARD x (1)

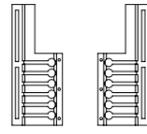


(L) (R)
UNIVERSAL MOUNTING BRACKETS (L, R) x (2) (ATTACHED TO HEADBOARD)

ALL OF THE COMPONENTS BELOW ARE INCLUDED FOR THE COMPLETE BED ASSEMBLY


LEFT RAIL x (1)



RIGHT RAIL x (1)



FOOT-BOARD x (1)

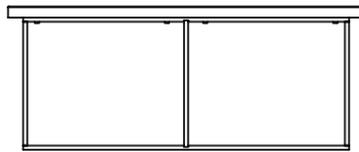

SPRUNG SLAT x (36)



SUPPORT LEG x (1)



PLASTIC CONNECTOR x (20)




CONNECTOR RAIL x (2)




CENTER RAIL x (1)

COMPLETE STORAGE BED ASSEMBLY INSTRUCTIONS

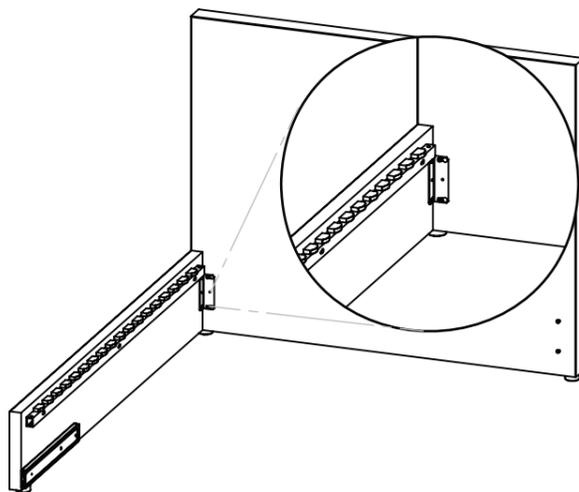

STEP #1

BEFORE ATTACHING SIDE RAILS, REMOVE UNIVERSAL BRACKET. ADD SCREWS BACK INTO THE SAME HOLES. ALIGN SCREWS TO THE BRACKETS AND HOOK THE SIDE RAILS ONTO THEM, THEN TIGHTEN SCREWS TO SECURE.

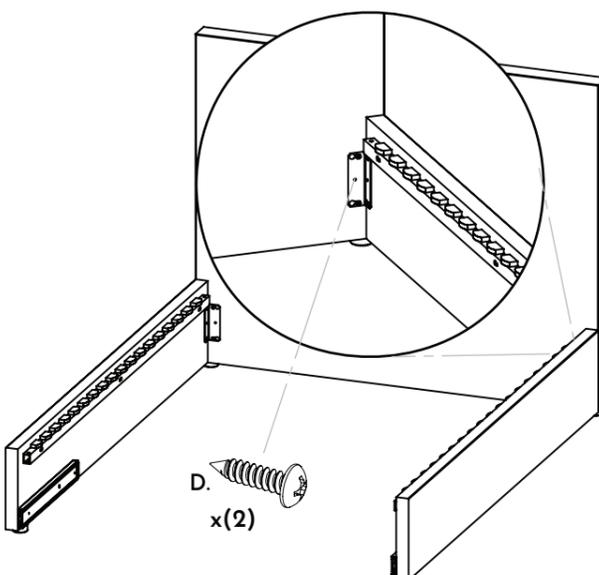

INCLUDED HARDWARE (QTY)

This hardware will be attached to the Universal Mounting Brackets under the headboard



KEEPS LOCK NUT x (4)



CARRIAGE BOLT x (4)

ALL OF THE HARDWARE BELOW IS INCLUDED FOR THE COMPLETE BED ASSEMBLY



A. PHILLIPS FLAT HEAD BOLT x (6)



B. MEMORY HEX NUT x (6)



E. PHILLIPS HEAD BOLT x (6)




D. PHILLIPS ROUND HEAD SCREW x (2)



C. RATCHET TOOL


RECOMMENDED TOOLS

- #2 PHILLIPS SCREWDRIVER
- POWER DRILL WITH A #2 PHILLIPS BIT
- RATCHET TOOL OR WRENCH

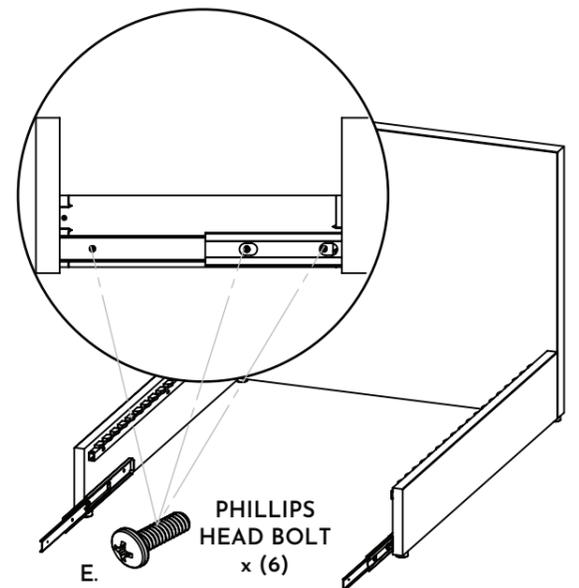

STEP #2

PULL THE DRAWER GLIDES OUT FROM THE SIDE RAILS AND ALIGN WITH THE PRE-DRILLED HOLES ON THE DRAWER. ATTACH GLIDES TO DRAWER WITH THE SIX 3/4" BOLTS PROVIDED.

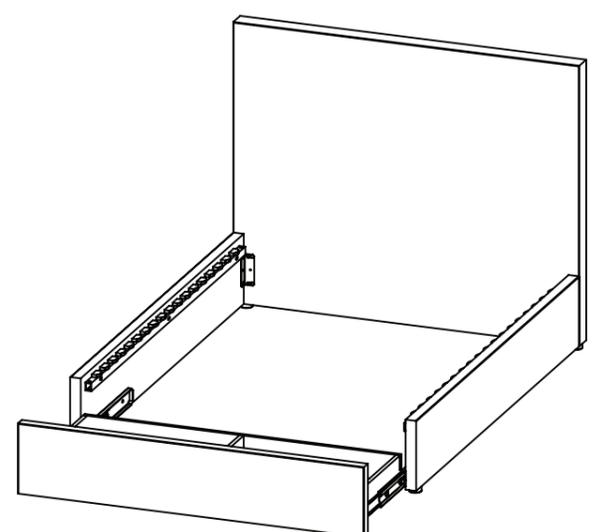


COMPLETE BED ASSEMBLY INSTRUCTIONS ON OPPOSITE PAGE →

STEP 3


• THE BED IS NOW READY FOR THE PLACEMENT OF THE CONNECTOR RAILS.

• PLACE EACH CONNECTOR RAIL AT THE ENDS OF THE BRACKETS PER-INSTALLED TO THE RIGHT AND LEFT RAILS, AND USE THE BOLTS & RATCHET PROVIDED TO TIGHTEN EACH END INTO PLACE.

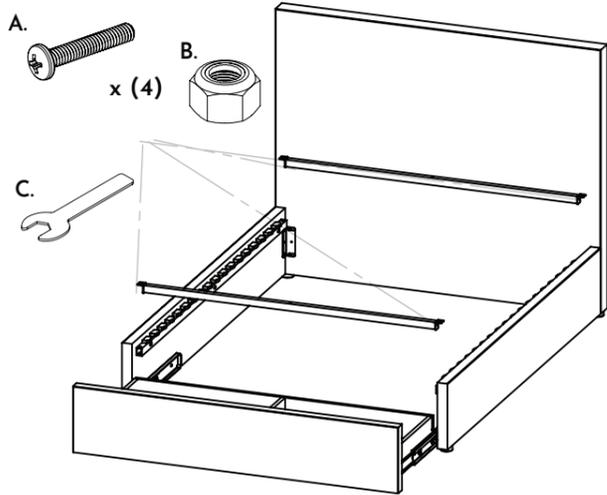


STEP 4

• ATTACH THE SUPPORT LEG TO THE CENTER RAIL BY SCREWING IT INTO THE BOTTOM OF THE CENTER RAIL.

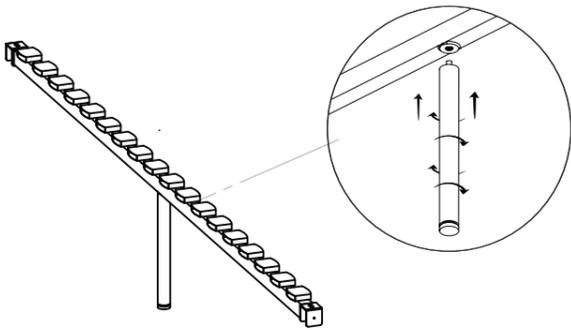

STEP 4 CONT.


• ALIGN AND PLACE THE CENTER RAIL ON TOP OF THE CONNECTOR RAILS

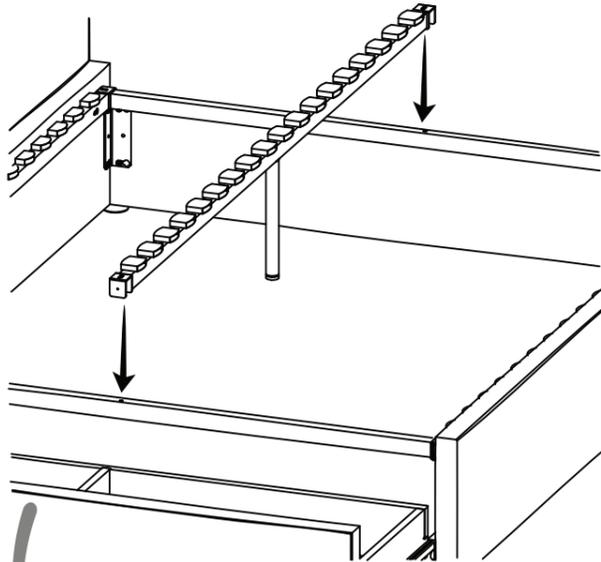

STEP 5


• ALIGN THE HOLES ON THE ENDS OF THE CENTER RAIL WITH THE CENTER HOLES ON THE CONNECTOR RAILS.

• USE THE RATCHET TOOL TO SECURE THE NUT FROM THE UNDERSIDE OF THE RAILS, AND SCREW THE BOLTS IN FROM THE TOP.

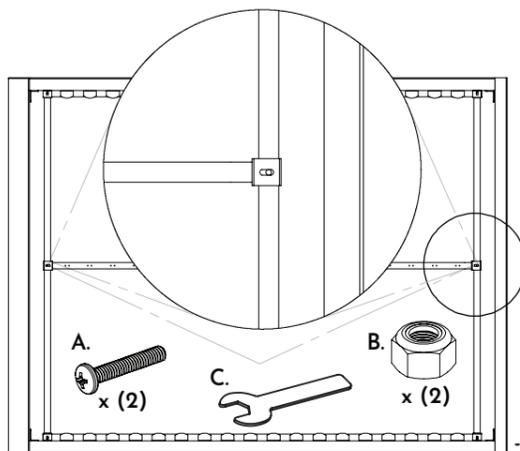


STEP 6

• NOW THAT THE CONNECTOR RAILS AND CENTER RAIL HAVE BEEN SECURED WE CAN MOVE ON TO THE PLACEMENT OF THE SPRUNG SLATS.

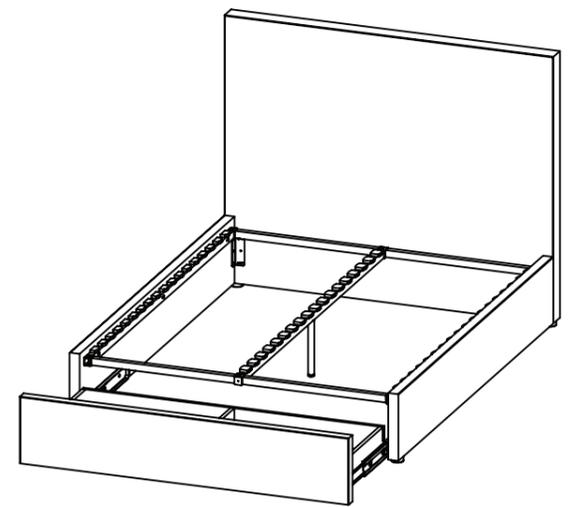


STEP 7

• FIT EACH END OF THE SPRUNG SLAT ASSEMBLY INTO THE PLASTIC CONNECTORS ATTACHED TO THE SIDE RAILS.

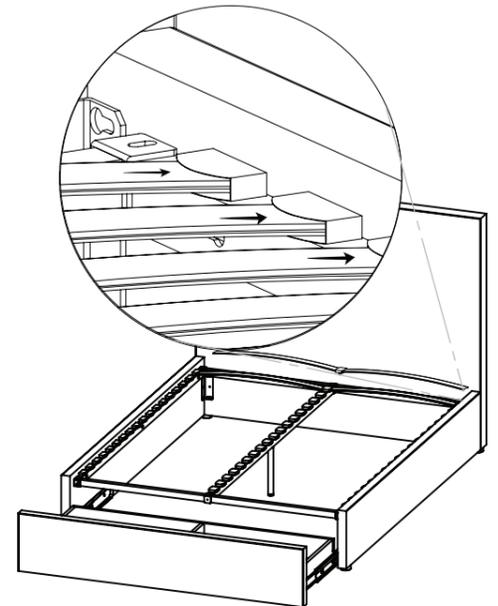


NOTE

• FOR STEPS 8 & 9 START FROM THE HEADBOARD END AND FINISH WITH THOSE CLOSEST TO THE FOOTBOARD.

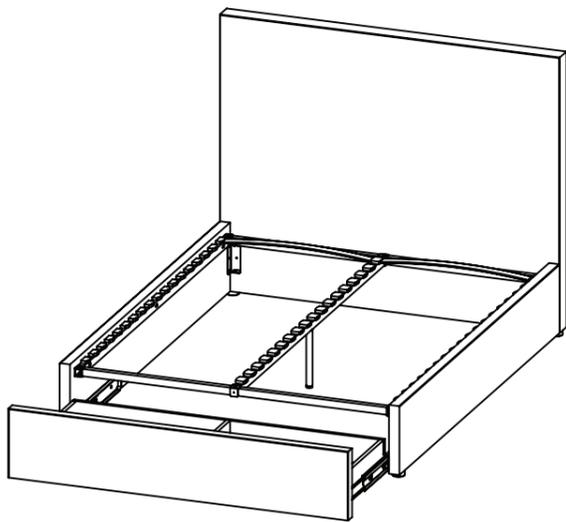


STEP 8

• FIT A SPRUNG SLAT INTO EACH END OF A PLASTIC CONNECTOR.

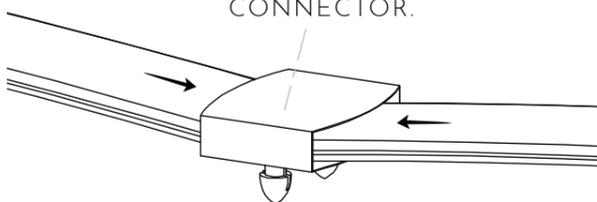

• THERE WILL BE A TOTAL OF 18 SETS OF SPRUNG SLATS AND PLASTIC CONNECTORS.

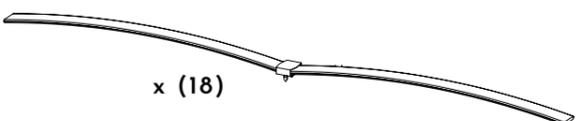


NOTE


MAKE SURE THE CURVATURE IS PLACED UPWARD, AS SHOWN IN THE IMAGE ABOVE

STEP 9

• ONCE EACH END OF THE SPRUNG SLAT ASSEMBLY IS IN ITS SLOT, ALIGN AND PRESS DOWN ON THE CENTER OF THE PLASTIC CONNECTOR TO SNAP IT IN PLACE.

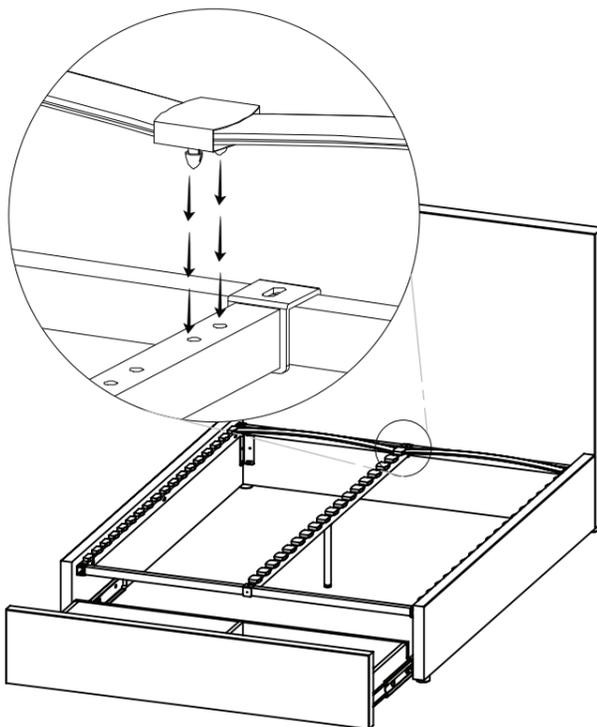


• REPEAT FOR ALL 36 SPRUNG SLAT ASSEMBLIES.

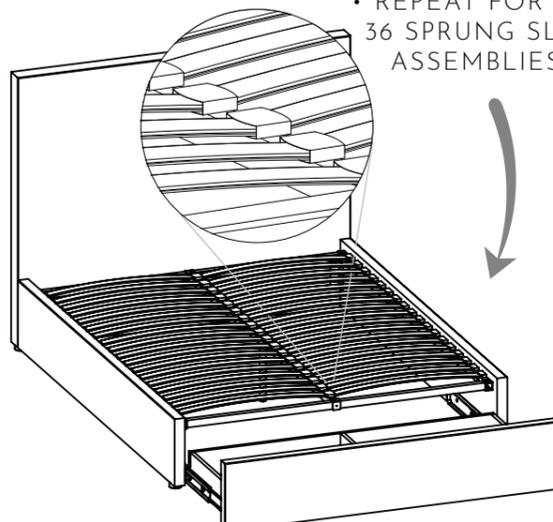


STEP 10

• AFTER SECURELY PLACING THE SPRUNG SLATS, THERE WILL BE A BIT OF TOLERANCE FOR THE SPRUNG SLAT TO EXTEND DURING USE.

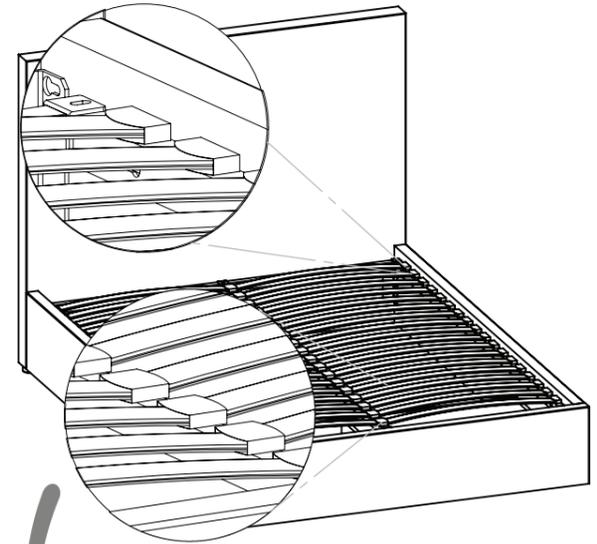

STEP 11

• THE ASSEMBLY OF THE BED SHOULD NOW BE COMPLETE.

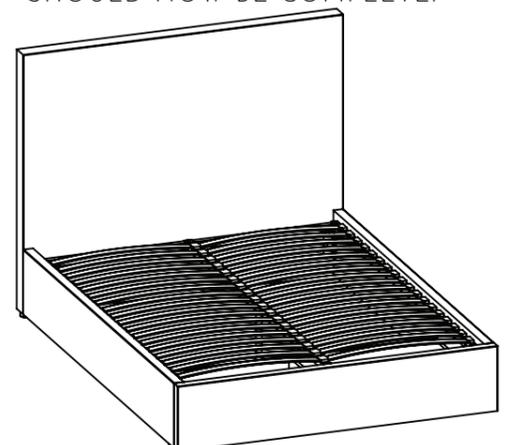

ENJOY YOUR FURNITURE!

Assembly questions? Email us at jlquality@jonathanlouis.net

V4 - 10/03/2022