







ASSEMBLY INSTRUCTIONS

**CROWNMARK
MODEL : B4510-4
CHEST**



**(BOX 1)
BOX OF CHEST**

NO	ITEM	QTY
A	CHEST 	1 pc
B	BUN FOOT 	4 pcs

**(BOX 1)
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC Bolt m6x50mm Blk 	4 pcs
2	Spring Washer 1/4" Blk 	4 pcs
3	Flat Washer 1/4"IDx13mmOD Blk 	4 pcs
4	Allen Key m-4x110mm With Ball Blk 	1 pc

STEP 1 : Pull the bottom drawer and take out the Bunfoot carton (B). Assemble the Bun Foot (B) with JCBC Bolt (1),Spring washer (2),Flatwasher (3) and securing with Allen Key (4) as shown.

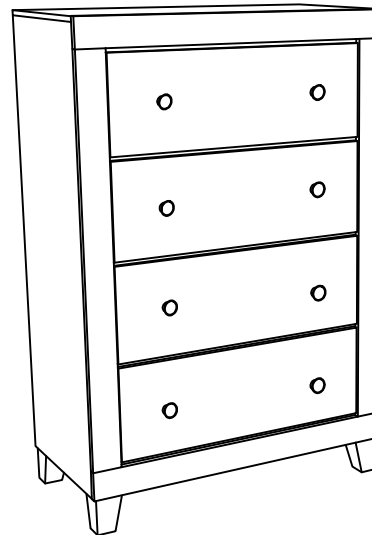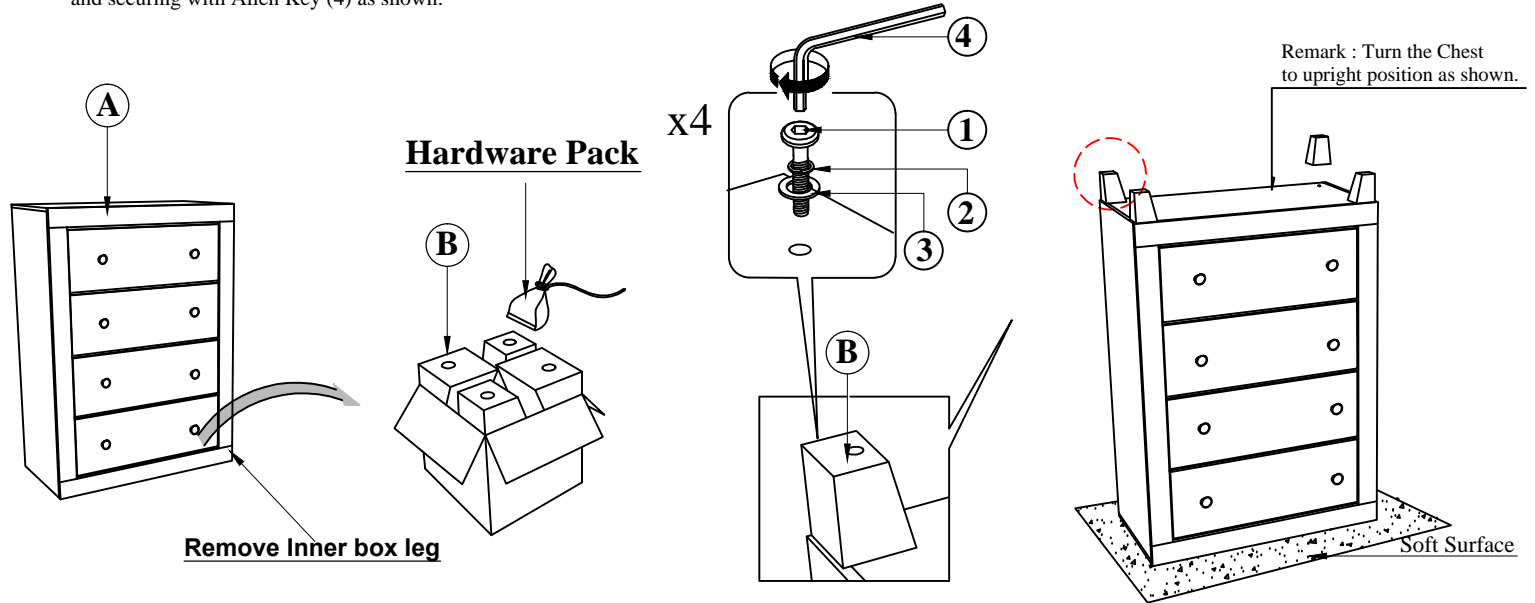

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.