PROGRESSIVE f u r n i t u r e

ASSEMBLY INSTRUCTIONS


T365-29 T366-29 Chairside Table

Thank you for purchasing this quality product. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all parts and compare with the parts list below. Do not tighten all screws / bolts until all completely assembled.

Parts List					
No.	Description	Q.ty			
Α	Side Frame (1Left/1Right)	2PCS			
В	Panel Top	1PC			
С	Upper Shelf	1PC			
D	Lower Shelf	1PC			
Е	Top Stretchers	2PCS			
F	Upper Stretcher	1PC			
G	Lower Stretchers	2PCS			

	Hardware List					
No.	Description	Sketch	Size	Q.ty		
1	Allen Key		M4	1 pc		
2	Allen Bolt		1/4 x 18mm	16pcs		
3	Spring Washer	0	Ø12 x 1/4 x 1mm	16pcs		
4	Flat Washer		Ø16 x 1/4 x 2mm	16pcs		
5	Screws	(C)mmmo>	#4 x 20mm	10pcs		

NOTE: YOU WILL ALSO NEED A PHILLIPS SCREWDRIVER (NOT PROVIDED)

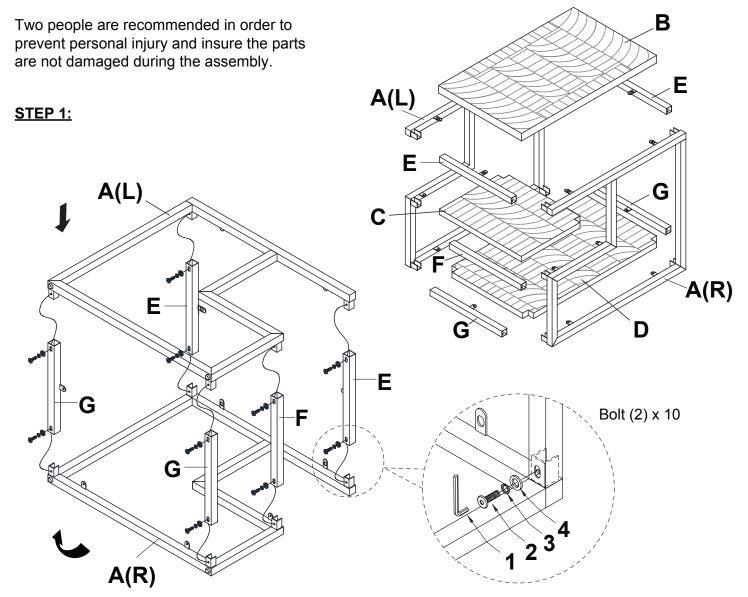


Cleaning instruction: Clean using soft cloth

Made in VietNam

ASSEMBLY INSTRUCTIONS




T365-29 T366-29 Chairside Table

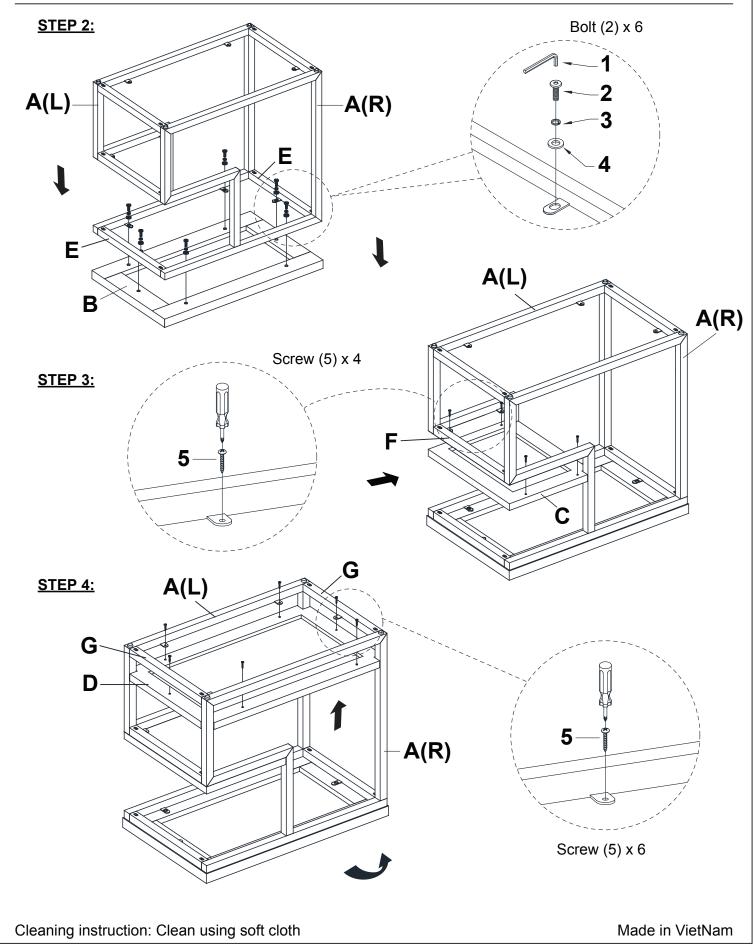

ASSEMBLY INSTRUCTIONS



T365-29 T366-29 Chairside Table

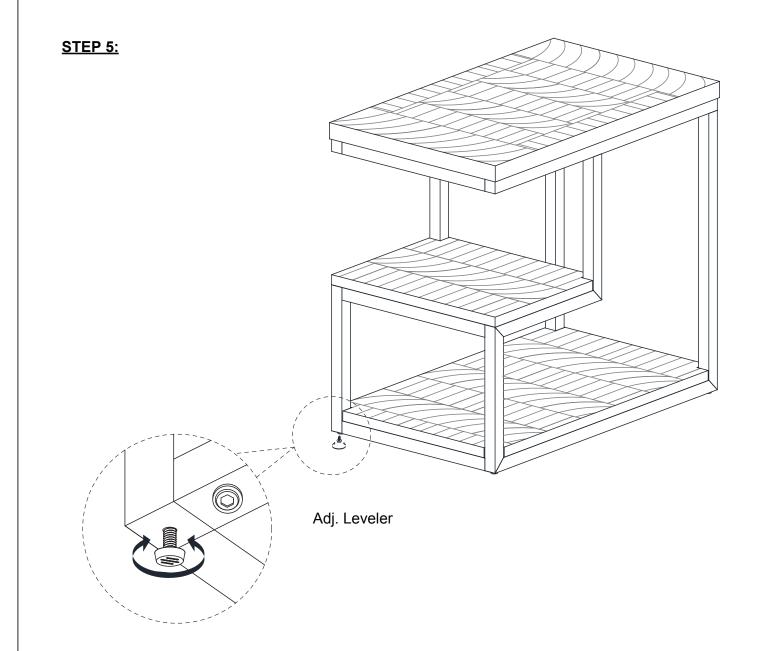

Cleaning instruction: Clean using soft cloth