

Paddy Barstool

Paddy

ASSEMBLY INSTRUCTIONS



Parts List

Label	Picture	Description	QTY
Α		Seat	1
В	T	Base	1

Hardware List

С	(jamman)	Screw 6x20 MM	2
D	Cummun	Screw 6x25 MM	2
E		Spanner (M5)	1

BEFORE BEGINNING ASSEMBLY:




Read instructions cover to cover

Have two adults on hand for assembly

Do NOT assemble on flooring or carpet. Assemble on a clean nonmarring surface (ex: packing foam)

Save all packaging until assembly is completed

Need a part? Call TOV at 516-888-3355 or email service@tovfurniture.com

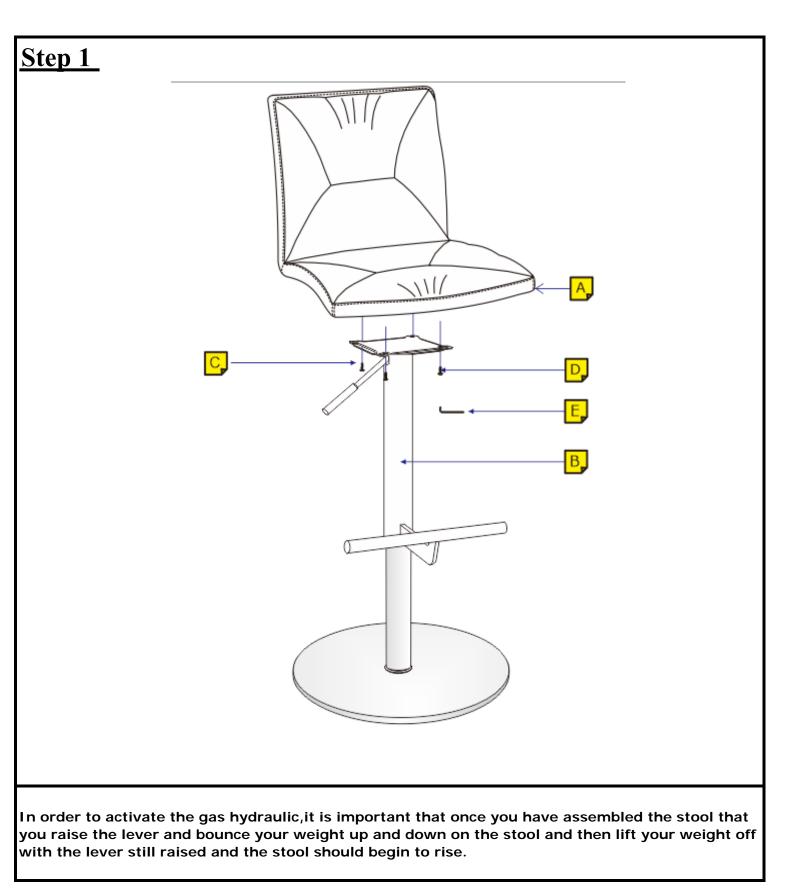

— CARE & MAINTENANCE Do not put hot items directly on furniture surface.



555

Do not clean furniture with harsh cleansers or polish.



Dust and pick up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.