Assembly Instruction for

UPHOLSTERY SIDE CHAIR D.5270.SC / D.5273.SC


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- We recommend that you should assemble this product with the assistance of another person; this
 will make assembly easier, and will help to eliminate damage the product or injury to persons
 during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts .
- 4. Please put all parts on a non abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

| PARTS LIST | | | | | | | |
|------------|-------------|------------------------------------|--------------------------------|-------|--|--|--|
| N <u>o</u> | PARTS DESC. | | CODE. | Q'TY. | | | |
| A | | BACK FRAME | PD.5270.SCBFR PD.5273.SCBFR | 1PC | | | |
| В | | SEAT | PD.5270.SCSEA PD.5273.SCSEA | 1PC | | | |
| С | | DARK LEFT & RIGHT FRONT LEGS | PD.5270.SCLEG | 2PCS | | | |


| | HARDWARE LIST | | | | | | |
|------------|---------------|----------------------|------------------|-------|--|--|--|
| N <u>o</u> | | HARDWARE DESC. | CODE. | Q'TY. | | | |
| 1 | 9 — | BOLT 1/4"x 50mm | | 7PCS | | | |
| 2 | 0 | BOLT 1/4"x 85mm | | 4PCS | | | |
| 3 | Ø | SPRING WASHER Ø5/16" | PD.5270. DTHW | 12PCS | | | |
| 4 | 0 | FLAT WASHER Ø5/16" | | 12PCS | | | |
| 5 | | ALLEN KEY | | 1PC | | | |

NOTE: Do not fully tighten any bolts until last step.

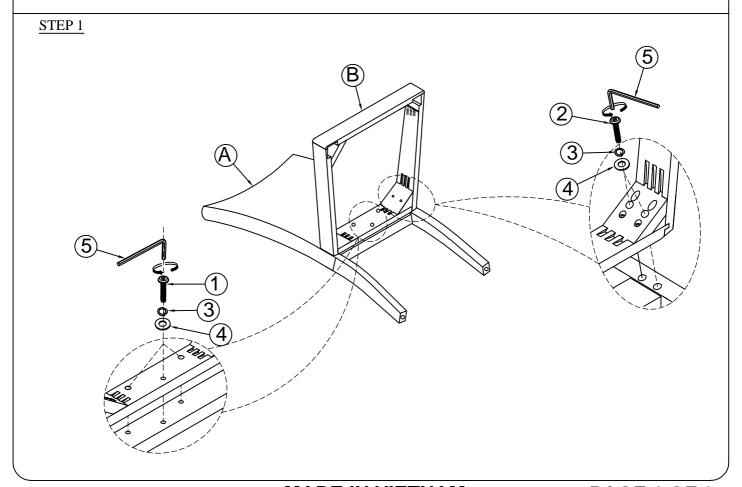

Assembly Instruction for

UPHOLSTERY SIDE CHAIR

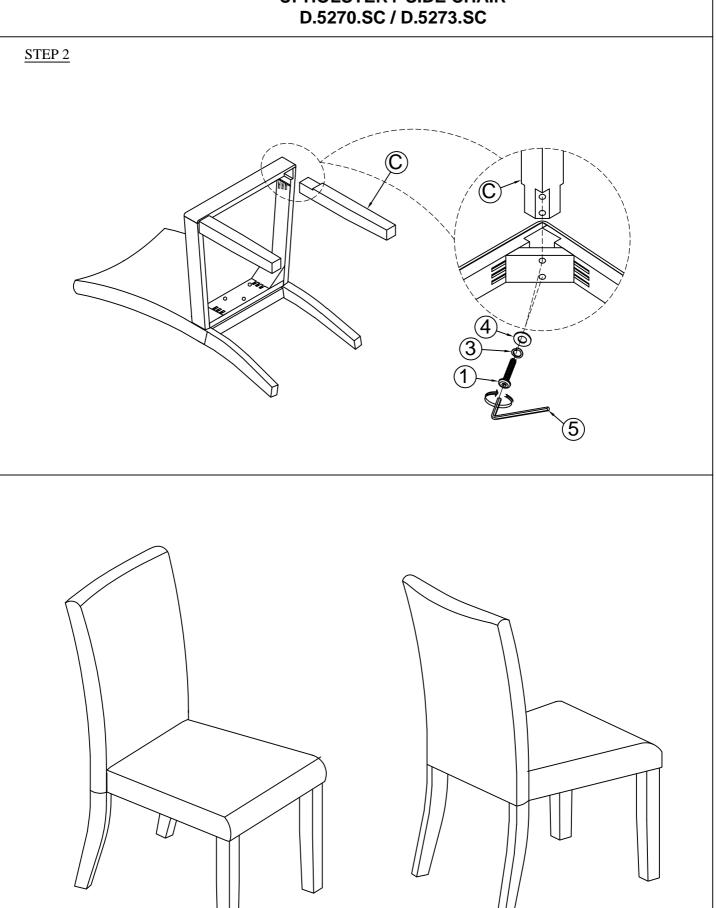

MADE IN VIETNAM

PAGE 2 OF 2

Completed Step