

LA JOLLA BROWN WICKER OUTDOOR DAYBED

GB025A-W-1 - GB025A-W-2-A - GB025A-W-3-A

352673 352674 352675

Assembly instructions:


Parts List:


REF	DESCRIPTION	IMAGE	QTY
Α	CANOPY 1		1
В	CANOPY 2		1
С	DAYBED BASE		1
D	CUSHION		1
Е	LARGE PILLOW		4
F	SMALL PILLOW		4

Hardware List:

REF	DESCRIPTION	IMAGE	QTY
H8	BOLT M6X50		9
Н3	ALLEN KEY		1
H4	PLASTIC CAP	9	9
H5	BOLT M6X20		2
H6	ALUMINUM SHEET	6	1
H7	FLAT WASHER 6x16x1	0	11

Diagram:

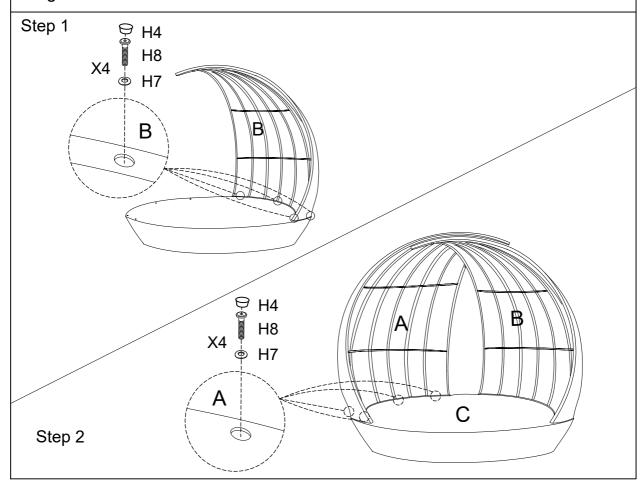

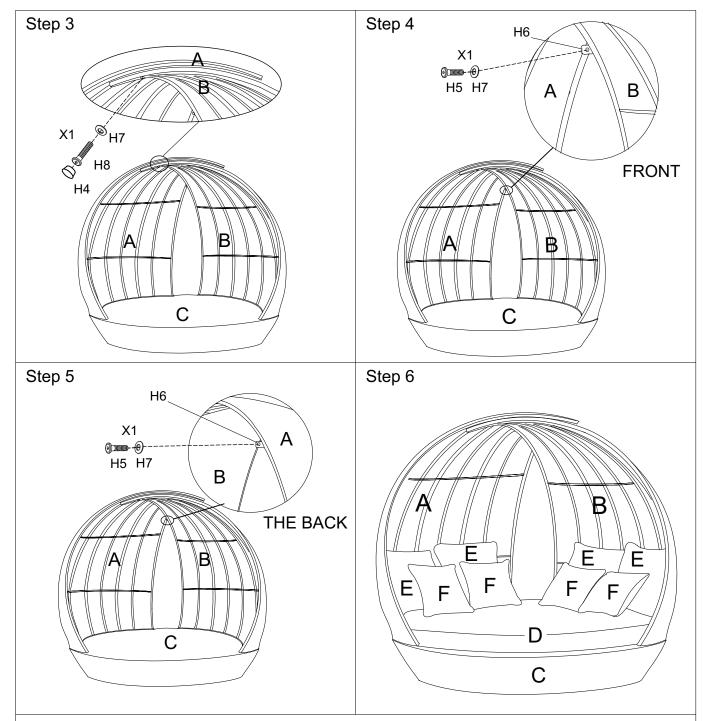

Assembly Steps:

Tip-Remove protective wrapping and lay all parts on floor. Make sure all parts packed in carton against attached parts list to make sure all parts are presented.

Step1: Align the right wheel (B) with the hole of the seat (C), use flat washer (H7), bolt (H8) and plastic cap (H4) as shown in the figure.

Step2: Align the left wheel (A) with the hole of the seat (C), use flat washer (H7), bolt (H8) and plastic cap (H4) as shown in the figure.

Step3: At the top joint of the left wheel (A) and the right wheel (B), use flat washer (H7), bolt (H8) and plastic cap (H4) as shown in the figure.

Step4: As shown in the figure, fix one end of the aluminum sheet (H6) to the middle position of the left wheel (A) with flat washer (H7), bolt (H5)

Step5: As shown in the figure, on the back of the product, fix the other end of the aluminum sheet (H6) to the middle position of the right wheel(B) with flat washer (H7), bolt (H5)

Step6: As shown in the figure, and place the cushion, back cushion on the sofa.

NOTE1: Do not fully tighten the bolts until the item is fully assembled.

NOTE2: It is user's responsibilkity to make sure all poarts are assembled and tightenedproperly and securely.

NOTE3: Red hangtag is Canopy 1 (Left) NOTE4: Yellow hangtag is Canopy 2 (Right)