


2. Locate the power cords C1 and C2 attached to the seat back and the power cords D1 and D2 at the rear of the seat base. Connect C1 to D1 and C2 to D2. C1 and D1 can be identified by the red tape.



C1 (Red Tape)


B

D2


D1 (Red Tape)

3. Locate the power cords E1 attached to the seat back and the power cords F1 at the rear of the seat base. Connect E1 to F1.


F1₽

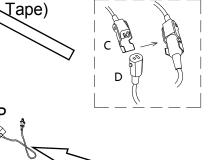

5. KD Wings (If applicable)
Insert the male KD Bracket into the slot of the female Bracket pressing firmly downward until the frame is tight.



4. The Transfomer P is attached to the bottom of rail and connect to DC Port located at the rear of arm.

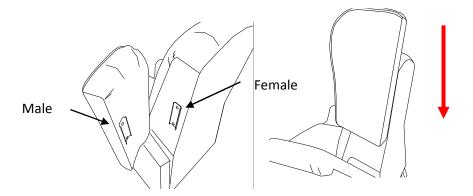

## Note:

Make sure all PLUGS are connected on the product before plugging power cord into power outlet. If not damage can occur.

C2 (C1 (Red Tape)

D2 (DIVI

The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.