

7602

 \triangleright











Furniture Tipping Restraint Kit inside white plastic bag (A)

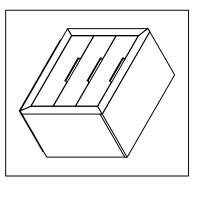

3-Drawer Nightstand Pierce Bedroom #22068

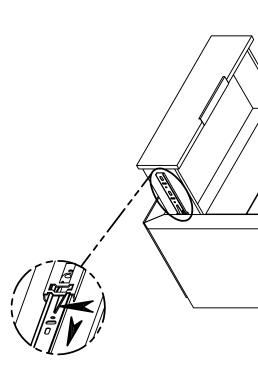

becomes necessary: To remove the drawer if it ever

A. Pull the drawer fully open so the black latch is visible in the inside channel of the guides.

Β.

- At the same time, pulling the drawer forward until the Release the latches by slides release. simultaneously pushing one lever up and the other down.
- To reinstall the drawers, carefully guide and push drawer back into Dresser. Open and close align the channels of the drawer fully a couple times to verity proper operation.

