





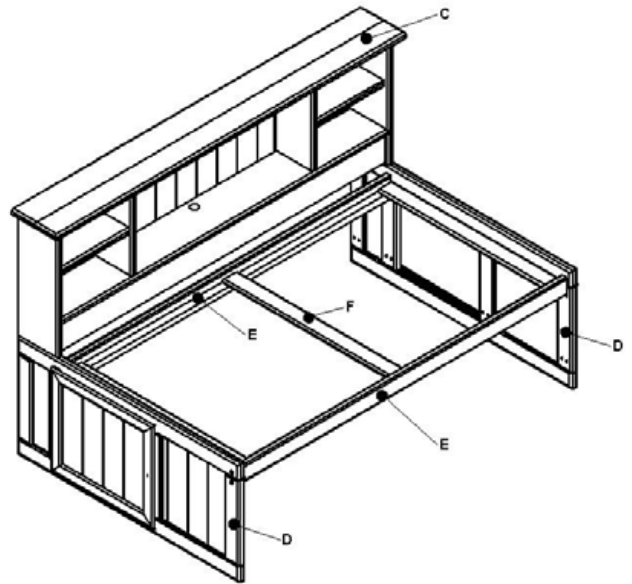
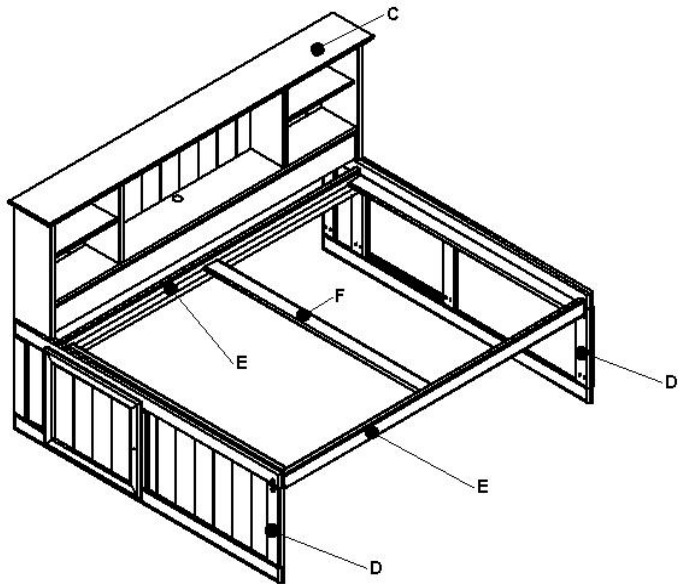


	MAS90: 5043-43255
	LG RM SVR/CHYN/TETON HB HRDW
QTY:	DESCRIPTION:
2	4" X 2" MENDING PLATES
2	710124 F 2" MENDING PLATES
16	#8 X 1" PHIL PAN SMS ZINC SCREWS
4	2 1/4" L BRACKET
16	#8 X 3/4" PHIL PAN SMS ZINC SCREWS
8	1/4 X 4 HEX LAG BLK
8	3/16 USS FL WASHER BLK
10	6 X 1 1/4 PHIL FLAT PARTICLE BOARD SCREW
<div>  <p>4" X 2" MENDING PLATE</p> </div> <div>  <p>2" MENDING PLATE</p> </div> <div>  <p>#8 X 1" PHIL PAN SMS ZINC SCREWS</p> </div> <div>  <p>2 1/4" "L" BRACKET</p> </div> <div>  <p>#8 X 3/4" PHIL PAN SMS ZINC SCREWS</p> </div>	

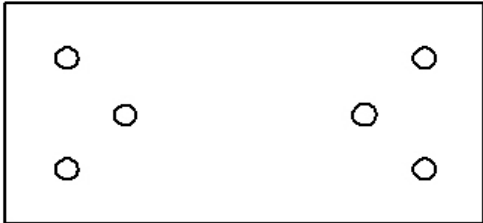

SEDONA CHEYENNE BED INSTRUCTIONS



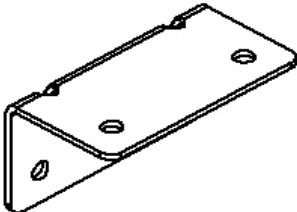PARTS LIST:

- 1) 8 -4 1/4" Lag Bolts
- 2) 8 -Black Steel Washers
- 3) 1 -Cheyenne Headboard (Bunkhouse or Sedona)
- 4) 1 - each Head End & Foot End Assembly (Twin or Full)
- 5) 2 -3 1/4" x 75" Mattress Rails w/Support Cleats
- 6) 3 -3 1/2" x 38 3/4" Mattress Supports for Twin or 3 1/2" x 53 3/4" Mattress Supports for Full
- 7) 10 -1 1/4" Wood Screws
- 8) 2-2"x4" Brackets, 2-1/2"x2" Straight brackets and 16-8x1" Screws

TOOLS REQUIRED:


- 1) 7/16" Wrench or Socket Wrench
- 2) Phillips Head Screwdriver

Recommended: Electric driver with 7/16" socket


Make sure you have all parts before beginning assembly. If you need a part, contact Living Spaces.

- 1) Attach two mattress rails(E) to headboard/footboard assemblies(D) with 8 lag bolts and 8 washers, and tighten.
- 2) Roll out slat kit and stretch from bed end to bed end. Secure with 4 wood screws on the ends of the outermost 2 slats, in each of the 4 corners of the bed. Center the 3 individual slats in the 3 gaps built into the slat kit, and secure with 6 wood screws on each end of the individual slats.
- 3) Lift Headboard onto bed ends as pictured on page 3. Secure headboard as described on page 3.
- 4) Slide Underdresser under front side of bed, and secure with L brackets as described on page 3.

HEADBOARD BRACKET PLACEMENT

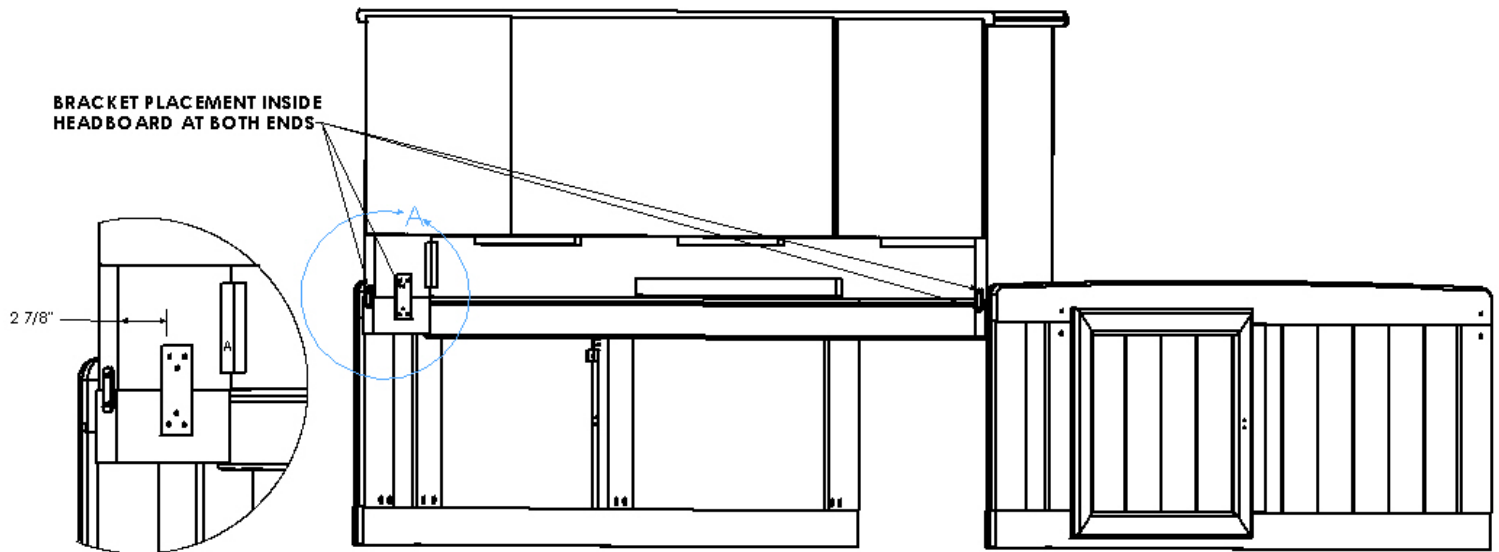

- 5) Attach one 1/2" x 2" straight bracket at each end of the headboard spanning the joint between the top rail of the ends (D) and the bottom edge of the headboard uprights.
- 6) Attach 2x4' bracket inside each end centered on the headboard ends

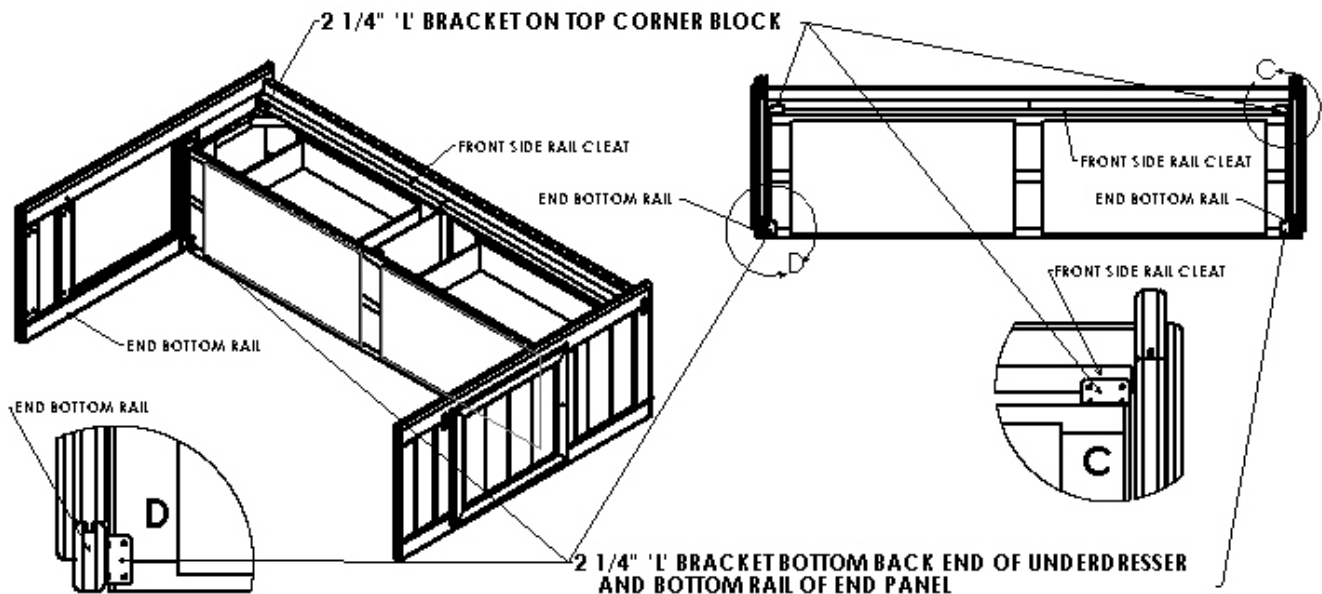


- 7) Attach 2 1/4" "L" brackets to the top of the underdresser corner blocks at each end and to the back of the front side rail cleat as shown in Detail C to the right above. Use two of the 2 1/4" brackets to attach the back, bottom ends of the underdresser to the bottom rail of each end panel as shown in Detail D to the left above.
- 8) Add mattress not to exceed 7" thick and sleep well!




LIVING SPACES

When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

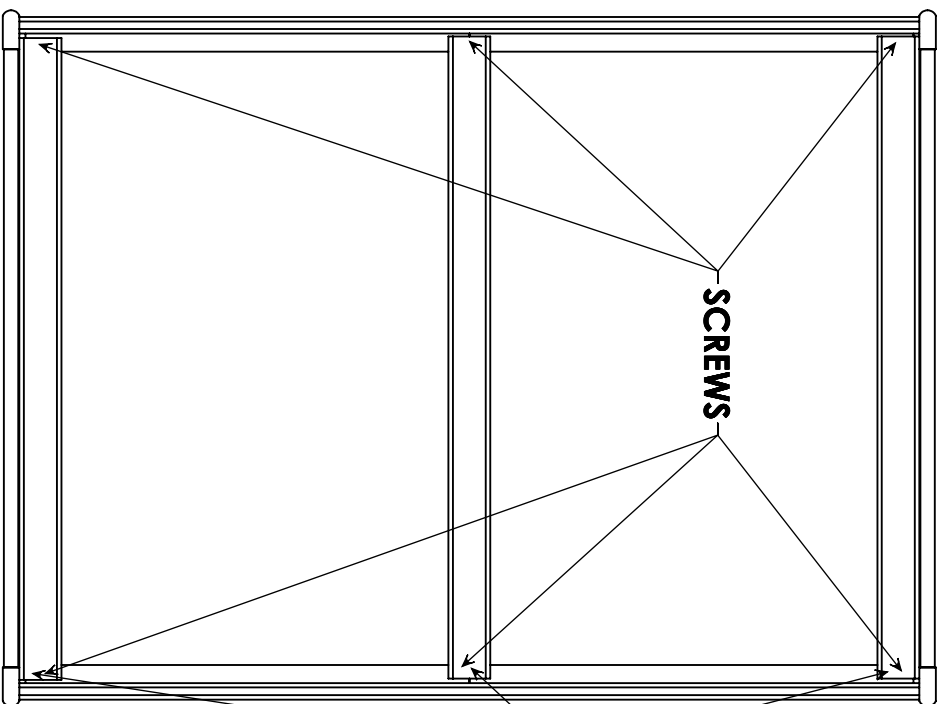

Installation of individual slats for use with Bunkie Board
(Bunkie Board sold separately)
See your retailer for purchase of Bunkie Board

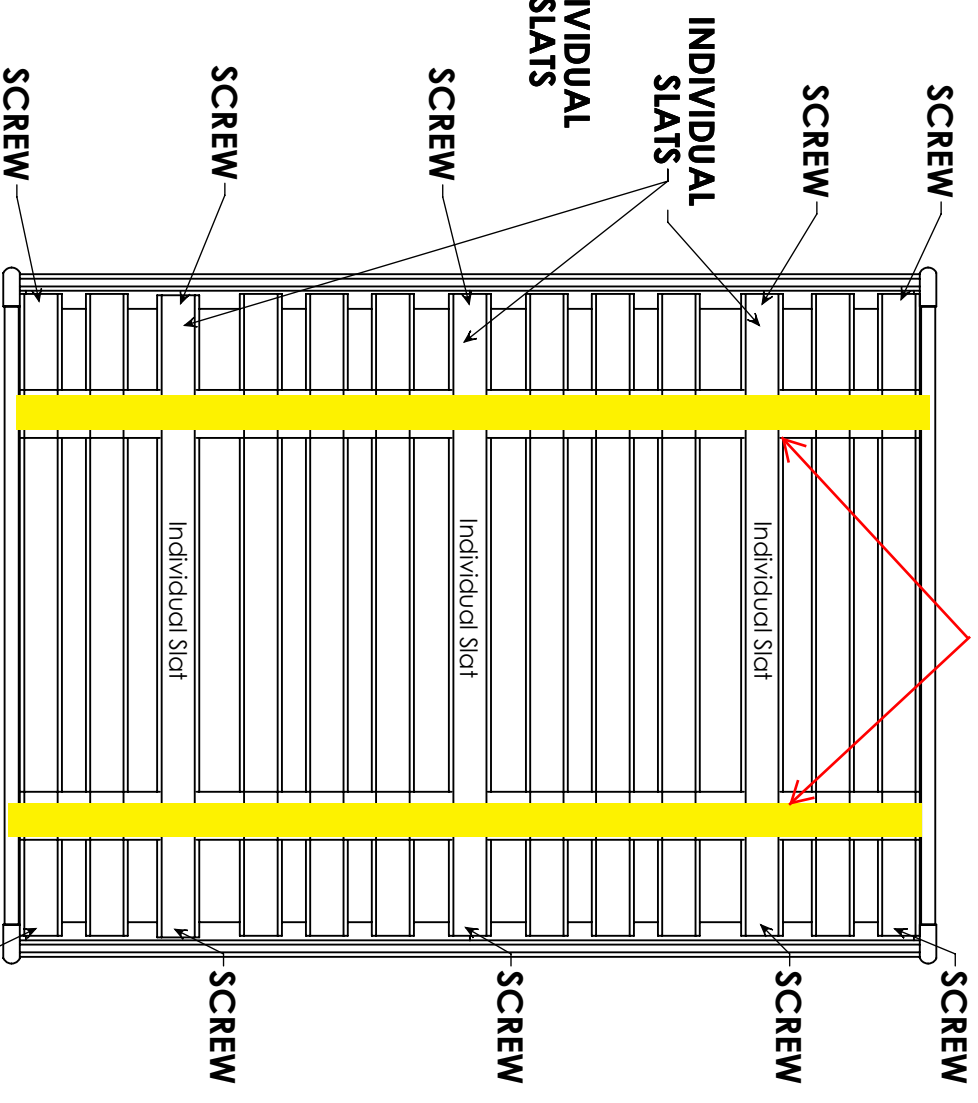

Installation of individual slats for use with Slot Roll
(Slot roll sold separately)
See your retailer for purchase of Slot Roll