

# PROGRESSIVE FURNITURE E707/E727 PIER TO BRIDGE

## Assembly Instructions

### Important!

This is at least a 2 person assembly,  
do not try and assemble alone.

#### PARTS LIST



(2x) Hex Wrench

1



(4x) 1/4"-20 Cap Nut

2



(4x) 1/4" x 7/8" Machine Screw

3

# PROGRESSIVE FURNITURE E707/E727 PIER TO BRIDGE

## Assembly Instructions

### Important!

This is at least a 2 person assembly,  
do not try and assemble alone.

#### PARTS LIST



(2x) Hex Wrench

1



(4x) 1/4"-20 Cap Nut

2



(4x) 1/4" x 7/8" Machine Screw

3

# PROGRESSIVE FURNITURE E707/E727 PIER TO BRIDGE

## Assembly Instructions

### Important!

This is at least a 2 person assembly,  
do not try and assemble alone.

#### PARTS LIST



(2x) Hex Wrench

1



(4x) 1/4"-20 Cap Nut

2



(4x) 1/4" x 7/8" Machine Screw

3

# PROGRESSIVE FURNITURE E707/E727 PIER TO BRIDGE

## Assembly Instructions

### Important!

This is at least a 2 person assembly,  
do not try and assemble alone.

#### PARTS LIST



(2x) Hex Wrench

1




(4x) 1/4"-20 Cap Nut

2



(4x) 1/4" x 7/8" Machine Screw

3

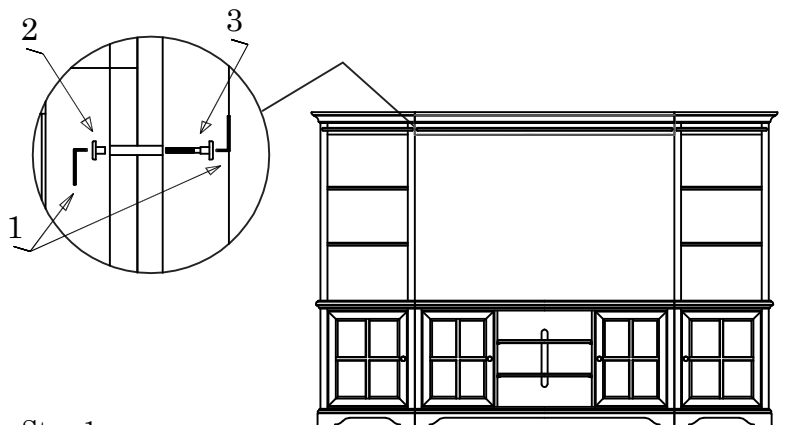

#### Step 1


Place Bridge between pier units

#### Step 2

While someone holds the Bridge, join the pier with the bridge using 4x Nut Caps (2) & 4x 7/8" Machine Screw (3)

#### Step 3

Tighten the screws using 2x Hex Wrench (1) in a Clock Wise Motion

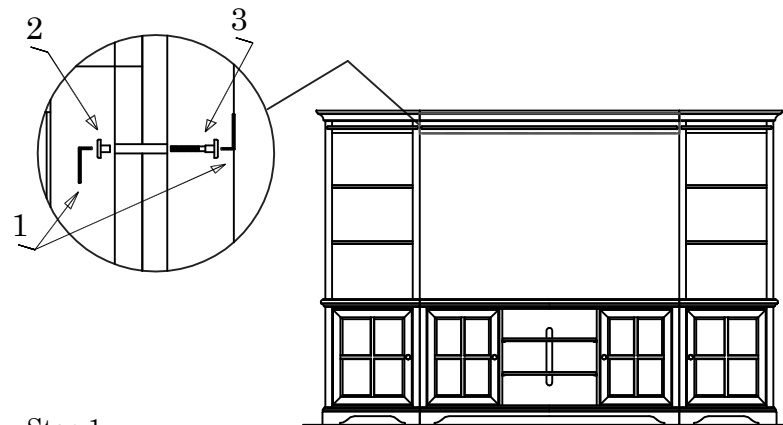

#### Step 1


Place Bridge between pier units

#### Step 2

While someone holds the Bridge, join the pier with the bridge using 4x Nut Caps (2) & 4x 7/8" Machine Screw (3)

#### Step 3

Tighten the screws using 2x Hex Wrench (1) in a Clock Wise Motion

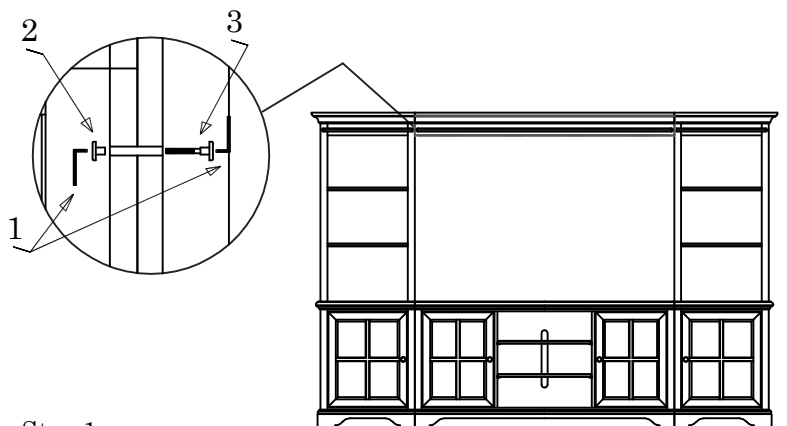

#### Step 1


Place Bridge between pier units

#### Step 2

While someone holds the Bridge, join the pier with the bridge using 4x Nut Caps (2) & 4x 7/8" Machine Screw (3)

#### Step 3

Tighten the screws using 2x Hex Wrench (1) in a Clock Wise Motion

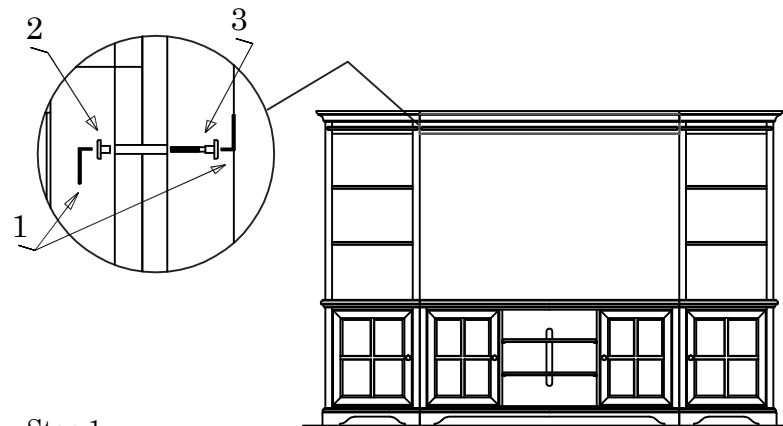

#### Step 1

Place Bridge between pier units

#### Step 2

While someone holds the Bridge, join the pier with the bridge using 4x Nut Caps (2) & 4x 7/8" Machine Screw (3)

#### Step 3

Tighten the screws using 2x Hex Wrench (1) in a Clock Wise Motion