

	<b>MAS90: 5043-43300</b>
	<b>MIRROR KIT</b>
<b><u>QTY:</u></b>	<b><u>DESCRIPTION:</u></b>
6	8 X 1-1/4 PH PAN ZINC
	

## PARTS LIST:

- A) 1 -Mirror
- B) 2 –Wooden Supports
- C) 8 – Zinc Screws

2 PERSONS AND 30 MINUTES



## TOOLS REQUIRED:

- 1) Phillips Head Screwdriver


4686 / 4826

## MIRRORS

**7030-00270**  
**7030-01001**

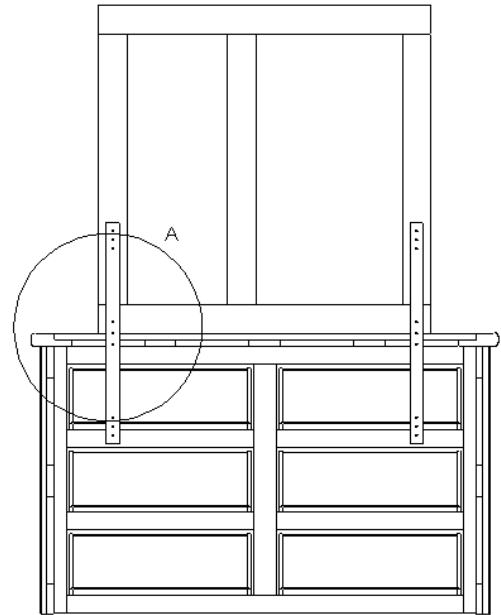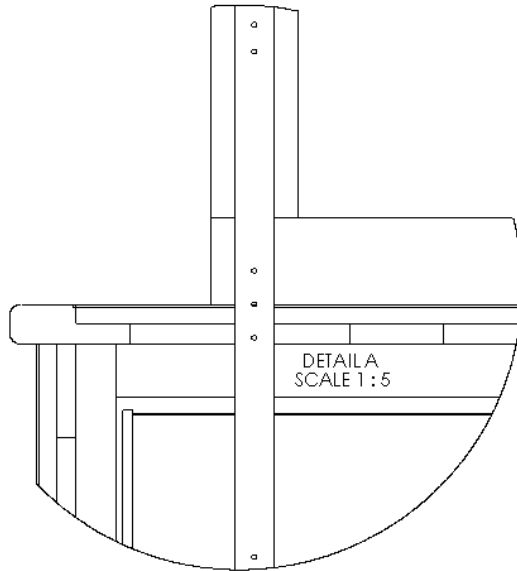

Detail B

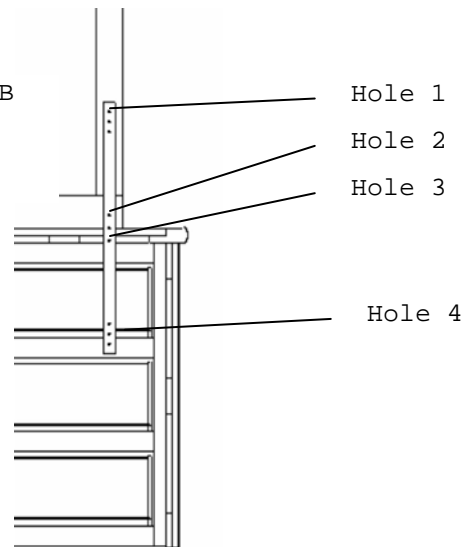

**NOTE:** Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

### ASSEMBLY INSTRUCTIONS:

- 1) Unattach and then reattach wooden brackets to the placement shown above using the pre-drilled holes in the mirror support. Use the center hole on the mirror support as a reference; do not use a screw in this hole. Use screws in holes 1 & 2 as shown in Detail B
- 2) Attach the assembled mirror and wooden brackets to case good using hole 3 and depending on the case good purchased using 1 of the 3 holes for hole 4 (Dresser, Chest etc.). To determine the hole to use push lightly on the case backing to feel the face frame horizontal behind it. When putting in the screw if you don't feel it pull together tightly then remove the screw and try a different hole.