


# Topanga Queen Assembly instructions

Hardware included in headboard carton to attach bed feet, wings and center support system.

| A        | C       | D     | E     | F       | I     | K       | R       | T       |
|----------|---------|-------|-------|---------|-------|---------|---------|---------|
| 9000     | 9000    | 0     | 0     |         |       | 9111    | 911     | 900     |
| Φ6*15 MM | Ф8*60ММ | Ф6 ММ | Ф8 ММ | H=10 CM | Ф8 ММ | Ф8*80ММ | Φ8*70MM | Ф6*20ММ |
| 8PCS     | 4PCS    | 12PCS | 14PCS | 4PCS    | 1PC   | 2PCS    | 8PCS    | 4PCS    |

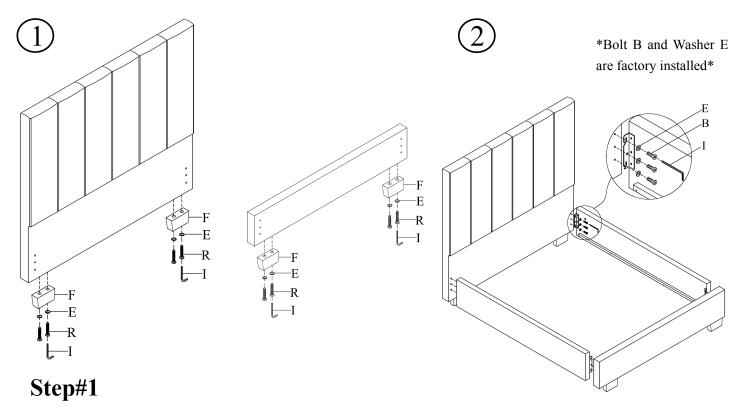

Retrieve bed feet from carton fastened behind the headboard.

Attach bed feet (F) to the headboard using Wrench (I), Bolt (R) and Washer (E).

Attach bed feet (F) to the footboard using Wrench (I), Bolt (R) and Washer (E).

# Step#2

Attach side rails to headboard using Wrench(I), Bolt (B) and Washer (E)(factory installed). Attach side rails to footboard using Wrench(I), Bolt (B) and Washer (E)(factory installed).


#### CONGRATULATIONS ON YOUR NEW BED PURCHASE



# Topanga Queen Assembly instructions

Hardware included in headboard carton to attach bed feet, wings and center support system.

| A        | C       | D     | E     | F       | I     | K       | R       | T       |
|----------|---------|-------|-------|---------|-------|---------|---------|---------|
| 9000     | 977     |       |       |         |       | 9111    | 971     | 9       |
| Ф6*15 ММ | Ф8*60ММ | Ф6 ММ | Ф8 ММ | H=10 CM | Ф8 ММ | Ф8*80ММ | Ф8*70ММ | Ф6*20ММ |
| 8PCS     | 4PCS    | 12PCS | 14PCS | 4PCS    | 1PC   | 2PCS    | 8PCS    | 4PCS    |

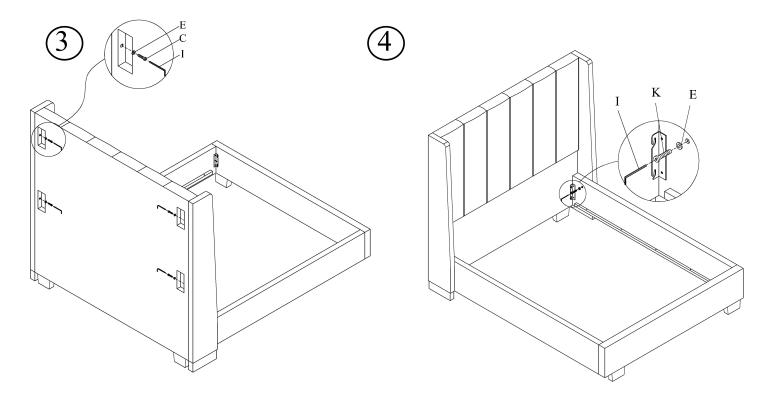

# Step#3

Attach wings through Headboard finger tight, using Wrench(I), Bolt (C) and Washer (E).

# Step#4


Attach wings through side rail finger tight, using Wrench(I), Bolt (K) and Washer (E) Tighten secure wings (6 bolts) with Allen wrench until snug.




# Topanga Queen Assembly instructions

Metal slats and center support legs are packed in side rails carton.

| G           | J                   |  |  |  |
|-------------|---------------------|--|--|--|
|             | 0                   |  |  |  |
| Metal Slats | Center support legs |  |  |  |
| 4PCS        | 4PCS                |  |  |  |

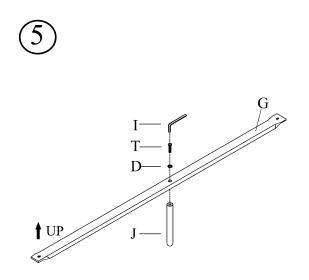

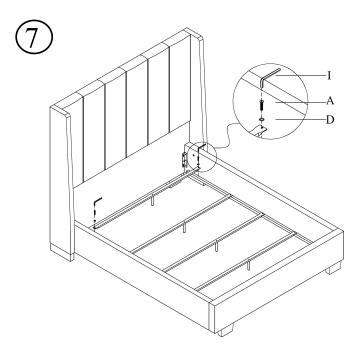

#### Step#5

Attach steel center support legs (J) to the Metal slat (G) using Wrench (I), Bolt (T) and Washer (D).

# Step#6

Move/place bed into final position in bedroom.

# Step#7

Attach steel slat support system to full length steel side support cleats(flat side facing up). Verify the metal slats are installed properly into support cleats and center support legs are perpendicular to the floor for full support.

#### CONGRATULATIONS ON YOUR NEW BED PURCHASE