
	Issue Department: Innovation Department	Date:	2017. 8. 9
	Product Specification	Author:	Louis
LIVING SPACES	1 rouder specification	JLDK.39.12.02	
	Product specification		
E	Edition:	3	
L	Page	1 of 6	


1. Product appearance (JLDK.39.12.02-1)




2. Product Dimensions (JLDK.39.12.02-2)

Dimension of control box:

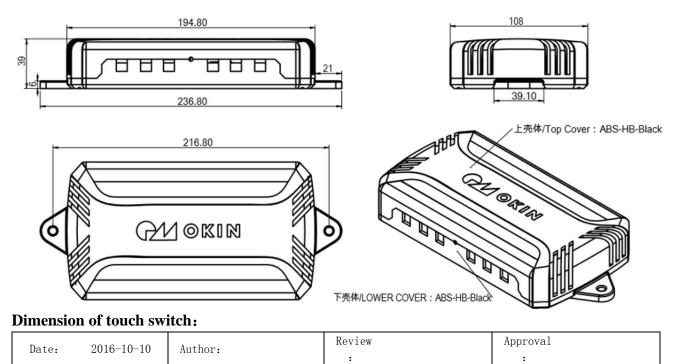

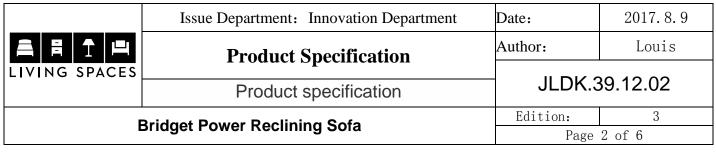

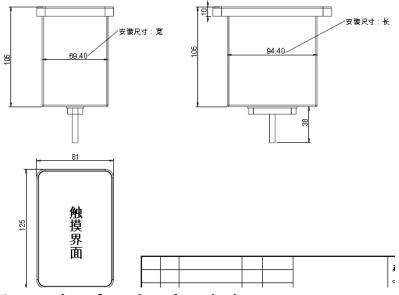


3. Product function description

3.1 Product function description

- 1、Double seats control
- 2、 Support customized memory position

3.2 Product instructions

3.2.2 Button description

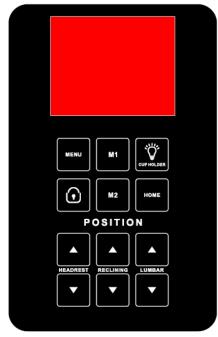


Date: 2016-10-10	Author:	Review	Approval
		:	:

	Issue Department: Innovation Department	Date:	2017. 8. 9
	Product Specification	Author:	Louis
LIVING SPACES	r router specification	JLDK.39.12.02	
	Product specification		
	Edition:	3	
Bridget Power Reclining Sofa		Page	3 of 6



1) Choose of left and right seat. Click once to switch the seat, LCD screen is also switch and display as follows; switch to the corresponding interface to control the corresponding seat actuator and cup holder;

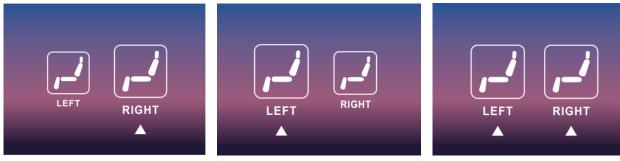

Right seat control

left seat control

double seats control

- 2) Cup holder control. Click it, turn on/off LED of cup holder;
 3) HOME

 Seat reset. Press and hold it, until seat moves to reset position;
- 4) Memory position 1. Press (shorter than 3S) and release, the seat moves to the preset position 1 (preset by the user);



5) Memory position 2. Press (shorter than 3S) and release, the seat moves to the preset position 12(preset by the user);



6) **HEADREST** : Head up. Press and hold it, head actuator moves up, stop when released;

Date:	2016-10-10	Author:	Review	Approval
			:	:

	Issue Department: Innovation Department	Date:	2017.8.9
	Product Specification	Author:	Louis
LIVING SPACES	i rouder opermention	JLDK.39.12.02	
	Product specification		
E	Edition:	3	
L	Page	4 of 6	



: Head down. Press and hold it, head actuator moves down, stop when

released;



8) **RECLINING**: Seat up. Press and hold it, the back of seat moves up, stop when

released;

9)



: Seat down. Press and hold it, the back of seat moves down, stop

when released;



10) LUMBAR : Lumber up. Press and hold it, the lumbar of seat moves up, stop

when released;




11) Lumber down. Press and hold it, the lumbar of seat moves down, stop when released;



12) Lock or unlock. Press and hold for about 3 seconds to hear a long "drip" sound. If no lock is added before, then it is locked; if it has been locked before, then it is unlocked; after locked, other button operations will not work.

3.2.3 Set of memory position

Date: 2016-10-10	Author:	Review	Approval	
2400.	2010 10 10		:	:

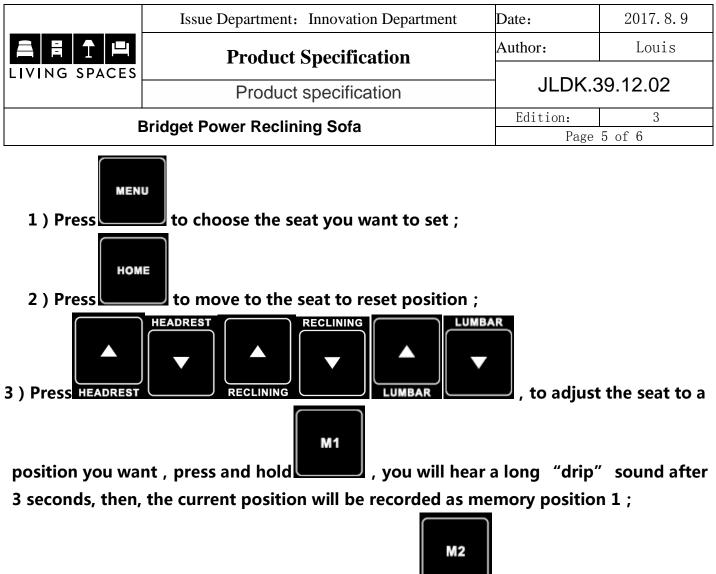



4) Repeat 2) 3), use the similar (press and hold) to set memory position 2;

Note: If you press and hold M1 or M2 and hear the first "drip", you will not release until you hear the second "drip" and then release it, you will restore the factory setting position of M1 or M2.

4、Electrical connection diagram

Date:	2016-10-10	Author:	Review	Approval
2000.		:	:	

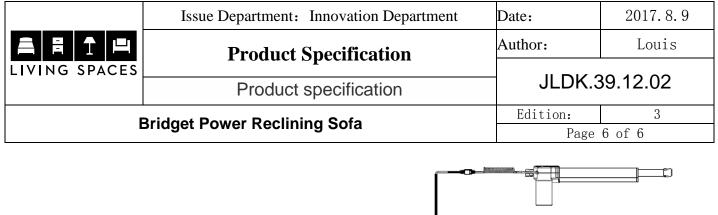

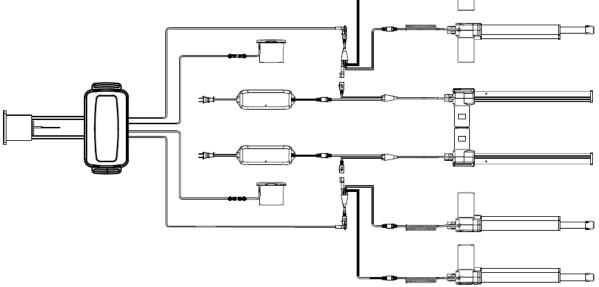

5 Maintenance

1. Non-waterproof products are not allowed to place in wet areas, and all the products cannot be washed by water, wipe by alcohol;

- 2. The appearance is plastic material with many components, which need to be handle with care and install correctly;
- 3. Comply with safety operation procedures. Do not overload the products, and eliminate unsafe factors in time;
- 4. Operating environment and temperature: under normal temperature;
- 5、Relative humidity: no more than 80%。

Date:	2016-10-10	Author:	Review	Approval
			:	: